

APP "ZSANYCAM" DOWNLOAD

Please scan the QR code as shown below :



For Android



For IOS



TECH SUPPORT
service@soocoo.cc

www.soocoo.cc

SOOCOO®
My Style is SOOCOO

Action Camera

Instruction Manual



C30R

Thank you for purchasing this product.
Please carefully read this product before use.

WHAT ARE INCLUDED



Waterproof Case

x1



Fixed Base

x1



Protective Door
(Not Waterproof)

x1



Back Clamp

x1



Back Clamp

x1



Adhesive Mounts

x1



Bicycle Stand

x1



Base

x1



Adapter

x1



Ribbons

x4



x1



x1



x1



x1

Switch Support 1

Switch Support 2

Switch Support 3

Fixed Base



3M Adhesive
Tapes

x2



Bandages

x2



Battery

x2



Wire Rope

x1



Data Line

x1



Remote Control

x1



Cleaning cloth

 
x1




User Manual

x1

PRODUCT STRUCTURE DIAGRAM

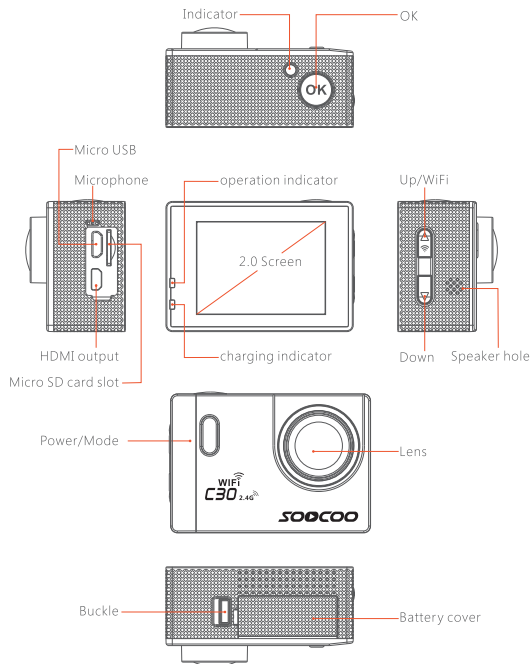

REMOTE CONTROL INSTRUCTIONS

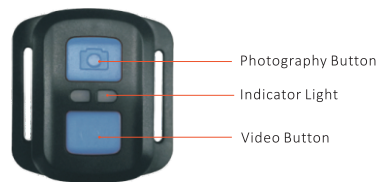 

You need to match it on the first time.

Match Method:

1. Press the photography button and video button on remote control simultaneously over 5s, release two buttons when red and blue lights flashing alternately, at the same time, it will search the surrounding camera to match automatically (camera is powered on).

The lamp off when Matching complete. If you press the button over 5s but the red and blue light still do not flash, that means the camera has been matched.

2. Short press the video button once, the camera will switch to video mode start to video model start / stop recording, and stop at video mode.

Long press the video button for 2s, the camera will off-screen, if you click any button, the screen will be light again.

3. Short press the photo button once, the camera will switch to photo mode and take a photo, and stop at photo mode, if you short press photo button during recording video, it will capture one photo. No function for a long press.

SPECIFICATION

Image Sensor	SONY IMX 078
Lens	170°/ 140°/ 110°/ 70° adjustable FOV
Language	English/Deutsch/ Français/ Español / Italiano/ Português/ 繁體中文/ 简体中文/ 日本語/ Русский/ Polski
Video Resolution	UHD P24/ QHD P30/ FHD P60/ FHD P30/ HD P120/ HD P60/ HD P30/ HD P30/ WVGA P30/ VGA P240/ VGA P30/ QVGA P30
LCD Display	2-inch HD screen
Video Compression Encoding	H.264
Image Resolution	20M(5120 x 3840) 16M(4608 x 3456) 12M(4032 x 3024) 10M(3648 x 2736) 8M(3264 x 2448) 5M(2592 x 1944) 3M(2048 x 1536) VGA(640 x 480)
Storage	Micro SDHC, class 10 or above. Support storage 8G to 64G (Micro SD card is not included)
Self Timer	Single/2s Timer/5s Timer /10s Timer
Time-lapse Record	1 Sec/5 Seconds
USB	Micro USB2.0
Power Source	5V/1A
Charging Time	About 4 hours
Battery Type/ Battery Capacity	3.7V 1050mAh li-ion



Video File Format	Mp4
Image File Format	JPEG
Longest Recording Time	Max 70min
Voice Prompt	YES(Video Start/ Video Stop/ Low Power/ Lack of storage)
Night Scene Mode	Yes
Diving Mode	Yes
Anti-shaking	Yes
Motion Detection	Yes
Burst Shooting	Yes
WIFI	Yes
Dimension	5.9×4.1×3.1cm(2.4×1.3×1.6in)

PRODUCT FEATURES



- BSI CMOS sensor
- Voice Prompt
- Adjustable FOV: 170°/ 140°/ 110°/ 70°
- Diving Mode
- Night Scene Mode
- Burst Mode
- Time-lapse shooting
- Support max 5X Zoom
- For extreme sports enthusiasts
- Waterproof, it can works 30m underwater
- 2.0" TFT display
- Detachable batteries, easy to replace battery, prolong camera's life
- It can record video during charging
- Support HDMI output
- Can be used as a web camera
- Support max 64G Micro SD card

- WiFi Function: Download the free App (ZSANYCAM) , user can control the camera or preview images and videos on your smart phone or tablet via WiFi connectivity.

  ASSEMBLY GUIDE

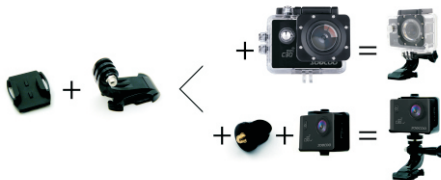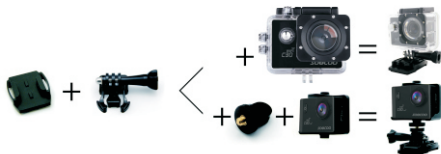


ASSEMBLY GUIDE

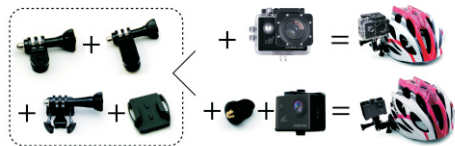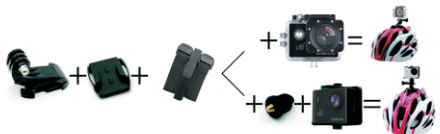  

THE CORRECT WAY TO OPEN THE WATERPROOF CASE

 Push the buckle on the top of the waterproof case and pull the hinge upward. If you only push the buckle without the action of pulling upward, you won't be able to open the case. The two actions must be performed simultaneously.

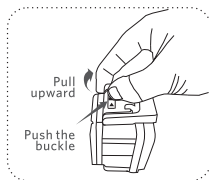

THE CORRECT WAY TO CLOSE THE WATERPROOF CASE

Press downward



CAMERA HOUSING PROTECTIVE DOORS

This camera housing comes with two protective doors, one is waterproof, the other is not waterproof.

 
Use this protective door when you need to protect the camera from water, dirt, sand and other environmental hazards.



This protective door provides better sound quality by allowing much sound reach the camera's microphone. It also can reduce wind noise when mounted on helmet, bike, and other fast-moving vehicles.



HOW TO CHANGE PROTECTIVE BACKDOOR



1. Open the the backdoor of the housing so that it hangs downwards.
2. Firmly pull the backdoor downwards until it snaps free from the main housing.
3. Line up the the replacement backdoor into the hinge.
4. Push upwards on the backdoor until it clicks into the hinge.

OPERATION GUIDE

1. Insert Micro SD card

 
This camera itself has no memory, you need to buy a Micro SD card(This camera support card storage 8G to 64G.) . To quest for better experience, please choose branded Micro SD card, and use class 10 or above card. Please format your card in a computer before inserting it into micro card slot.



2. Install Battery


Push and slide the buckle beside the battery cover.
Insert the battery into the battery slot according to the polarity on the battery.

Battery status display: please refer to the battery icon on the screen.

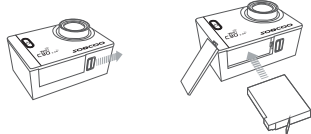

3. Charging

 Connect the camera to PC or adapter, car charger.
The red charging indicator light will light up during charging, and it takes approx 4 hours to fully charge it.

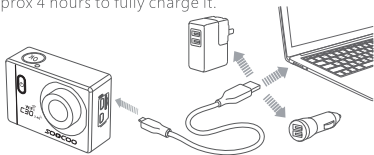

4. Power on/off

Short press the power button [P] to turn on the camera.
Long press the power button [P] for 3 seconds to turn off the camera.

5. Modes Switch

After power on the camera, short press the button [M] to switch modes among video, photo, playback, and setting.

Video mode

After you turn on the camera, the default mode is video mode, press [OK] button to start to record video, press the button again to stop recording video. Long press up/ down side buttons to zoom in or zoom out, the maximum can reach 5 times.


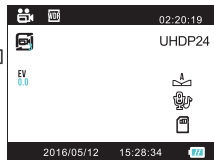 


Photo mode

 Switch to photo mode, press [OK] button to take a picture.
Press up/ down side buttons to zoom in or zoom out, the maximum can reach 5 times.

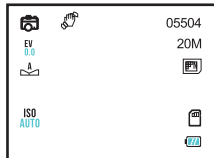


Playback mode

Switch to playback mode, you can preview images and replay videos on the screen of the camera. Press up/down buttons to choose items.
When you replay video, please press the [OK] button to replay it.



Setting mode

 
Press up/down side buttons to choose items.
Press the [OK] button to open the sub-menu or confirm.

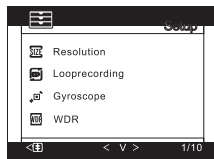

6. Menu Settings

ITEMS	DESCRIPTION
Resolution	You can choose from UHD P24/QHD P30/ FHD P60/FHD P30/HD P120/ HD P60/ HD P30/ HD P30/ WVGA P30/ VGA P240/ VGA P30/ QVGA P30.
Loop recording	You can choose this setting to adjust the video file size. If you select "Off", it will not stop recording video until power being used up, the recorded video is continuous; if you select " 3 minutes", the video will be segmented into many sections, each video file is 3 minutes.
Gyroscope	Built-in gyroscope to reduce video vibration.
WDR	Wide Dynamic Range(Abbreviated WDR). This setting can produce a greater dynamic range of luminosity.
Time-lapse Record	You can choose items among 1 Sec/5 Seconds. For example, if you choose 5 seconds, it will shoot a picture every 5 seconds under video modes. Some classic subject of time lapse record: cloudscape and celestial motion, plants growing and flower opening, fruit rotting and expiring, evolution of a construction project.
Motion Detection	Turn on this setting, under video mode, if some action is detected within 1.5 meters, it will automatically record a video, the video file size is 10 seconds. If no action is detected within 10 seconds, it will automatically stop recording video.
Record Audio	You can select selections between "Off" or "On". If you switch to "Off", the video will have no sound.

Date Stamp	If you switch it to "On", date stamp will appear at the bottom of photos or videos when you are taking pictures or recording videos.
Angle	Five angles of field-of-view: 170°/ 140°/ 110°/ 70°. Different angles will produce different distortion effect.
Voice Prompt	If you switch it to "On", it will remind you the status of the camera: Start Record/ Stop Record/ Low Power/lack of storage
Diving Mode	When using this camera underwater, switch it to "On", it will compensate red light to get clearer image.
Night Scene	When using this camera at night, switch it to "On" to get clearer image.
Self Timer	You can choose items among Single / 2s Timer/ 5s Timer/ 10s Timer. This setting allows you to delay taking pictures. For example, if you choose 5s Timer, under photo mode, press the shutter button, 5 seconds later, it will take a picture.
Image Size	You can choose the image sizes among 20M 5120 x 3840, 16M 4608 x 3456, 12M 4032 x 3024, 10M 3648 x 2736, 8M 3264 x 2448, 5M 2592 x 1944, 3M 2048 x 1536, VGA 640 x 480.
Burst	Under photo mode, you can press once the shutter button to continuously shoot 3 pictures. You can also switch it to "Off", it will shoot only one picture when you press once the shutter button.
Quality	You can choose image quality levels among Fine/ Normal/ Economy.
Frequency	50Hz and 60Hz.
Default Setting	Reset to factory settings.
Version	The version information of the product.

Sharpness	You can adjust the image sharpness, three options: High/ Normal/ Medium.
White Balance	You can choose options among Auto/ Daylight/ Cloudy/ Tungsten/ Fluorescent.
Color	You can choose options among Color/ Black & White/ Sepia.
ISO	High ISO can improve the image clearness at night. You can choose options among Auto/ 100/ 200/ 400.
Exposure Value	You can choose options among +2, +1.7, +1.3, +1.0, +0.7, +0.3, +0.0, -0.3, -0.7, -1.0, -1.3, -1.7, -2.0.
Anti-shaking	Switch it to "On", it will detect shaking and provide a more stable and clear image.
Delete	You can delete unwanted pictures or videos.
Protect	Pictures or videos can not be deleted under protection mode.
Wifi	Open the WiFi function via the menu setting.
WIFISSID	You can set the camera's WiFi name.
WIFI Password	You can set the camera's WiFi password.
Date/ Time	Press up/down side buttons to roll numbers; Press OK to confirm and switch options among Year(YY)/ Month(MM)/ Date(DD)/ Hour/ Minute/ Second. You can also set the date formats: YY/MM/DD, DD/MM/YY, MM/DD/YY. Press power/mode button  to exit.
Format	Format the Micro SD card, all data in the card will be deleted.

Auto Power off	You can choose Off 1Minute/ 3 Minutes/ 5 Minutes/ 10 minutes. For example, if you select 5 Minutes, the product will power off automatically if there is no operation within 5 minutes.
Beep Sound	On or Off
Car ACC	If you select "On", it will enter into dashcam mode to record traffic incidents. Connect it to car charger cable, start your car, it will automatically record video.
Language	Ten languages available: English/ French/ Spanish/ Portuguese/ Germany/ Italian/ Simplified Chinese/ Traditional Chinese/ Russian/ Japanese/ Polish.
TV Mode	NTSC: National Television Systems Committee; PAL: Phase-Alternative Line. When you connect the camera to TV via Micro HDMI cable, you need to select relevant TV mode. Different countries adopt different TV modes. For America/ Canada/ Japan, select NTSC; For Chinese/ Germany/ the UK / Spanish/ Italian/ Australia, select PAL. For more countries, please consult the local authorities.
TV	Open this function when it is connected to Micro HDMI, the screen light will goes out and the camera's screen will be transferred to TV's.
Screen Save	Off/ 30 Seconds/ 1 Minute/ 3 Minutes. This setting aims to save power. For example, if you select 30 seconds, the screen light will goes out if there is no operation within 30 seconds, press any button activate it. If you select "Off", the screen light will not goes out.
OSD mode	An on-screen display(abbreviated OSD) is an image superimposed on a screen picture, used to display information such as battery status, time, resolution, etc.

7. Replay


Display on PC

Connect the camera to PC.

Download files to PC.

Replay images and videos on PC.

Replay on Camera

Press power button  , Switch to playback mode, you can preview images and replay videos on the screen of the camera. Press up/down side buttons to choose items. When you replay video, please press the "OK" button to replay it.

WiFi Connection

Please download and install the "ZSANYCAM" App to your smart phone or tablet before using this function.

For Android users: download the App from Google Play or scan the QR code at the back of the user manual.

For IOS users: download the App from Apple Store or scan the QR code at the back of the user manual.

Switch to video mode, short press the up/WiFi side button, "SPORT DV" will display on the screen.

Open WiFi function on your smart phone, and find "SPORT DV" and connect it by entering the original password: 12345678.

Now, you can open the pre-installed App "ZSANYCAM" to control your camera or preview images on your smart phone, you can also download files from camera to your smart phone. (Note: When the camera is connected to phone, your phone's internet connection is unavailable. If you choose to use phone to control the camera, you can not use camera buttons to control the camera.)

Disconnect WiFi: Short press the up/WiFi button again to disconnect WiFi.

Set WiFi Password: You can reset the WiFi password in the setting mode.

Switch to setting mode.

Find out "WifiPass Word", press up/ down side buttons to roll numbers, press "OK" button to confirm and switch to next number.

CAUTIONS & WARNINGS

1. The settings and date/time don't need to adjust when you replace the battery in 3 seconds; Or, you can charge the camera by the USB cable instead of replacing the battery.
2. You can use certified Micro SD card up to 64GB and format it before use.
3. It is not allowed insert/pull out memory card when you turn on the sports camera
4. It can record about 70mins at 1080p with the 1050mAh rechargeable battery(recording time depends on the mode and resolution you selected).
5. When this camera is stuck for wrong operation, please remove battery and insert the battery to restart it.
6. Please do not drop down or crash this product.
7. Please keep this product away from magnet, fire and other heat sources.
8. Please use branded Micro SD card, class 6 or above, at least 8G storage.
9. Do not use this product in extreme temperature.
10. Please unplug the cable if found smoking, wired smells, etc during charging.
11. When charging, please put it on the place out of the reach of children.
12. Please store this product in a dry and cool environment when not use.

CORRECT DISPOSAL OF THIS PRODUCT



(Waste Electrical & Electronic Equipment) This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.