


One、PRODUCT PICTURE



THROTTLE CONTROLLER

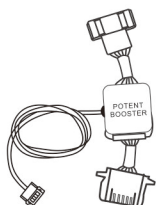

POTENT BOOSTER

2. Functions and characteristics of the product


- 1、The Electronic Throttle Accelerator through the control car throttle open to improve the sensitivity of the handling of the car to better adapt to different people's driving habits and keep driving conditions.
- 2、The Electronic Throttle Accelerator includes six modes, namely, "manual full throttle acceleration", "automatic full throttle acceleration", "manual semi throttle acceleration", "automatic semi throttle acceleration", "original auto mode" and "fuel saving mode"; except "original auto mode", there are 9 levels adjustment in other modes; therefore, the product has 46 levels for adjustment.
- 3、The Electronic Throttle Accelerator speed acceleration sense of the product is graded subtly from strong to weak level (see the effect chart of outer packing); use of relatively smooth effect curve ensures acceleration sense without increase difficulties in accelerator operation.
- 4、In order to have a better adaptability of autos' gear shift rule, automatic gear shift mode and manual gear mode are distinguished; the acceleration sense of the manual gear mode with the same level is stronger than the automatic mode; however, when put into practice, the mode can be set up based on the drivers' habits without restrictions of manual gear or automatic gear.

- ▲ Remarks: 1、Factory The Default Pattern "manual full acceleration mode"
2、Although acceleration mode and level can be adjusted at any time, it is necessary to adjust the gear under safe running.

3. Product installation

- 1、Will this Electronic Throttle Accelerator (ETA) of throttle connector installed in the gas pedal and between cars.
- 2、Will the display regulator on the place which is convenient for control adjustment;
- 3、Insert and connect the connecting wire between the accelerator and display regulator; if the wire is too long, it can be fixed in an appropriate place with bridles.


①

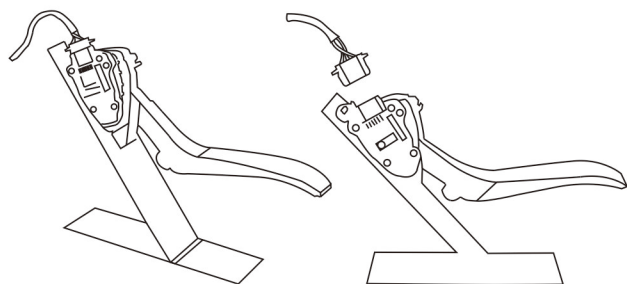

Picture3

Picture4

First:
Pull away the interface of the accelerator Pedal (remember the interface direction is useful),Pls refered picture 3 and picture 4

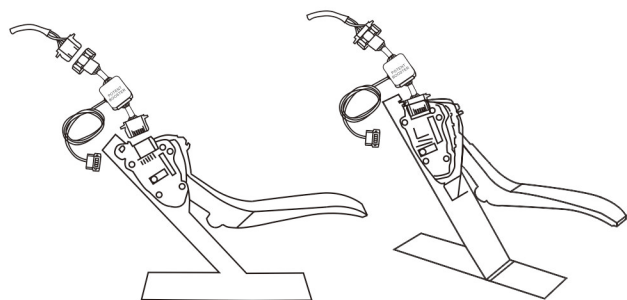


Picture5


Picture6

Secondly:
Connect the POTENT BOOSTER Throttle Controller with accelerator pedal (Pls refered picture5 and picture 6).

③

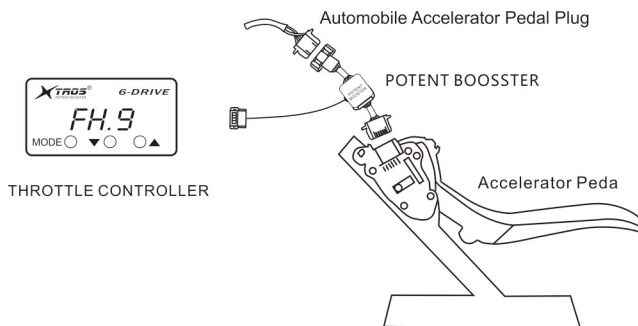

Installation schematic chart

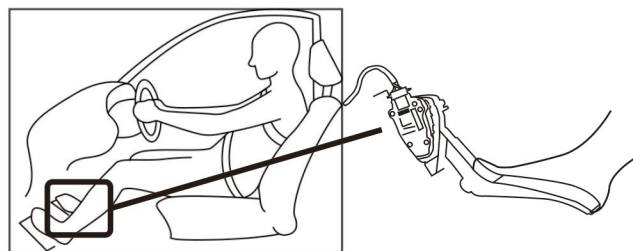

Picture1


Picture2

Installation Procedure:

POTENT BOOSTER Throttle Controller should be installed between the Automobile and Accelerator Pedal . (Pls turn off the key and close the Automobile power)

▲The installation would be a little different for different automobile.

②

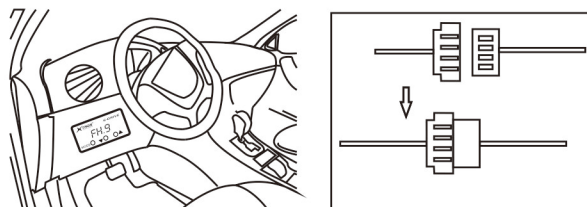

Picture7

Picture8

Thirdly:

Tear the protection paper on the back of POTENT BOOSTER Throttle Controller ,and stick it on where is easy to adjust the center consoler.(PLS refered Picture 7)

Lastly:

connect the POTENT BOOSTER Throttle Controller with Potent Booster.(PLS refered Picture 8)

4. Considerations for installation:

- 1、During installation, it is necessary to be clear about the direction of each plug and socket (identification through outgoing line on accelerator connector, accelerator pedal direction, shape of insert and connecting interface, etc.); keep the insert and connecting interface stable.
- 2、Start up the auto under neutral gear after installation; it is allowed to run on roads when the accelerator connector is confirmed to be valid.
- 3、If it is installed in a wrong direction, the accelerator pedal is invalid, and engine fault light will appear; please be calm, because there is protection circuit in the product, so that the opponents of the auto will not be destroyed. At this moment, please immediately shut down the engine, and dismantle the product: (when the protection circuit works normally), install the product in a right direction, which can work normally (if the engine fault light is lighting at this moment, please consult each agent for solution).

5. Operation

- 1、The product is operated through the three buttons on the display regulator; the buttons refer to mode, plus and minus direction key respectively.
- 2、The Electronic Throttle Accelerator can be adjusted after energization, but please put weight on running safety during adjustment of the product.
- 3、Press Mode key, and the acceleration mode of the machine will be changed in line with the following sequence: manual full throttle acceleration ->automatic full throttle acceleration ->manual semi throttle acceleration ->original auto mode->fuel saving mode.

④

⑧