




Quick Guide

HAWEEL H1

The contents of this manual may differ in certain respects from the description of your phone depending on its software version and your telephone operator.

Getting to know your mobile

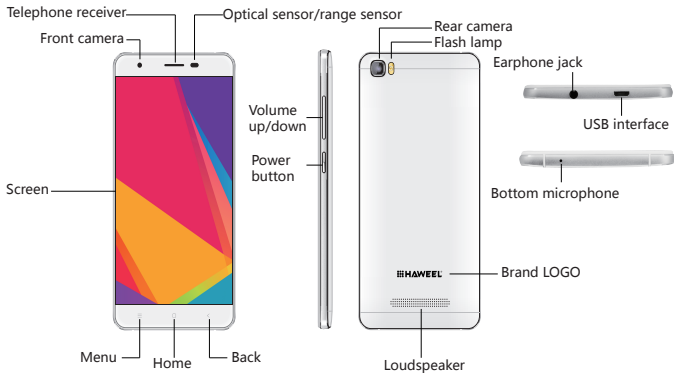

How to use the phone keys

In any screen,

Tap "<" to return to previous screen or to exit the application.

Tap "□" to return to the main menu.

Tap "≡" to display the settings/option list.

Tap the power button, to turn on or off the screen and lock the screen.

Long press power button to shut down or to restart your mobile.

Press and hold the power button and then press the volume down key to take a screen capture.

Language

Tap the settings icon. Scroll down and tap the "Language and input", then choose language in the field "language".

HAWEEL H1



Timeless color and style

The HAWHEEL H1 follows a minimalist style with black, white, golden body. The elegant design is not only choice for the young but also agree with the business people.



Skin-friendly shell

The final touch is to coat the polycarbonated cover with rubber paint, which is anti-scratch and gives the phone a premium and moist touch.



Handsome back curve

Inspired by the well-built profile of the sportsmen, H1 has a handsome back with appropriate curves and edges. Holding it in hand, it feels neither slippery nor rough.




5.0" HD Display

H1 With 1280*720 resolution, the 5inch display delivers a superior viewing experience with rich colors and sharp images.



BOX sound cavity

H1 has an independent sound cavity that is more enclosed in structure and is airtight. Energy produced by the loudspeaker becomes more concentrated and sound can be comparatively more powerful. Ideal stereoscopic sound effects can be realized through the sound cavity.

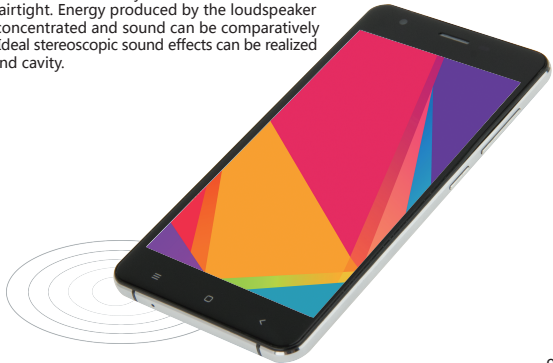

1. For your safety

Read these simple guidelines. Not following them may be dangerous or illegal.

Follow any restrictions. Switch the device off near medical equipment. Do not use the device where blasting is in progress.

Please keep this cell phone away from children, as they could mistake it for a toy, or hurt themselves with it.

Don't try to modify the phone except by the professional. Warning!

Only use the authorized spare parts, otherwise it may damage the phone and the warranty will not work. And it may be dangerous.

SWITCH OFF WHEN REFUELING

Don't use the phone at a refueling station. Don't use near fuel or chemicals.

SIM CARD AND T-FLASH CARD ARE PORTABLE

Pay attention to these small things to avoid children eating them.

Notice: The T-Flash Card can be used as a Memory Disk, the USB cable is necessary.

BATTERY

Please do not destroy or damage the battery, it can be dangerous and cause fire.

Please do not throw battery in fire, it will be dangerous

When battery cannot be used, put it in the special container.

Do not open the battery.

If the battery or the charger is broken or old, please stop using them.

USE QUALITY EQUIPMENT

Use our authorized equipment or it will cause dangers.

ROAD SAFETY COMES FIRST

Give full attention while driving, pull off the road or park before using your phone if driving conditions so require.

INTERFERENCE

All wireless devices may be susceptible to cause interference, which could affect performance.

SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft. It's not only dangerous but also illegal to use mobile phone in an aircraft.

2. Learn about the phone

Button	Press	Press & hold
Power key (Right side)	Turn on/off the screen.	Open a menu with options for airplane mode, powering on/off the phone and so on.
Volume Up/Down (Right side)	When a call is in progress, increase or decrease the call volume; When the phone is ringing, silence the ringer. On the Home screen when no calls in progress, increase or decrease the ringtone volume, can set the phone to be silent instead of ringing. In other applications, controls the volume of music, spoken directions, and other audio.	Quickly increasing the ringtone volume to maximum or minimum.

3. Before using

Insert SIM Card

The HAWHEEL H1 is a dual SIM mobile phone allowing you to use the facility of two networks.

To insert SIM card(s):

1. Power off the mobile phone and remove the back cover.
2. Insert the SIM card correctly in the card slot(s).
3. Finally insert the back cover of the mobile phone.

Insert Memory Card

1. Power off the mobile phone, then remove the back cover.
2. Insert the memory card into the slot.
3. Finally insert the back cover of the mobile phone.

Charger

1. Connect the charger to the charger jack on the phone.
2. Next connect the charger to a power socket, the charging starts, with the charging icon in an animated state.
3. When the charging icon becomes static, it indicates that the battery is full.
4. Disconnect the charger from the power socket and the phone.

Note: Slight heating during charging is normal. It indicates that the battery is full, when the charging icon becomes static.

4. Getting started

4.1 Turn on/off your phone

- Turn on the phone

Long press the power key to start up the cell phone. If you have started up the SIM card 1/2 lock, you have to enter SIM card 1/2 PIN.

- Turn off the phone

Long press the power key, a context menu will prompt, touch "Power off" to switch off the cell phone.

- To wake up the phone

If you use the phone for a while, the Home screen or other screen you are viewing is replaced with the lock screen and then the screen darkens, to conserve the battery.

1. Press the Power button.
2. Drag the lock icon rightward. The last screen you were working on opens.

4.2 Getting to know the Home screen

The Home screen is the starting point to access all the features on the phone. It displays application icons, widgets, shortcuts, and other features. You can customize the Home screen with different wallpaper and display the items you want.

At the top of the screen, the status bar displays the time, information about the status of your phone, and icons for notifications that you've received.

Touch the launcher icon at the bottom of the screen to view all installed applications.

4.3 Using the touch screen

The main way to control Android features is by using your finger to touch icons, buttons, menu items, the onscreen keyboard, and other items on the touch screen.

Touch: To act on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to press onscreen buttons, you simply touch them with your finger.

Touch & hold: Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a menu for customizing the Home screen, you touch an empty area on the Home screen until the menu opens.

Drag: Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You drag items on the Home screen to reposition them and you drag to open the notification panel.

Swipe or slide: To swipe or slide, you quickly move your finger across the surface of the screen, without pausing when you first touch (so you don't drag an item instead). For example, you slide the screen up or down to scroll a list, and in some calendar views you swipe quickly across the screen to change the range of time visible.

Double-tap: Tap quickly twice on a webpage, map, or other screen to zoom. For example, you can double-tap a section of a webpage in browser to zoom to fit the width of the screen. You can also double-tap to control the camera zoom, in maps, and in other applications, double-tapping after pinching to zoom in some applications, such as browser, reflows a column of text to fit the width of the screen.

Pinch: In some applications (such as maps, browser, and gallery) you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

Rotate the screen: On most screens, the orientation of the screen rotates with the phone as you turn it from upright to its slide and back again. You can turn this feature on and off.

4.4 Customizing the Home screen

To add items to the Home screen

Enter the main menu , touch & hold the icon of an application , then the application will be added to the home screen.

To move an item on the Home screen

1. Touch & hold the item you want to move, don't lift your finger, until it vibrates.
2. Drag the item to a new location on the screen. Pause at the edge of the screen to drag the item onto another screen pane.
3. When the item is where you want it, lift your finger.

To remove an item from the Home screen

1. Touch & hold the item you want to remove, don't lift your finger, until it vibrates. The top of the screen will appear "Delete" .
2. Drag the item to the "Delete" icon.
3. When the icon turns red, lift your finger.

4.5 Connect to network

When you assemble your phone with a SIM card from your wireless service provider, your phone is configured to use your provider's mobile networks for voice calls and for transmitting data.

- Settings-->Dual SIM Setting, the name of the wireless service provider you've currently registered with is selected in the list.
- Click the name of the network provider, you can rename it or set the color for it.
- You can set default SIM for voice call and messaging.

4.6 Input text

You can touch a text field where you want to enter text to open the keyboard.

To enter text

- Touch a text field, the onscreen keyboard opens.
- Touch the keys on the keyboard to type, the characters you've entered appear in a strip above the keyboard. With suggestions for the word you are typing to the right. Press the left or right arrows in the strip to view more suggestions.
- Press space or a punctuation mark to enter the highlighted suggested word. If you touch the space key, the suggestion strip offers a series of punctuation marks you can touch, to replace the space with, or touch another suggested word to enter it.
- Use the delete key to erase characters to the left of the cursor.
- When you've finished typing, press back to close the keyboard.

5. Communication

5.1 Making a call

- * Tab the phone icon on the Home screen or if you're already working with Contacts or the Call log, touch the Phone tab.
- * Enter the phone number you want to dial.
- * Touch the phone icon to dial the number that you entered. You can select voice call.

5.2 Messaging

You can use this phone to exchange text messages and multimedia messages with your friends on their mobile phones. The messages come to and from the same contact or phone number will into a single conversation, so you can see your entire message history with a person conveniently.

6. Multimedia

6.1 Camera

Camera is a combination camera and camcorder that you use to shoot and share pictures and videos. **Note:** Pictures and videos are stored on the phone's TF card. If there is no TF card, they will be stored on phone.

6.1.1 Take a picture

6.2 View albums

Tap the camera roll in the launcher to view albums of your pictures and videos. Gallery presents the pictures and videos on your TF card, including those you've taken with Camera and those you downloaded from the web or other locations.

You can do the following operations:

- To share pictures: you can share your pictures through MMS, Bluetooth, and so on.
- To delete pictures: You can delete the pictures you are viewing.
- To get details about the picture: You can view more details about the picture.

6.3 Music

You use music to organize and listen to music and other audio files that you transfer to your TF card from your computer.

7. Connecting to networks and devices

Your phone can connect to a variety of networks and devices, including mobile networks for voice and data transmission, Wi-Fi data networks, and Bluetooth devices, such as headsets. You can also connect your phone to a computer, to transfer files from your phone's TF card, and share your phone's mobile data connection via USB or as a portable Wi-Fi hotspot.

7.1 WLAN

WLAN is a wireless networking technology that can provide internet access at distance of up to 100 meters, depending on the Wi-Fi router and your surroundings. You can configure the WLAN as follow:

- **Main menu--> Settings--> WLAN**, check **WLAN** to turn it on.
Enter **WLAN** The phone scans for available Wi-Fi networks and displays the names of those it finds.
- Secured networks are indicated with a Lock icon. If the phone finds a network, you connected previously. It connects to it.

- Touch a network to connect to it.

If the network is open, you are prompted to confirm that you want to connect to that network by touching connect. If the network is secured, you're prompted to enter a password or other credentials.

7.2 Bluetooth

Bluetooth is a short-range wireless communications technology that devices can use to exchange information over a distance of about 10 meters. The most common Bluetooth devices are headphones for making calls or listening to music, hands-free kits for cars , and other portable devices, including laptops and cell phones.

7.2.1 To send a file

- **Main Menu--> Settings--> Bluetooth**, check **Bluetooth** to turn it on.
- Enter **File manager** to select a file and long press it, select **Share--> Bluetooth**.
- Touch **Scan for devices**, the phone will scan for and display the IDs of all available Bluetooth devices in range.
- Touch the ID of the other device in the list to pair them. After paired the file will be sent.

7.2.2 To receive a file

- **Main menu--> Settings--> Bluetooth**, check **Bluetooth** to turn it on. Ensure the **Bluetooth Settings--> Discoverable** is on.
- After paired, the phone will receive the file. The file you received will be saved to the "Bluetooth" folder on the TF card or Internal Storage.

7.2.3 To connect to a Handsfree device

- **Main Menu--> Settings--> Bluetooth**, select “**Search for devices**” ;
- Turn on the Handsfree device, select the handsfree device in the list to pair.
- After paired, you can use the handsfree device to listen music and receive call.

7.3 Connecting to a computer via USB

You can connect your phone to a computer with a USB cable, to transfer music, pictures, and other files between your phone's TF card and the computer.

When connecting your phone to a computer and mounting its TF card, you must follow your computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting the files on your TF card.

You can't share your phone's data connection and TF card via USB cable at the same time.

If you are using USB tethering, you must turn that off first.

7.3.1 To connect your phone to a computer via USB

1. Use the USB cable that came with your phone to connect the phone to a USB port on your computer.
You receive a notification that the USB is connected.
2. Open the notification panel and touch **USB connected**.
3. Tap **Turn on USB storage** in the screen that opens to confirm that you want to transfer files.
When the phone is connected as USB storage, the screen indicates that USB storage is in use and you receive a notification. Your phone's TF card is mounted as a drive on your computer. You can now copy files to and from the TF card.

During this time, you can't access the TF card from your phone, so you can't use applications that rely on the TF card, such as camera, gallery, and music. You also can't share your phone's data connection with your computer via USB.

7.3.2 To disable phone calls (Airplane mode)

Some locations may require you to turn off your mobile signal, Wi-Fi, and Bluetooth wireless connections. You can turn off all these wireless connections at once by placing your phone in Airplane mode.

1. Press & hold the **Power** button
2. Tap **Airplane mode**.

8. Warnings and Notes

Operational Warnings

Important information on safe and efficient operation. Read this information before using your phone. For the safe and efficient operation of your phone, observe these guidelines:

Potentially explosive atmospheres: Turn off your phone when you are in any areas with a potentially explosive atmosphere, such as fueling areas (gas or petrol stations, below deck on boats), storage facilities for fuel or chemicals, blasting areas and areas near electrical blasting caps, and areas where there are chemicals or particles (such as metal powders, grains, and dust) in the air.

Interference to medical and personal electronic devices: Most but not all electronic equipment is shielded from RF signals and certain electronic equipment may not be shielded against the RF signals from your phone.

Audio Safety: This phone is capable of producing loud noises which may damage your hearing. When using the speaker phone feature, it is recommended that you place your phone at a safe distance from your ear.

Other Media Devices, hospitals: If you use any other personal medical device, consult the manufacture of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Turn your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Product statement on handling and use: You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

Always treat your phone and its accessories with care and keep it in a clean and dust-free place

Do not expose your phone or its accessories to open flames or lit tobacco products.

Do not expose your phone or its accessories to liquid, moisture, or high humidity.

Do not drop, throw, or try to bend your phone or its accessories

Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.

Do not attempt to disassemble your phone or its accessories; only authorized personnel can do so.

Do not expose your phone or its accessories to extreme temperatures, minimum 32° and maximum 113°(0° to 45°).

Battery: Your phone includes an internal lithium-ion or lithium-ion polymer battery. Please note that use of certain data applications can result in heavy battery use and may require frequent battery charging. Any disposal of the phone or battery must comply with laws and regulations pertaining to lithium-ion or lithium-ion polymer batteries.

Faulty and damaged products: Do not attempt to disassemble the phone or its accessory. Only qualified personnel must service or repair the phone or its accessory. If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.



Licensed by: Shenzhen Haweel Technology Limited

Address: 8/F, 614 Bldg, Bagua 1st Road, Futian, Shenzhen, China

Tel: +86 755 83641729

Email: service@haweel.com

Website: <http://www.haweel.com>

<https://www.facebook.com/haweelfans>

CE FC RoHS 
Made in China