

AUDIO BABY MONITOR



USER'S GUIDE

WELCOME...

to you new digital Baby Monitor!

Thank you for purchasing the product. Now you can see and hear your baby sleeping in the other room or you can monitor your older children in their playroom.

 
This User's Guide provides you with all the information you need to get the most from your product.

Packing List




1×Parent Unit 1×Baby Unit 2×Power adapter

Overview of Baby unit

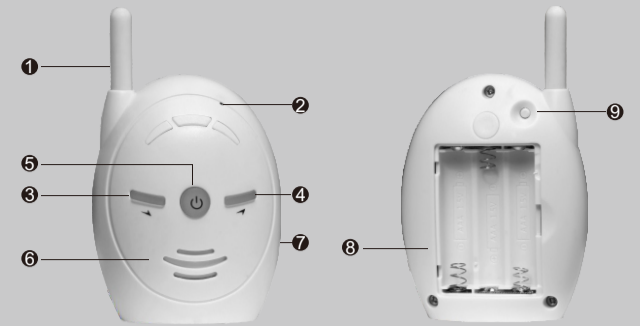

- 1. Aerial
- 2. Mic
- 3. Volume-
- 4. Volume+
- 5. Power key/Return key/Power Led
- 6. Speaker
- 7. Power adapter connector
- 8. battery
- 9. Pair key

 Overview of your Baby Unit

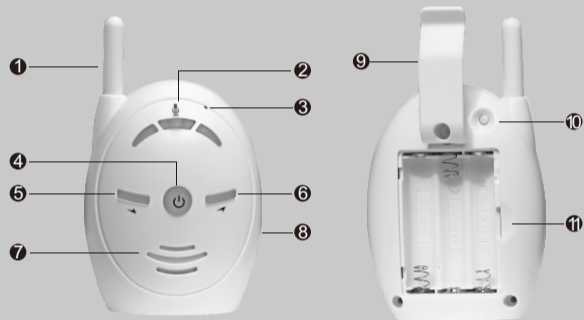

- 1. Aerial
- 2. Mic
- 3. Volume-
- 4. Volume+
- 5. Power key/Return key/Power Led
- 6. Speaker
- 7. Power adapter connector
- 8. battery
- 9. Pair key
- 10. Pair key
- 11. Pair key

1. Safety Instructions

 
WARNING

This baby monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this Users Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling
- This product is not a toy. do not allow children to play with it.
- This baby monitor is not a substitute for responsible adult supervision.
- Do not place the baby unit or cables in the cot or within arm's reach of the baby (at least 1 meter away).
- Keep the cords out of reach of children
- Do not use the baby monitor near water or a heat source
- Only use the power adapters provided
- Do not touch the plug contacts with sharp or metal objects,

2. Getting started

2.1 Baby unit power supply

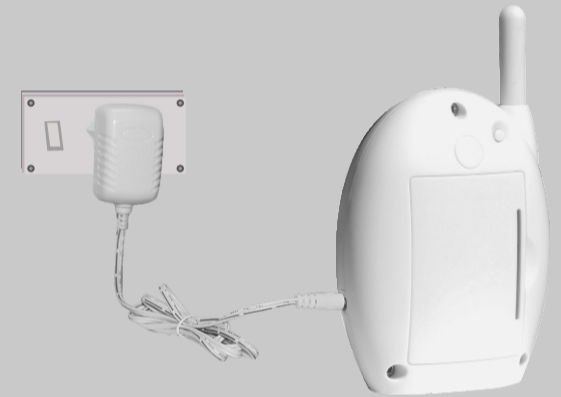


1. Connect the small plug of the power adapter to the baby unit and the other end to the mains socket.

NOTE :only use the power adapter provided

- 2.

 2.2 Parent unit power supply

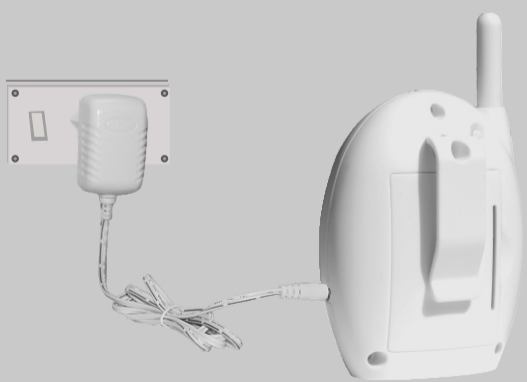

Charging the parent unit fully before use is recommended

 
This will allow the unit to operate on battery in the event of a power failure

1. Connect the plug of the power adapter to the parent unit and the other end to the mains socket

NOTE :only use the power adapter provided

- 2.

- 3.

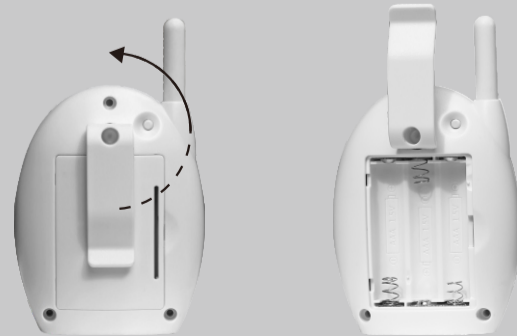

Specifications

baby unit	
Transmission Frequency	ISM 2400-2483MHz
Transmission Power	17dBm
Modulation Type	FSK
Power Supply	DC5V
Power Consumption	70mA
Operating Temperature range	-10 °C ~ +60 °C
Storage Temperature	-40 °C ~ +70 °C
Dimensions	62mmX40mmX103mm
Weights	75g

Parent unit	
Transmission Frequency	ISM 2400-2483MHz
Transmission Power	17dBm
Receiviy Sensitivity	-85dbm
Modulation Type	FSK
Power Supply	DC5V
Power Consumption	Poma
Operating Temperature range	-10 °C ~ +60 °C
Storage Temperature	-40 °C ~ +70 °C
Dimensions	62mmX45mmX103mm
Weights	78g