 


Watch phone hand manual

MENU

1. The instruction of the appearance of watch phone
 2. The removable of battery
 3. Charging and connect with PC
 4. Fixing SIM card and Mini SD card
 5. How to make a call
 6. Input switch
 7. Main menu
 8. Multi-media
 9. Simple fault eliminate
- 1、 The instruction of the appearance of watch phone

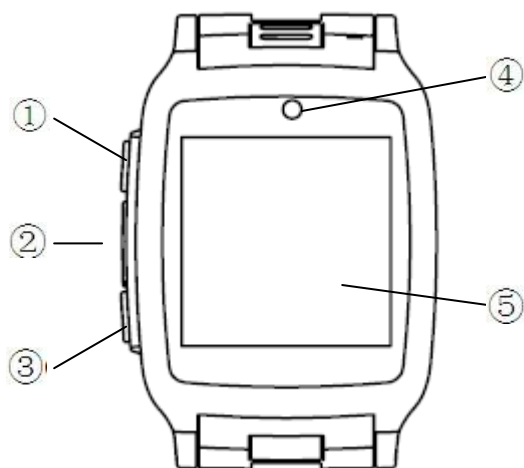

① OK key ② USB Interface ③ on/off Button ④ Camera ⑤ Touch Screen

2、 The removable of battery



Battery installing, ① put battery on correct position, ② press the nail groove.



Battery removing: Press the nail groove to pull out battery.


3、Charging and connecting with PC

Kindly reminder: **Please charge the battery over 8 hours at first usage.**

Icon on the touch screen to show the charging

During the charging, the scroll bar are rolling

 While the battery is full, the scroll bar stops rolling.

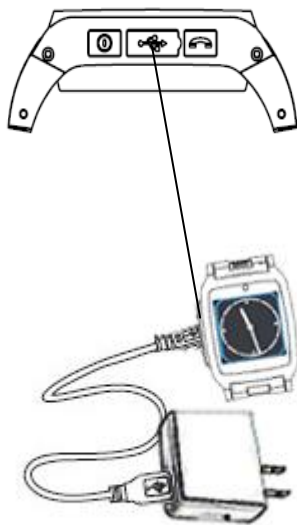

Please charge the watch phone with special charger.

 


Charging with PC and other assistant functions.

Watch phone indicates USB setting.


Storage setting: connecting with PC and make data transmission. Network camera can work as PC camera.

4、 Fixing SIM card and Mini SD card

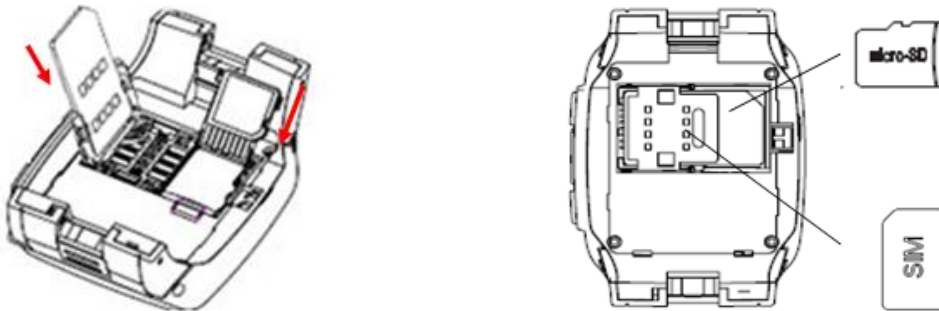


5、 How to make a Call



Touch green call icon  on the display screen under standby interface to activate the number

keypad. Input the number you wish to call and press OK key. Press the on/off button to end the call. Press OK key to answer. Press the on/off button to refuse a call.

 6、 Set up message

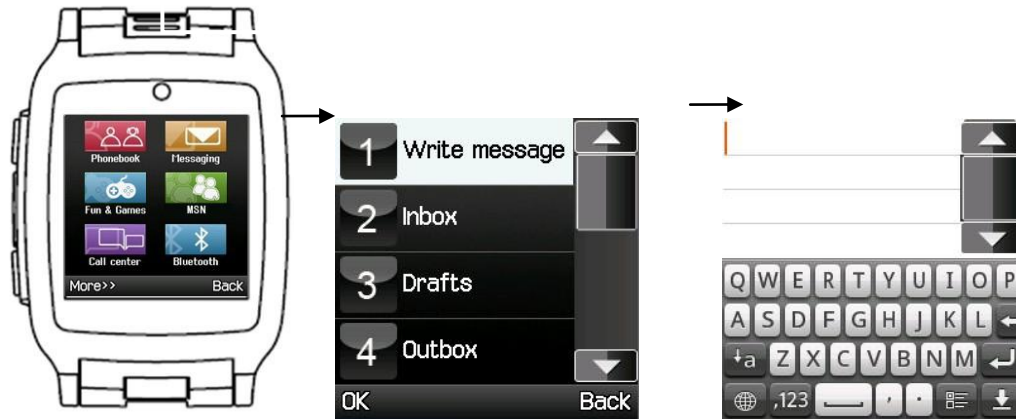

Support the letters and numbers of virtual keyboard and handwriting to input messages. The watch phone also supports 12 languages input.

Input switch

Numbers: "123"

Capital letters: "ABC"

Lowercase letters: "abc"

Input languages

EN/AR/ES/FR/DE/IT/RU/TR/PT/CZ/NL/EL

7、 Main menu



Phonebook



Messages



Fan & Games



MSN



Call history



Bluetooth



Multimedia



Silent model



Organizer



User profile



Settings



Services

7、 Main menu



8、 multi-media

Audio Player



Watch phone supports built-in music player and used to playing music also can set music to ringtone. Attention please: MP3 Documents show in the player by saving at my music file

Camera:



Image Viewer:

You can browse and send you photo to wallpaper, screensaver, carton of on/off, contacts, MMS, Bluetooth, rename or delete.

Video device:



The files of video saved in the root of "Video" under Default Setting. Record sound films with the watch phone. You can set the picture of the watch phone takes as the calling picture and you also can set interesting frame before taking photo.

Attention please: Long press OK key to go into secretive filming.

Video Player

There is video player built-in, can browse, save, edit the video files, it contains MP4, 3GP and so on. Attention Please: Video files can play under that the video files should be saved in root menu "Video".



Recording:



All the recording files saved in root menu “Audio” under default setting.
 You can record, play, attach, rename, delete, delete all under file list status.

9、Addenda

1: Simple fault eliminate

If the watch mobile found abnormal, please restore to original settings, and read the following method, if the problem cannot resolved, please contact seller or aftersales service man.

FAQ	Reason	Solve method
Cannot connect to internet	No service or you have no application for this service	Inquire to the network supplier for using
	Wrong setting	Refer to browse introduction
React slowly when touch screen	Touch screen have no proper adjustment	Adjust screen
SIM card problem	SIM card damage	Contact with network supplier
	SIM card fixed improperly	Check SIM card
	SIM card has feculence	Wipe SIM card with clean cloth
Signal weak	Signal weak area, such as high building or basement ,the signal is weak	Please go to signal good areas
Signal weak	The line will be crammed at high density calling period.	Avoid using mobile at high density calling period.
Power on failure	No electricity	Charge battery
Small squares in SMS or other where	Characters unrecognized by system.	Advise the sender use language recognizable by the system.
Cannot have a call	Start dial forbidden function	Cancel forbidden dial setting
Cannot connect to	SIM card inefficient	Contact with network supplier

network	Out of GSM service area	Transfer to network service area
	Weak signal	Transfer to strong signal area
Can not charge	Voltage and charge disagree	Use voltage conformity with charger
	Charger nonstandard	Use charger special for this watch mobile
	Touch badness	Check plugs

2: Fittings Instruction

Speaker fittings: Fittings include earphone and microphone for speaker.

USB data wire: When the watch mobile is power off, you can use USB data wire to connect with watch mobile to windows system PC and save files.

When the watch mobile is power on, you can use USB data wire to connect watch mobile and PC, and can start up charging function. If it is Power off, USB data wire can be used as U disk.