

Full HD Digital Photo Frame

User Manual

Contents

Introduction.....	2
Notes of Importance.....	2
Features.....	3
Package contents.....	4
Drawing.....	5
Remote Control.....	9
Getting started.....	10
Main menu.....	11
Viewing your photos.....	12
Listening to your music.....	12
Viewing your videos.....	13
Calendar and clock display.....	13
Feature setup.....	14

Introduction

Before operating the unit, please read this manual carefully, and retain it for future reference. This manual will help you use the many exciting and useful features that will make your photo frame viewing more enjoyable. It includes a step by step guide to the basics on photo frame operation including instructions on uploading and playing photos, music or video.

Notes of Importance

- 1) Please keep the device away from excess temperature (50 C° above), too cold (-10 C° below) or wet place.
- 2) Do not grievous hit the device or place something heavy on it.
- 3) Only use the accessories specified by the manufacturer.
- 4) Please keep the device away from benzene, diluents or other chemical.
- 5) Keep the device away from water.
- 6) The product should be serviced by the professional serviceman, do not try to service it by yourself.
- 7) Please unplug the power plug of the product when not in use for a long time or during the rainstorm.
- 8) In order to avoid damaging the touch panel, never place the heavy or sharp objects on the touch panel when use or transport it.
- 9) Arrange all cables and cords so that people and pets are not likely to trip over or accidentally pull on them move around or walk through the area. do not allow children to play with cables and cords.

Features

- ◆ Full HD screen,LED backlight
- ◆ High Resolution
- ◆ Width viewing angle
- ◆ Compatible with SD/MMC card
- ◆ HDMI input
- ◆ AV input
- ◆ USB Host 2.0
- ◆ 3.5mm earphone
- ◆ Support MPEG2,MPEG4,H.264,RM, RMVB ,MPG,MOV, AVI,MKV,TS,M2TS etc.
- Video format support up to 1920*1080
- ◆ Support JPEG/MP3 music play
- ◆ 2*3W speaker
- ◆ VESA 100mm X 100mm
- ◆ Full function remote control
- ◆ Auto playback and loop function for video files

Package Contents

Please make sure all of the following are present when you unpack your digital photo frame.

Full HD digital photo frame

Power adapter

Power cable

Remote control

User manual

Screw-in stand(14"/>"

Stand(18.5"/>"

Screw(18.5"/>"

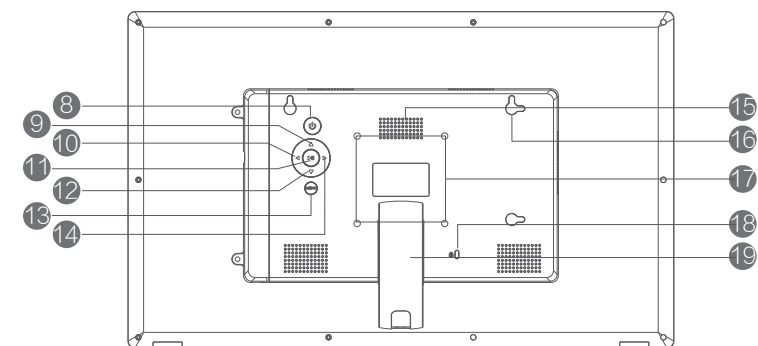 
Drawing (14"/>"

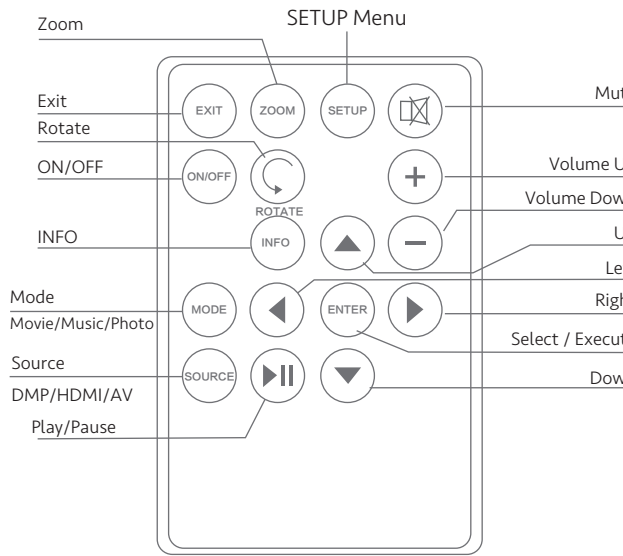 
Serial number	Function
①	Remote receiver
②	SD/MMC card slot
③	Earphone
④	AV Input
⑤	USB2.0
⑥	HDMI Input
⑦	DC In

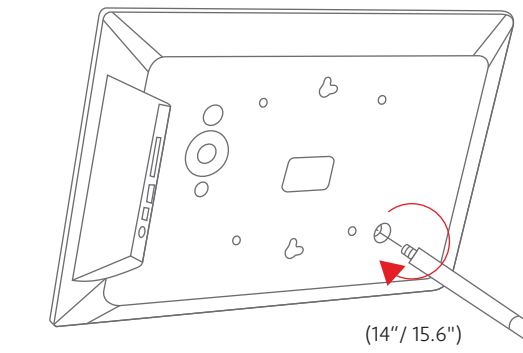 
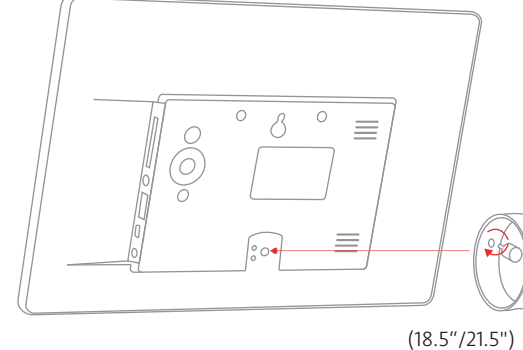 
Serial number	Function
①	Remote receiver
②	Power
③	Up
④	Right
⑤	Menu/Play/Enter/Pause
⑥	Down
⑦	Exit
⑧	Left
⑨	Speaker
⑩	Keyholes for Wall-Mounting
⑪	VESA 100*100mm
⑫	Stand
⑬	Kensington Lock

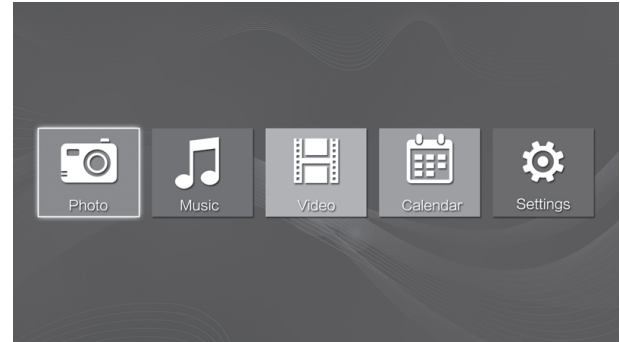 
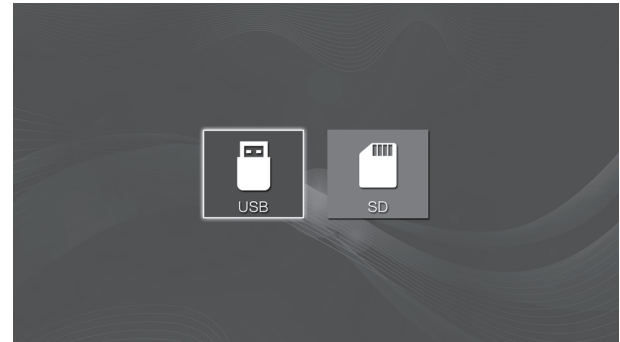 
Serial number	Function
①	Remote receiver
②	SD/MMC card slot
③	Earphone
④	AV Input
⑤	USB2.0
⑥	HDMI Input
⑦	DC In

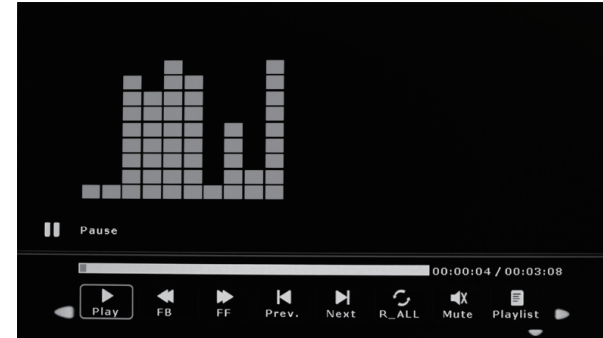 
SIZE:140x160MM 材质: 封面157G封面四色印刷 内页80G哑粉纸黑白印刷, 中间打钉

	
Serial number	Function
①	Power
②	Up
③	Right
④	Menu/Play/Enter/Pause
⑤	Down
⑥	Exit
⑦	Left
⑧	Speaker
⑨	Keyholes for Wall-Mounting
⑩	VESA 100*100mm
⑪	Kensington Lock
⑫	Stand
8	

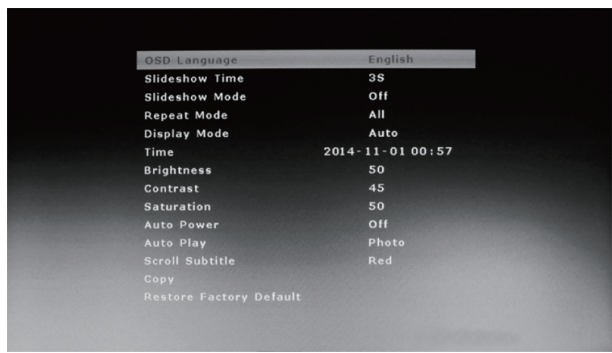 
Remote Control  Note: 1) Please remove the plastic tab between the remote control battery door and the battery 2) Please point the Remote Control toward the Remote Sensor, which is located towards the lower right of the frame's panel.	
9	

Getting Started 1) To set up your digital photo frame, you first need to attach the stand.   2) Place the frame horizontally on a flat surface. 3) insert the power lead into the digital photo frame's socket marked dc 4) Turn on the digital photo frame by either pressing the power button on the back of the unit or pressing the power button on the remote control.	
10	

Main Menu After turning on the unit, this screen will appear:  The memory device(USB/SD)you have inserted,you can use the[◀][▶] buttons on your remote control to choose the function you want,then press ok to select the menu item. 	
11	

Viewing Your Photos Select the photo icon from the main menu and then press ENTER. use the [◀][▶] buttons to select the memory device and then press ENTER, you will now have access to your photos in thumbnail view, you can navigate through your photos using the [◀][▶][▲][▼] buttons. press ENTER to start playing your photos. 	
Listening To Your Music Select the music icon from the main menu and then press ENTER. using the [◀][▶] buttons to select the memory device and then press ENTER, your music files will show on the screen. you can navigate through your music using the [◀][▶][▲][▼] buttons. press ENTER to play. 	
12	

Viewing Your Videos Select the movie icon from the main menu and then press ENTER. use the [◀][▶] buttons to select the memory device and then press ENTER, your video files will show on the screen,you can navigate through your video using the [◀][▶][▲][▼] buttons. press ENTER to play. 	
Calendar and Clock Display 2)To view the calendar, choose the calendar icon from the main menu. a photo slideshow will play in a small window in the left. 	
13	

Feature Setup Select the 'setup' icon from the main menu, to adjust the settings on your digital photo frame. alternatively, just press the 'setup' button on the remote control. From here, you will see the various options:  [▲] / [▼] button: Move through items or choose parameters [◀][▶]button: Change the parameters ENTER: Confirm/ save changes EXIT: Back to item list.	
14	

高清数码相框



使用说明

目录

前言.....2

敬告.....2

功能特点.....3

包装清单.....3

产品描述.....4

遥控器.....8

使用前准备.....9

主界面.....10

图片.....10

音乐.....11

视频.....12

日历时钟.....13

设置.....13

1

前言

感谢您选用本公司高清数码相框产品！
开机之前，请仔细阅读此说明书，了解本机的使用方法和注意事项。

敬告

- 仅能使用原厂提供的电源适配器、遥控器及配件。
- 机器上的缝隙和开口用于通风和散热，请勿堵塞或遮盖这些缝隙和开口。
- 切勿在多尘、潮湿、高温的环境下使用或存放本机。
- 机器故障时，请勿自行拆解维修，需联系原厂或经销商解决。
- 避免踩踏电源线或者电源适配器，以免线损造成漏电等危险。如果电源适配器的导线已损坏，请勿继续使用，否则可能会发生危险。
- 雷雨天气或者长时间不使用本机时，请拔掉电源线插头。
- 使用时，请不要将机器放在桌子边缘或小孩容易接触到的地方，避免机器摔损或伤害到小孩。
- 运输或使用过程中尽量不触碰显示屏，切勿用力挤压显示屏，不要用利器或硬物碰伤显示屏，以免造成显示屏破损。
- 请使用干燥的软布或略蘸柔性清洁剂的软布清洁相框。请勿使用任何种类的溶剂，如酒精或汽油，否则可能损坏表面处理层。

2

功能特点

- 支持MPEG2/MPEG4/H.264/RMVB/AVI(avi.mov.mp4.mpgl.mvbl.mkv)等格式视频，最大支持高清1920*1080 视频。
- 支持图片JPEG。
- 支持SD/MMC 储存卡。
- AV 输入。
- HDMI 高清接口输入。
- 2*3W 立体声箱体喇叭,立体声耳机输出，声音更完美。
- 标准 VESA 壁挂孔。
- 多功能遥控操作。

包装清单

打开包装后，请确认下面的包装内容。

 
高清数码相框

电源

电源线

遥控器

说明书

支架(14"/15.6")

支架(18.5"/21.5")

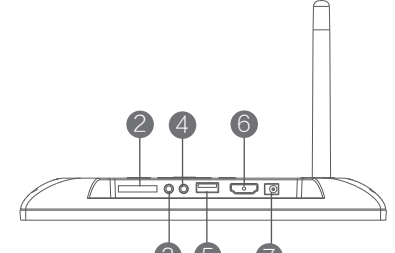 
支架(18.5"/21.5")

3

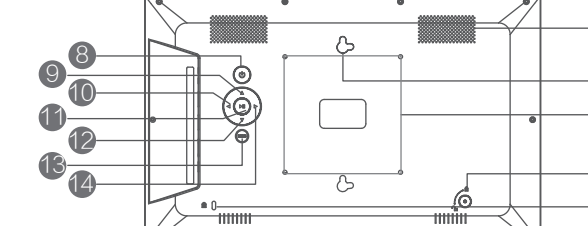 
产品描述 (14"/15.6")



数字	功能
①	红外遥控接收器
②	SD/MMC卡槽
③	3.5mm 耳机插孔
④	AV输入
⑤	USB
⑥	HDMI高清输入
⑦	电源插孔



4



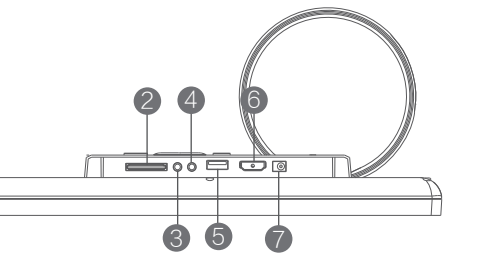 
数字	功能
②	电源开/关键
③	上键
④	右键
⑤	长按菜单/确认键
⑥	下键
⑦	退出
⑧	左键
⑨	喇叭孔
⑩	挂墙孔
⑪	VESA国标壁挂孔
⑫	支架
⑬	锁孔

5

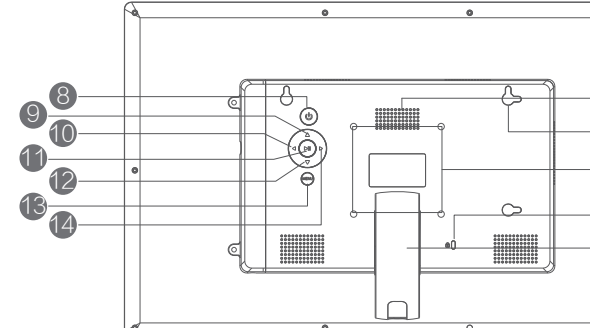 
产品描述 (18.5"/21.5")



数字	功能
①	红外遥控接收器
②	SD/MMC卡槽
③	3.5mm 耳机插孔
④	AV输入
⑤	USB
⑥	HDMI高清输入
⑦	电源插孔

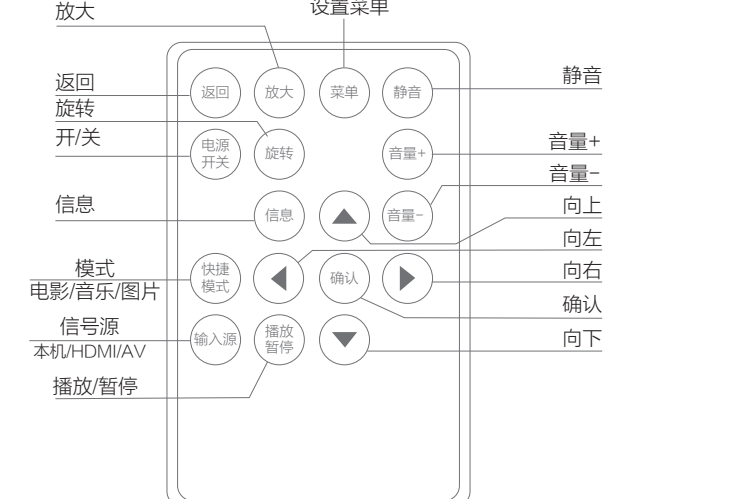 
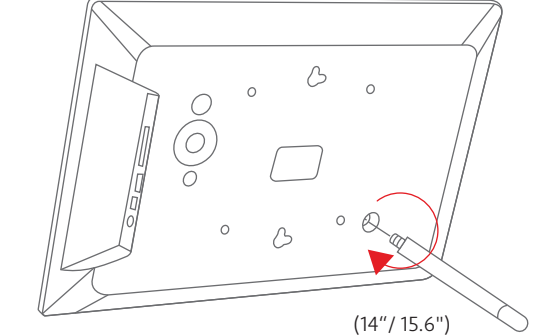 
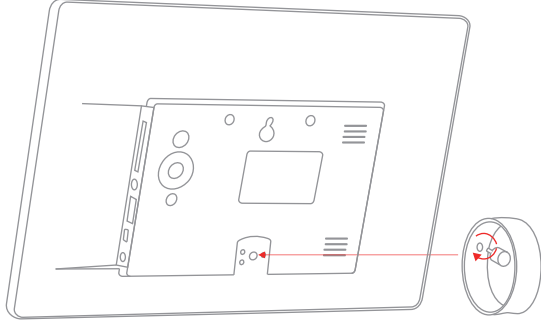 
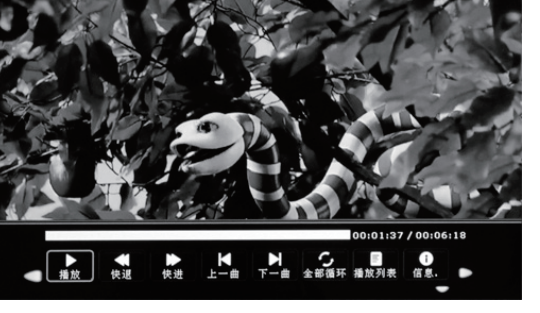 
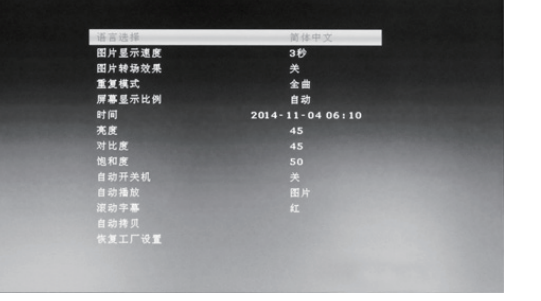 


6



数字	功能
②	电源开/关键
③	上键
④	右键
⑤	长按菜单/确认键
⑥	下键
⑦	退出
⑧	左键
⑨	喇叭孔
⑩	挂墙孔
⑪	VESA国标壁挂孔
⑫	锁孔
⑬	支架

7

遥控器  - 使用遥控器之前请先将遥控器电池盖里面的绝缘薄膜片取出。 - 请对准屏幕右下角遥控信号接收窗口进行操作。 - 快捷模式键：可在音乐播放、电影播放、图片播放、图片加背景音乐播放四种播放模式下快速切换。 - 输入源：切换本机模式 HDMI / AV 输入模式 8	使用前准备 1) 将支架与机身固定支架位置对准，再行入支架安装好支架。(如下图)  2) 将支架圆圈固定胶柱与机身固定支架位置对准安装好，再行入固定螺母安装好支架。(如下图)  3) 请把电源适配器DC端插入到数码相框的电源插孔，然后把电源插头插入插座，相框进入开启模式。 9	主界面 连接电源后，机器将会自动开机进入到主界面。  图片 图片播放 在主界面上选择“图片”按确认键进入储存卡界面，选择U盘或内存卡进入照片预览，再按【◀/▶/▲/▼】键选择您喜欢的图片，按【确定】键即可开始幻灯片播放图片，若存储的文件较多，进入预览的时间也较长，请耐心等待。  10	音乐 音乐播放 在主界面上选择“音乐”按【确定】键进入储存卡界面，选择U盘或内存卡进入音乐预览（如下图）再按【◀/▶/▲/▼】键选择您喜欢的音乐，按【确定】键即可播放音乐。  音乐附加菜单 在音乐播放界面，按遥控器“信息”键屏幕下方会出现附加菜单。(如下图)  11	视频 视频播放 在主界面上选择“视频”按【确定】键进入储存卡界面，选择U盘或内存卡进入视频预览(如下图)，再按【◀/▶/▲/▼】键选择您喜欢的视频，按【确定】键即可视频播放。  4:2视频附加菜单 在视频播放界面，按遥控器“信息”键屏幕下方会出现附加菜单。(如下图)  12	日历和时钟 按【◀/▶】键在主界面上选择“日历”，按【确定】键进入日历和时钟界面如下图，时钟将会以时分秒的格式显示在左上方，按【◀/▶/▲/▼】键可以切换日期。  设置 按【◀/▶】键在主界面上选择“设置”，按【确定】键进入 设置菜单主界面（如下图），按【◀/▶】键移动设置项目，按【▲/▼】调节，按【确定】键设置。  13	语言：中英文语言设置。 图片显示速度：设置图片幻灯片播放时间。 图片转场效果：打开或关闭图片的转场特效。 重复模式：设置文件播放时的重复模式。 屏幕显示比例：设置媒体文件播放时的显示比例。 时间：设置机器系统时间。 亮度：设置显示屏亮度。 对比度：设置显示屏对比度。 饱和度：设置显示屏饱和和度 自动开关机：设置机器自动开关机时间。 自动播放：设置机器开机播放模式，自动进入播放的模式。 恢复工厂设置：此项可进行恢复出厂设置。 14		V:1.0
--	--	--	---	---	---	---	--	------------------

深圳市亿莱顿科技有限公司

图 称	中性59方案新UI说明书	设 计
订单编号	P01503220	曾雪美
型 号：	HD14/15.6/18.5/21.5	审 核 人
订单数量：	1000PCS	
物料编码：		
制作时间：	2015-04-15	
图纸比例	1：1	