

Egg Boiler

Instruction Manual

Overview

Take the hassle out of hard-boiled eggs with our incredible Rapid Egg Cooker. From boiled to poached, our compact countertop cooker does it all!

Features

- 1) Fashion appearance, flawlessly cooks up to 1~7 eggs once
- 2) It is available to steam egg, cook liquid egg, bun and other food
- 3) Cooks Hard, Medium & Soft Boiled eggs
- 4) A pin in the bottom of the measuring cup, protect eggs from bursting, keep eggs fresh and nutritious
- 5) Automatic temperature control to protect from dry heating double and cleaning
- 6) Non-stick, on-stain surface for easy cooking and cleaning
- 7) On/off switch with indicator light
- 8) Product size: 200x165x190mm

IMPORTANT SAFEGUARDS

Basic safety precautions should always be taken when using electrical appliances, including the following:

1. Read all instructions before use.
 2. Do not touch hot surfaces such.
 3. To protect against electrical shock, do not immerse cord, plug or the product in water or any liquid. Make sure all electrical connections are kept clean and dry.
 4. Unplug appliance from wall outlet when not in use and before cleaning.
- Always allow appliance to cool completely before putting on or taking off parts and before cleaning.
5. Close supervision is necessary when the egg boiler or any appliance is in use near children. This product is not intended for use by children.
 6. Do not operate this appliance when the power cord or plug is damaged, or if it malfunctions, is dropped or has been damaged in any manner. Return the appliance to an authorized service station for examination, repair, or electrical/ mechanical adjustment.
 7. Do not let cord hang over edge of table or counter.
 8. Do not place egg boiler on or near a gas or electrical burner or heated oven.
 9. Do not use outdoors.
 10. Do not use this appliance for other than intended use.
 11. Always use egg boiler on a flat, sturdy, heat resistant surface.
 12. Use extreme caution when moving appliances containing hot oil or other hot liquids.
 13. To disconnect, remove plug from outlet by grasping the plug and pulling gently. Never tug on the cord to disconnect.
 14. Do not use attachments or accessories other than those supplied by the manufacturer. Using

incompatible parts creates a hazard.

15. Do not use the appliance near combustible materials such as curtains etc.

HOW TO USE

Before First Use:

1. Remove all packaging materials and make sure items are received in good condition. Tear up all plastic bags as they can pose a risk to children.

2. With a damp cloth, wipe the body of the egg boiler, egg holder and water tray clean.

3. Wipe the surface of the egg holder and water tray clean with a damp cloth.

* Do not use abrasive cleaners or scouring pads.

* Do not immerse the base, cord or plug in water at any time.

To Operate Egg boiler:

1. Place the egg boiler upright on a dry, sturdy and flat surface.

2. Fill the provided measuring cup with cold water depending on the desired hardness and the number of eggs, using the respective markings on the cup. For example, if you want 4 medium boiled eggs, fill water cup to the line that corresponds with the medium egg line and the number 4. Pour water into the water tray.

3. Pierce the blunt end of the eggs with an egg pierce, as it prevents the eggs from bursting or cracking during the cooking process.

4. Place eggs on the egg holder. Place the egg holder with the eggs on the water tray and close the lid.

5. Plug into the wall outlet and turn on by pushing the ON/OFF switch. The control light will illuminate.

6. When the eggs are ready, the buzzer will sound, and the light will turn off, Equipment automatic switch it off.

7. Remove the egg holder with the eggs from the water tray and hold them under cold water to end the boiling process. Otherwise the eggs will continue to boil and become harder. You may now serve the eggs.

8. After a short cool-down time of approximately 5 minutes, you may use the egg boiler again.

9. Unplug the appliance after use.

Note: The markings on the water measuring cup apply to medium size eggs.

Depending on the size, number and freshness of the eggs, the results may differ slightly.

Caution: During use, the steam hole on the top of the lid gets very hot. Do not touch or cover steam hole when in use.

To Clean:

1. Unplug unit from the electrical outlet.

2. Allow the appliance to cool completely before cleaning.

3. Wipe the body of the egg boiler clean with a damp cloth. Dry completely with a soft cloth.

4. Lid and egg holder can be washed and dried with a soft cloth.

* **Do not use abrasive cleaners or scouring pads.**

* **Do not immerse the egg boiler base, cord or plug in water at any time.**