

# F10 Deluxe 中英文-Quick Start Guide

折叠后尺寸: 49\*169mm

单色印刷, 80克书写纸

 
MeLE

## Quick Start Guide

F10 Deluxe



### Button Description

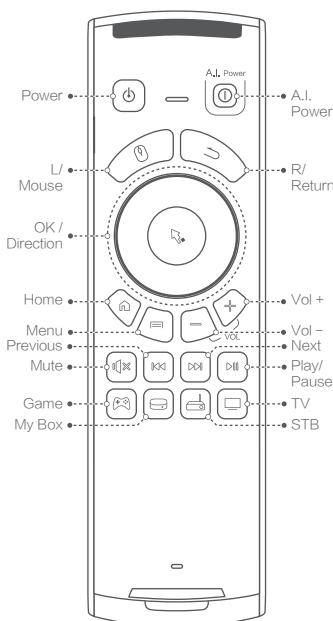


### Packaging list

F10 Deluxe Air Mouse	x 1
USB Receiver	x 1
USB Cable	x 1
Quick Start Guide	x 1

### Operating Instructions

#### Match with the USB receiver

 1. Plug the USB receiver into one of the USB Host on the player.

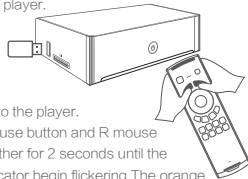

2. Place

F10 Deluxe

within 2cm to the player.

Press L mouse button and R mouse button together for 2 seconds until the orange indicator begin flickering. The orange indicator will go out in 2 seconds after the match process finished.

### Operating Instructions

#### Indicator

Button-press	Be flickering
Matching process	Be flickering
Success to match	Be flickering for 2 seconds
Fail to match	Be flickering for 30 seconds
Low battery	Be flickering
Standby mode	Go out

#### Working mode of the air mouse

My Box mode

Press My Box button to enter into My box mode. In this mode, Mouse is not available. And A.I.Power button is able to be learned. When in AirMouse mode, you can press Left/Right/Up/Down button to enter into My Box mode.

AirMouse mode

Press L Mouse button to enable AirMouse in My Box mode.

Game mode

Press Game button to enter into game mode in My Box mode.

STB Mode

Press STB button for 2 seconds to enter into STB learning mode. Press STB button to enable buttons learned in STB learning mode.

TV Mode

Press TV button for 2 seconds to enter into TV learning mode.

Press STB button to enable buttons learned in TV learning mode.

All buttons can be learned in the front of the Airmouse except Power / Game / My Box / STB / TV button. Please press My Box button to exit TV or STB mode when you want to use the mouse / remote buttons / game function / keyboard.

#### IR learning

1. Press TV or STB button for 2 seconds to enter into learning mode. The red indicator will be flickering every 1second.
2. Put TV remote control straight head to head to this air mouse, 2 to 3cm away.
3. Press the button which want to learn on the airmouse, red indicator will be flickering fast for 3times. then press the button on your TV or STB remotecontrol. When the red indicator stop fast flickering, it means button learning is completed.
4. Repeat step3 to learn other buttons.
5. Press TV button once to exit learning mode.

#### Sleep and Wake up

Air-mouse will enter into standby mode automatically while there is no any operation within 1 minutue. Press any button to wake up.

 
MeLE

## 快速操作指南

F10 Deluxe



### 按键说明

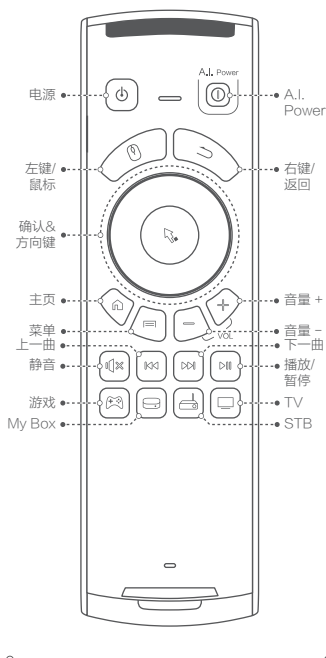

### 装箱清单

F10 Deluxe 空鼠	x 1
USB 接收器	x 1
USB 连接线	x 1
快速操作指南	x 1

### 操作说明

#### 与USB接收器配对

1. 将USB接收器接上主机;



2. 在距离主机2cm范围内, 同时按住空鼠正面的鼠标左键和鼠标右键, 直到空鼠侧面的指示灯开始闪烁, 配对成功后, 蓝色指示灯常亮2秒后熄灭。

### 操作说明

#### 指示灯

按键	闪烁
配对过程中	闪烁
配对成功	长亮2秒后熄灭
配对失败	闪烁30秒后熄灭
电量不足	慢速闪烁
待机	熄灭

#### 红外按键学习

进入/退出按键学习状态: 按下STB或TV键2秒, 空鼠左侧的红色指示灯开始闪烁, 说明已经进入按键学习状态。退出按键学习状态: 短按 STB 或 TV 键, 会退出按键学习状态。(支持学习的按键: 除了Power、Game、MyBox、STB、TV外, 空鼠正面的按键都可以学习)

1. 进入按键学习状态: 按下TV键2秒, 空鼠左侧的红色指示灯开始闪烁, 说明已经进入按键学习状态;
2. 将电视机遥控器与空鼠顶部直线正对, 距离约3cm;
3. 按下空鼠上A.I.Power, 红色指示灯快速闪烁, 再按下电视机遥控器上的电源键, 红色指示灯由快速闪烁恢复成慢闪, 表示电源键学习成功。
4. 重复步骤3, 可继续学习其他按键。
5. 按键学习完成后, 短按TV键退出学习状态。

#### 红外学习按键使用:

STB模式: 如果是长按STB键进入学习状态, 任何时候, 按下STB键进入STB模式, 就可使用在STB模式下学习的按键;

TV模式: 如果是长按TV键进入学习状态, 任何时候, 按下TV键进入TV模式, 就可使用在TV模式下学习的按键; 进入STB或TV模式后, 必须按MyBox 键退出STB或TV模式, 返回MyBox模式, 才能继续使用空鼠功能, 如鼠标模式、按键模式、游戏模式、键盘。

#### 鼠标、按键、游戏模式切换

鼠标模式: 除了STB/TV模式外, 任何时候, 按下鼠标左键, 空鼠进入鼠标模式;

按键模式: 除了STB/TV模式外, 任何时候, 按下空鼠正面上、下、左、右键, 空鼠进入按键模式;

游戏模式: 除了STB/TV模式外, 任何时候, 按下Game键, 空鼠进入游戏模式。游戏模式主要用于玩体感游戏。进入STB或TV模式后, 必须按MyBox 键退出STB或TV模式, 返回MyBox模式, 才能继续使用空鼠功能, 如鼠标模式、按键模式、游戏模式、键盘。

#### 待机与唤醒

停止使用空鼠超过1分钟, 空鼠会进入待机模式, 按空鼠上任意按键可唤醒空鼠。