Video Camera Operation Manual



1. Camera2. Indicator3. Ventilation hole4. Microphone5. IF card6.Power switch7. Recording8. Reset9. Ventilation hole10. USBIndicators:Red light on---Power switch onRed light off---Power switch off

Blue light on---Recording standby

Red light off---Power switch off Blue light flash---Recording on

Green light on---Mobile phone connection mode (AP mode) Green light off---Router connection mode (STA mode)

Green light flash--- (STA mode) Camera unconnected to the router

Camera Operation:

Press NO\OF button, the machine starts up when the red light is on, and the red, blue and green light are all on after the system runs for 20 seconds (automatic recording will begin while the blue light flashes at starting up when IF card is loaded). Press the Recording key for 2 seconds to stop and save the recorded file when recording is going on and blue light is always on. Press the recording key again for 2 seconds when required. Red light is off when long pressing the power switch after starting up, and the machine is off.

Long press Reset button until the green light keeps flashing, then release the button, when the machine is abnormal due to inappropriate operation or other unknown reasons. The machine is restored to factory settings and restarts. The camera enters mobilephone connection mode (AP mode)

For software downloading and troubleshooting, please visit <u>WWW.QR-CAM.COM</u>.

I . Installation of Mobilephone APP Software



Android Client



Apple Client

As the software scanned and downloaded is a compressed file in rar format, and the mobilephone must be installed with Winrar. The QR code scanning and downloading is not available for Tencent-related browser.

1. You can download Android scan packing and QR code on the Manual by visiting <u>www.qr-cam.com</u>.

2. You can also search QR-CAM software in App Store and download iPhone scan packing and QR code on the Manual.

3. For jailbreak iPhone, visit <u>www.qr-cam.com</u> and click iPhone client for downloading. When QR-CAM software is installed, the following icon will appear on the mobilephone as in Fig. 1.



II. Point-to-Point View of Camera & Mobile phone (AP Mode)

Long press Power button, the red light is on for starting up, and the red, blue and green lights are on after the system runs for 20 seconds. Turn on WLAN of the mobilephone. Search for machine SSID hotspot of IPCAM-AP-8000******, and input password 12345678; open QR-CAM client software when connection is successful. Enter the page in Fig. 2,

Q	设备列表	0	Q,	设备列	刘表	0
			IPCAM_ 80003069:1	80003069 92.168.1.168		(j) >
			IPCAM_ L3NHXZAUS	80003069 53NZ5JLW4NLJ		(i) >
			无线局 扩 无线局域网:IPCAM			9?
La	nguage 报警设置			确定 取消		
Fig. 2				Fia.	3	

Click the search icon on the top left corner, a black and blue item column appears and WLAN dialogue box popup as shown in Fig. 3, click "Cancel" to view the camera and enter the page in Fig. 4. Select "Yes" to enter "WIFI setting" page.

Q	设备列表	0	✓ 设备列表 功能列表
IPCAM_80 80003069:192	0003069	(i) >	实时预览
IPCAM_80003069 L3NHXZAU53NZ5JLW4NLJ		(j) >	远程回放
			摄像机设置
Lan	guage 报警设置		
	Fig. 4		Fig.

Click the black TextField in Fig. 4 to enter the page in Fig. 5. You can operate accordingly on the camera.

III. Camera & WLAN Connection View (STA Mode)

As in the above-mentioned steps, enter the page in Fig. 5 when the mobilephone is successfully connected with the camera, click "Camera Settings" to enter the page in Fig. 6, and click "WLAN" to enter Fig. 7 and select "STA Mode". Find the router WIFI hotspot to be added as shown in Fig. 8, input the router WIFI password and click "Complete".

✓ 功能列表 设备设置		< 设备设置	无线局域网	完成	< 设备设置	无线局域网	完成
640x480(15fps)		无线局域网			STA模式		~
		无线局域网					
报警设置					AP模式设置		
移动检测	\bigcirc	选取模式			WIFI名称	IPCAM_AP_80002	FB2
		AP模式			WIFI密码	•••••	
声音检测		STA模式		1			
邮件发送	\bigcirc	0			加入网络		
		AP模式设置			TP-LINK-M 信号强度:0	OSAIC	
无线局域网		WIFI名称	IPCAM_AP_8000	2FB2	TSD		~
无线局域网	>	까뜨ळ피			信亏强度:57 Buffalo-G-F	BAC2	
		WIFI密码			信号强度:7		
Fia. 6		Fia. 7		Fia. 8	}		

The camera restarts. The green light is always off (indicating STA Mode) after 20 seconds, the camera has been connected with the router successfully. The user's mobilephone is also connected with the above wireless router. Return to the "Equipment List" page in Fig. 4. Click the search icon on the top left corner to update the equipment list, and click the black TextField in the LAN to visit the camera. Click the blue TextField if the mobilephone and the camera are not in the same network (P2P link) for a remote access to the camera.

IV. Computer Client View

1. **Install Computer Client:** Connect the camera with the router (i.e. STA Mode), the computer and the camera are in the same network, input 192.168.1.168 in the computer

IE address field, and the webpage that appears is as shown in Fig. 9 below. Icon will appear on the desktop after ActiveX control is downloaded and installed. If the computer and the camera are not in the same network, visit <u>www.qr-cam.com</u> for downloading and instillation to install computer client.





2. Recorded File Playback: Computer client installation will simultaneously install its

own AV format player . The file recorded by the camera will require this AV player for playback.

3. View Camera in the LAN: Connect the camera with the router (STA Mode). Click the

search icon at the lower right corner of the window, equipment IP address will appear in the unused equipment list. Start the equipment by double clicking the IP address to view the real-time picture. Click the real-time video window to show various function keys on top of the window. Photgraph file folder can be accessed from the "Snapshot Management", and video file information saved on the computer can be viewed through "Local Playback File"

4. View Camera through Remote Network (P2P Link): The camera and the router are connected (STA Mode). When the camera and the computer are not in the same network

environment, open the computer client, click the icon at the lower right corner to pop up a setting window, click "Add Equipment", select "P2P Link Mode", input UID code (UID code is the black text below the blue TextField in Fig. 4, which is also P2P account) at the "Equipment Address\UID". Input password 123456, click "Save", and then click "Yes". New equipment then appears in the unused equipment, and remote real-time pictures can be viewed by double clicking the new equipment to start it.

VI. Setting of Password & Name

1. WIFI Hotspot Name and Password: Enter the page in Fig. 7 after the mobilephone is connected with the camera. WIFI hotspot will be a new name when searching for the camera after WIFI name is revised. The revised password of the original password 12345678 of WIFI must be 8 figures. The camera will restart after revision. If the new password setting is less than 8 digits, the camera will remain the original password. If "Unable to add" is prompted when trying to re-add the WIFI hotspot after the password is revised, then the hotspot must be "deleted" or "ignored" before searching and adding hotspot.

< 设备列表	编辑摄像机	完成
BRANK		
名称	IPCAM_80003069	
摄像机IP	80003069.tnox.cc	
数据端口	7105	
网络端口	8105	
用户名	admin	
密码	••••	
	Fia.10	

2. Name of Camera: Click the icon i on the rigth in Fig. 4 to enter Fig. 10.
"Name" can be revised by the user. The revised name is the one shown in Fig. 4. The name will not be refreshed or replaced after is is revised. The user can not revise by himself "User Name" admin and "Password" 123456 in Fig. 10. It would be impossible for him to view the video picture of the camera if it is revised.

3. Password Setting of Computer Client: The default user name admin can not be revised. Open the computer client; click "System" on the top right corner of the window to select password modification. When the password is modified, it is necessary to input the new password when opening and/or closing computer client.

Notes:

1. The AP Mode and STA Mode of the camera are two different modes, and the camera must be restarted to take effect after conversion.

2. When you want to visit the camera, you need to know what the WIFI mode of the camera is (AP or STA mode), then the corresponding connection mode is used to connect to the camera;

3. When connecting the camera with wireless WIFI, it may lead to connection break, machine restart or unsmooth wireless transmission due to WIFI signal strength, the surrounding environment of the camera, the wireless router's compatibility and performance, etc. Please solve the relevant problems according to the actual situation;

4. The built-in battery of the machine can supply the machine in a short period of time. A low battery voltage may lead to restart or unstable working conditions of the machine. Please connect the machine to an external power supply when it is working for a long period of time;

5. When a camera breaks down due to operation or setting error or other unknown reasons, long press the Reset button and wait until the green light begins to flash before releasing the button, then the machine will be restored to factory setting and restarts.