


感谢您使用我们的产品，为了您能够安全使用这款新产品，请在使用前仔细阅读使用书。请保管此说明书以备将来使用。请勿随意尝试拆卸或改装本机！

Thank you for using our products. For the safe of use of this new product, Before operating this unit, please read these instructions completely and save this manual for future use. Please do not attempt to disassemble or modified the machine!

产品示意图 SCHEMATIC DIAGRAM

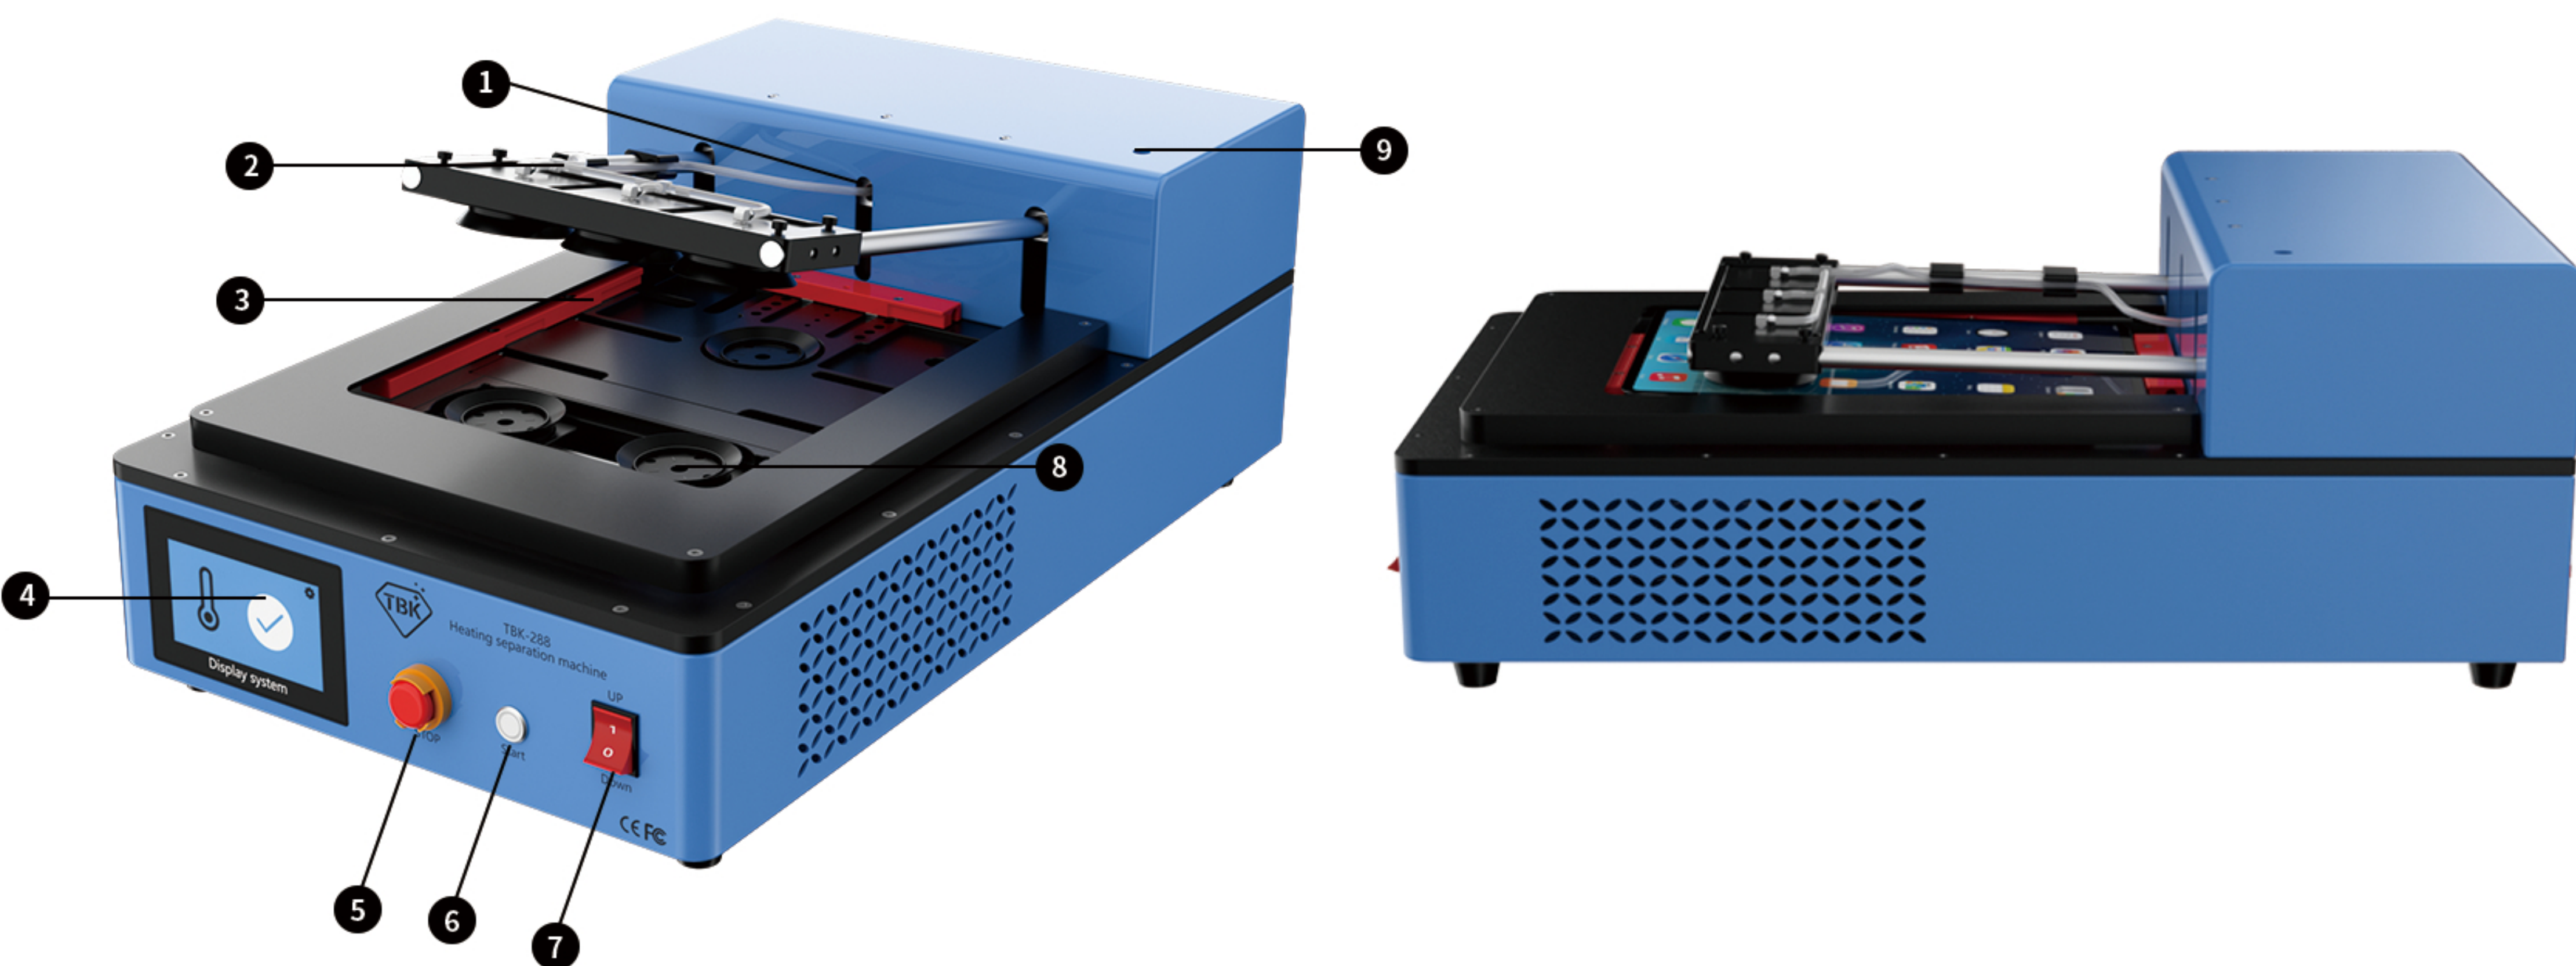

- ① 智能程序控制顶升/Intelligent program control jacking
- ② 真空管/Vacuum tube
- ③ 自动夹具恒温加热
Automatic fixture constant temperature heating
- ④ 智能液晶屏/Intelligent LCD screen
- ⑤ 急停/Emergency stop

- ⑥ 启动/Start
- ⑦ 开关/Switch
- ⑧ 真空吸盘/Vacuum sucker
- ⑨ 破真空/Vacuum breaking

规格参数 PARAMETER



产品型号/Product model : 288L

品 牌/Brands : TBK

工作电压/Operating Voltage : 110/220V

产品功率/Product power : 800W

产品尺寸/Product Size : 355*600*220mm

包装尺寸/Package Size : 430*700*320mm

产品净重/Net weight of product : 19.5kg

产品毛重/Gross Weight : 27.4kg

产品介绍 PRODUCT INTRODUCTION

新款TBK-288L全自动智能平板屏幕拆卸平台，搭配万能模具无需适配对应模具、无限拓展，一键启动，全自动完成工作，边框精准恒温加热，智能程序化控制顶升，可自动与手动顶升切换，内置真空泵上下真空吸盘强劲吸力，智能液晶屏控制，操作简单易上手，一机在手，修屏无忧！

New TBK-288L fully automatic intelligent iPad screen removal platform, with universal mold, does not need to adapt to the corresponding mold, infinite expansion, one key Start, fully automatic completion of work, accurate constant temperature heating of the frame, intelligent programmed control jacking, automatic and manual jacking switching, built-in real The upper and lower vacuum suction cups of the air pump have strong suction, and the intelligent LCD screen control makes the operation simple and easy to use. One machine is in hand, and there is no worry about repairing the screen!

操作步骤 OPERATING INSTRUCTIONS



- YX加热温度80°C
- 真空设置最高50Kpa
- 加热时间60~300S
- XY轴电流设置200mA
- 上顶次数设置15次

智能启动

1. 插上电源线，打开电源开关
2. 按下急停旋钮，等待1min左右让拉升复位（上升不动时则复位完成）
3. 平板放入万能模具中，旋转急停旋钮弹出
4. 按下启动按钮，开始智能拆屏

设置参数


1. 液晶屏点设置按钮（密码：26888），进入参数设置
2. 设置加热XY（两侧与中）温度与加热时间
3. 设置智能程序顶升次数
4. 按下启动按钮，开始智能拆屏
(如无法启动，则需手动按下手动顶升按钮使智能拉升到顶端或设置界面按下上顶按钮)

Smart start

1. Plug in the power cord and turn on the power switch
2. Press the emergency stop knob and wait for about 1min to reset the pull-up (when the lift does not move, the reset is completed)
3. Put the flat plate into the universal mold and turn the emergency stop knob to pop up
4. Press the start button to start intelligent screen removal

Set parameters

1. Click the setting button on the LCD screen (password: 26888) to enter the parameter setting
2. Set the heating XY (both sides and middle) temperature and heating time
3. Set the jacking times of intelligent program
4. Press the start button to start intelligent screen removal
(if it cannot be started, you need to manually press the manual jacking button to make the intelligent pull up to the top or press the top button on the setting interface)

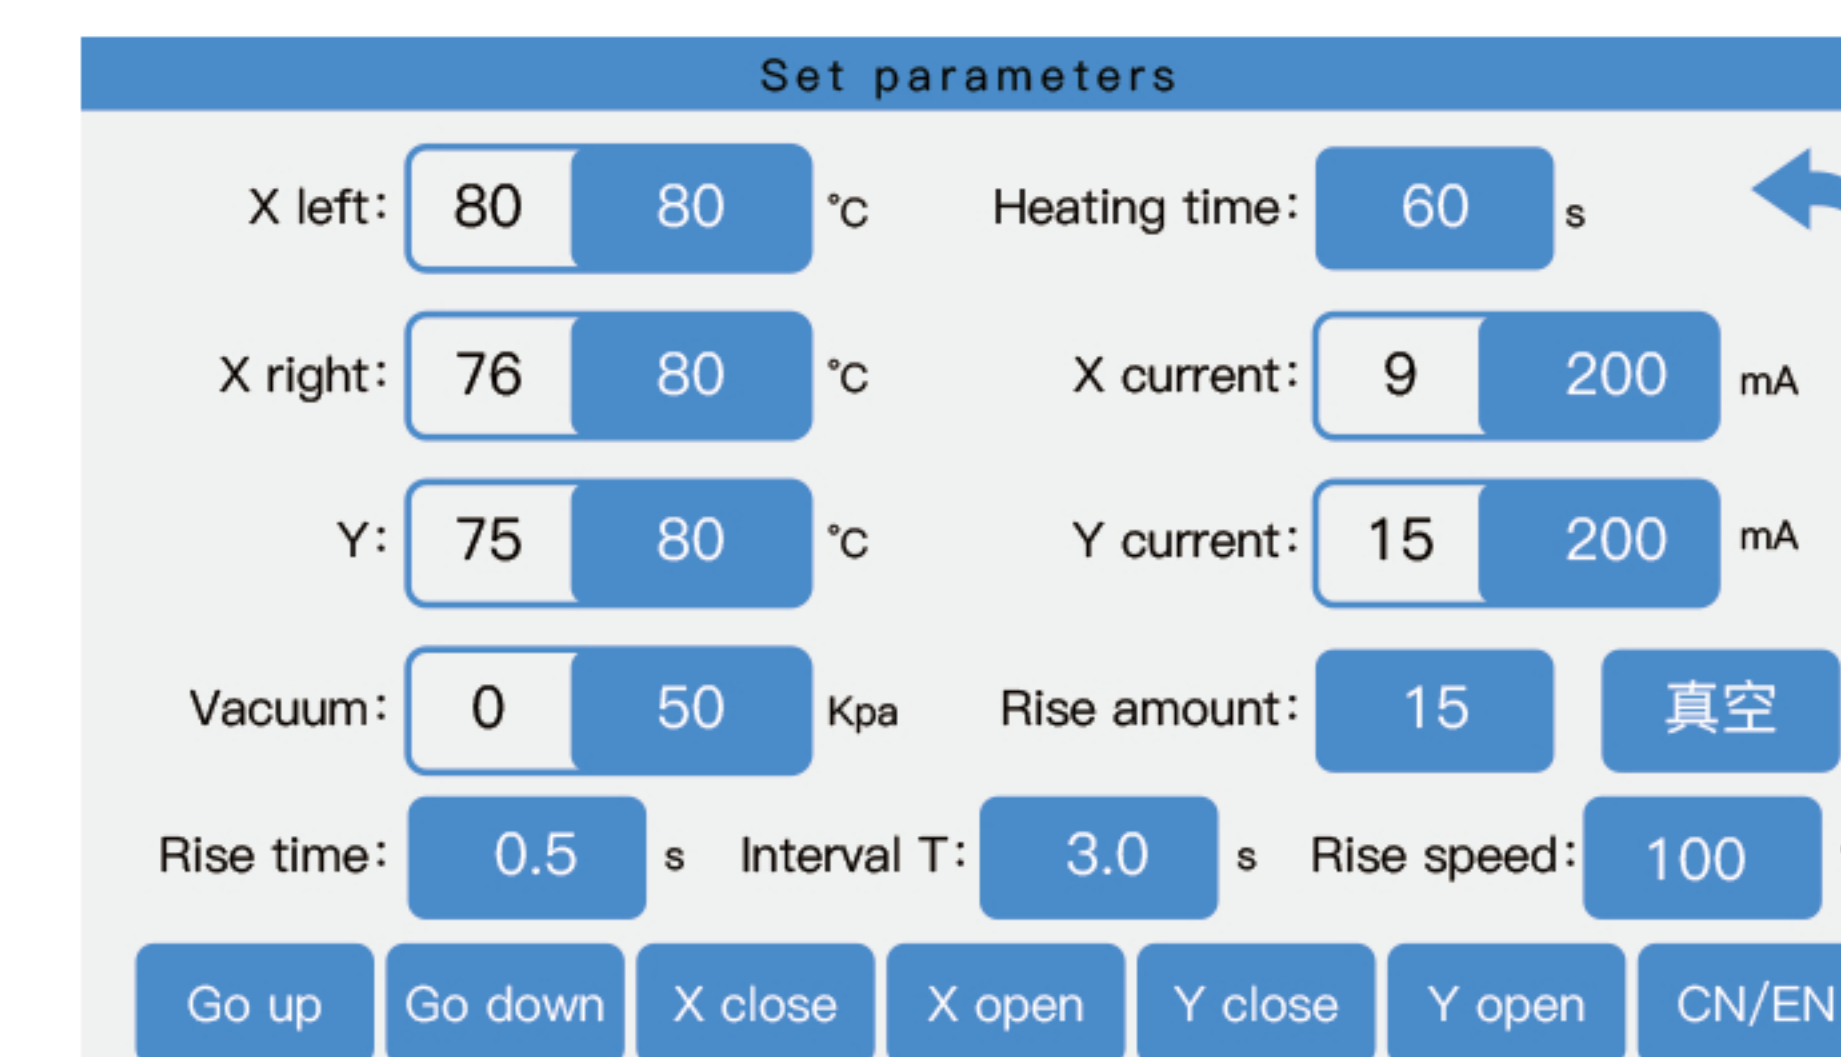

- YX heating temperature 80 ° C
- Vacuum setting up to 50kPa
- Heating time 60~300s
- XY axis current setting 200mA
- Set the number of times to top 15 times