 




使用说明书





- 1、选择放置音箱的合适位置,将音箱底座的贴纸撕掉,将 底座粘贴于头盔上并压紧。
- 2、将音箱放入底座, 按下音箱并顺时针方向转动, 听到轻 微的"咔"声后,即表示音箱于底座已经连接好。 注意: 为避免雨水灰尘等入侵, 请将充电口朝下。

BT配对步骤

- 1、长按多功能旋钮按键2秒, 蓝灯闪烁3下, 音箱开机:
- 2、配对时,将音箱与手机的距离控制在1米范围内:
- 3、在手机BT搜索界面找到"H2R",选择即完成蓝牙配对; 4、配对完成绿每灯5秒快闪2次。

当音箱与手机距离超出有效距离(10米或33英尺)时,绿灯常 亮, 音箱将断开连接, 5分钟内再进入范围, 自动连接并自动 播放。音箱在无连接情况下5分钟,自动关机。

充电方式

用标准的USB TypeC充电线 (随包装附送一条) 将音箱和USB 充电器连接即可充电。大约2小时可以充满, 充电时红灯常亮, 充满电后蓝灯常亮。

- 1、由于电池在存储过程中有可能损失电量,建议在第一次使 用前先给耳机充电。
- 2、充电过程中请谨慎使用音箱。
- 3、长时间不使用,建议每个月充电依次,保持电池寿命。
- 4、红灯每2秒闪一次: 电量不足, 请充电。

包装配件图









麦克风X1 产品说明书X1

播放功能介绍



- 1、长按多功能键2秒开机(开机后长按关机);
- 2、播放音乐时,单击多功能键暂停,再次单击播放音乐;
- 3、有电话进入时,单击多功能键接听,通话中,单击多功能 键中断通话,双击多功能键挂断电话:有电话进入时,长按多 功能键2秒拒接电话;连接状态下,双击多功能键重播最后-



1、播放状态下,向右(顺时针方向)旋转一下键盘即松开, 播放下一首;向右(顺时针方向)旋转不松开,增加音量; 2、播放状态下,向左(逆时针方向)旋转一下键盘即松开, 播放上一首;向左(逆时针方向)旋转不松开,减小音量。

扬声器类型: 骨传导技术扬声器 待机时间:长达10天 播放时间:长达5小时(80%音量) BT版本: 5.2 有效距离: 10米 电池容量: 400豪安 充电时间: ≤2小时

按键功能	音箱状态	按键操作	英文提示音
于机	关机状态	天按/杉多功能能	Power ON
	与手机连接成功	在手机应牙提索思面地到"ER ",选择该设备的完成签分配对	connected
	与于机连接场开		disconnected
关机	升机状态	长安/砂多功能超失机(无重接 和限列延用5分钟用动关机)	Power OFF
接改名等	遊楼状态下	单击多功能键	1
海半功子	连接状态下	长按2秒多功能键松子启动	189
安电	未見活け		用註 鄉
透明	未用活时	单 而多功能键	1
448	活力中	吸出多功能键	1/2
圧変电器	来巴迈时	关度2秒多功能键	(8)
直接	连接线态下	双击多功能被未号事按	7
中級打電話	打土电话时	单合多功能は	1
下一曲	把放状态	往右杆一下多功能键,下一曲	7
当量-	开机状态	往在长波多功能跳合量加	1935
上一曲	独放状态	往左打一下多功能键,上一曲	1
音量-	开机状态	往左长安多功能維育量液	1
音箱旋出遊樓花園		5分钟内再进入连接范围接自动。 同并且自动辐射	discorrected
四治主要化	3.4V2[NH	低于3.4V,一分4岁3压报答声。 3.2V严助关机	Please_Charge
24中		公車不关机、同正章機能	7

充满由组织等进划常見 *对于不同类型的BT设备,引文不同操作系统或者音乐播 放器,上述功能可能有所不同。

故障诊断及解决措施

问题	故障原因	解决措施
不能开机	检查电池是否充满电	给电池充电
不能连接	音箱进入待机模式	双击多功能键 或重新开机
无法配对	没有进入配对模式	长按多功能键2秒

存储与维护

- 1、请将音箱存放在阴凉、干燥的地方。工作温度-10-45 ℃ (14-113°F)。在冷/热环境或高度潮湿的地方工作会降低 电池的寿命
- 2、音箱长时间静置不用后,请在使用前先充电。
- 3、请勿将音箱放入水中,下雨天使用音箱后,请使用干净 的软布擦拭干净。
- 4、请勿用任何尖锐物体解除音箱。
- 5、请勿将耳机置于温度极高或极低的情况下。 6、请勿在潮湿的环境下给音箱充电。

1、用户购机时,随机附带说明书及保修单。用户填好后妥善

2、自购机之日起,一年之内音箱在正常使用下出现问题,持

3、若因人为,超过保修期及不可抗拒因素造成的故障,我将

4、产品出现故障需要返厂保修时,请联系我司。并填好具体

卡用户可免费享受保修服务。一下不属于保修范围:

产品保修单

产品型号: H2R

保修条款

C 机器正常磨损:

收取维修成本:

Warranty

Product model: H2R

Date of purchase

Purchase channel

contact number: Contact address:

Product brand:

User Name:

mail box:

制造商:

地址:

电话:

网址:

保管,作为保修凭证。

A 保修卡无销售单位签字或盖章;

B 人为或不可抗拒因素造成产品损坏;

的姓名、地址、电话及故障现象等有效信息。

用户姓名:

购买日推

 
联系电话

 
联系地址:

电子邮箱: 购买渠道:

HELMET SPEAKER

Manual





1. Select a suitable place to place the speaker, remove

sticker on the speaker bracket, and thenThe bracket is pasted on the helmet and pressed tightly.

2. Put the speaker into the bracket, press the speaker and turn it clockwise to hear A slight "click" indicates that Nbee: In order to avoid the invasion of rain and dpsaker has been connected to the bracket. please turn the charging pprt downward.

- 1. Press and hold the multifunction button for 2 seconds, the blue light flashes 3 times, and the speaker starts: 2. When pairing, control the distance between the speaker and the mobile
- 3. Find "H2R" on the BT search interface of the mobile phone, and select
- it to complete Bluetooth pairing; 4. Green flashes twice every 5 seconds after pairing.
- When the distance between the speaker and the mobile phone exceeds the eff ective distance (10 meters or 33 feet), the green light will always
- on, and the speaker will be disconnected. It will enter the range within 5 minutes, automatically connect and play. The speaker will shut down

Charging mode without connection.

- Connect the speaker and USB with a standard USB TypeC charging cable (one is included with the package)
 Connect the charger to charge. It can be fully charged in about 2 hours.
- The red light is always on when charging, and the blue light is always on after fully charging.
- 1. As the battery may lose power during storage, it is recommended to charge the headset before the first use.
- Please use the speaker carefully during charging.
- 3. If it is not used for a long time, it is recommended to charge it in every month to maintain the battery life.
- The red light flashes once every 2 seconds: the battery is low, please

Packaging accessories





Microphone X1 Manual X1

Play function



- 1. Press and hold the multifunction key for 2 seconds to start the machine (press and hold to turn it off after starting the machine);
- 2. When playing music, click the multifunction key to pause, and then
- 3. When a call comes in, click the multifunction key to answer the call. During a call, click the multifunction key to interrupt the call, and double-click the multifunction key to end the call; When there is a call, long press the multifunction key for 2 seconds to reject the call; When connected, double click the multifunction key to replay the last call.



- 1. When playing, turn the keyboard to the right (clockwise) once to it and play the next song; Rotate it to the right (clockwise) and do not
- When playing, turn the keyboard to the left (counterclockwise) to release it and play the previous song; Turn it to the left
- and do not release it to reduce Be volume.

Speaker type: bone conduction technology speaker Standby time: up to 10 days Playback time: up to 5 hours (80% volume) BT version: 5.2 Eff ective distance: 10m

Battery capacity: 400mA Charging time: ≤ 2 hour

Key functions Status Key operation

	Shutdown	Long press the multi-function key for 2 seconds	Fower ON
Power on	Successfully connected to mobile phone	Hind "H2F" on the mobile phone diluetooth search interface, and select the device to complete. Blustooth pairing	connected
	Discorrected		discorrected
Power off	Pawer on	Press and hold the multi-function key for 8 seconds to that down (no connection and automatic shadown after 5 minutes of paining limbour)	Power OFF
Pay/Paran	Corrected	Click the multilated on key	
Voice Assistant	Corrected	Long press the multifunction key 2 seconds to release and start	Dong
Incoming	incoming		D.OuOu
Answer	incoming	Click the mutifunction key	
Hargup	Orcal	Double dick the mutilization key	
Seet	Incoming	Long press the multi-function key for 2 seconds	D
Calibrack	Connocal	Double click the last number of the multifunction key to pull it again.	7
Interrupt	Caling	Click the multifunction key	
Ned	Playing	Turn the multifurction key to the right, next song	7
Volume -	Powe ron	Long press the multifunction key to the right to increase the volume.	Dong Dong
Presidus	Playing	Turn the multifunction key to the set, the previous song	ý
Volume-	Powe ron.	Long press the multifunction key to the left to decrease the volume	7
Out of connection range		If you enter the connection range within 5 minutes, it will automatically return and play	discornected
(so battery	Robur 3.4V	Linder 3.4V, one minute low voltage alarm sounce, 3.2V automatic shutdown	Please Charge
Charging		It can be played normally without shutting down when changing	7

Fully charged Red light turns to blue light, which is always on / *For different types of BT devices, different operating systems or music players, the above functions may be different

Fault diagnosis and solutions

Question	Cause of failure	Solutions
Unable to star	Check whether the battery is fully charged	Charge the batter
Cannot connect	Speaker enters standby mode	Double click the multifunction key
Unable to pair	Did not enter pairing mod	Long press the e multifunction ke 2 seconds

Storage and maintenance

- 1. Please store the speaker in a cool, dry place. Operating temperature - 10-45 °C (14-113 °F). Working in a cold/hot environment or a highly humid place will reduce the battery life.
- 2. Please charge the speaker before using it after it has been left unused for a long time.

 3. Please do not put the speaker into water. After using the speaker in
- rainy days, please use a clean soft cloth to clean it. 4. Do not use any sharp objects to release the speaker.
- 5. Do not place the headset at extremely high or low temperatures
- 6. Do not charge the speaker in a damp environment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause hamful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. 4 Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. 4

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.↓
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help. ₽

The device has been evaluated to meet general RF exposure requirement. The device can be u sed in portable exposure condition without restriction.