

FILM SCANNER



TON171 FILM SCANNER USER'S MANUAL

CONTENTS

Preface.....	1
Safety Precautions	1
Checking package contents.....	1
Product Structure Diagram.....	2
Slide and negative holder loading method	3
Operation Guided.....	5
Product Specification.....	12
Declaration.....	13

1. Preface

Thank you for purchasing this product ! Please read this user's manual carefully before using this product.

Please retain this manual for future reference.

Please use this product correctly

2. Safety Precautions

Do not disassemble this unit.

Do not touch inner part of the scanner after dropping or other damage suffering.

Do stop using it if there is any problem with the scanner, such as smoke or smell while using.

Do not clean the scanner with alcohol, gasoline, diluent and other organic solvent.

Do not use it in many dusts with the damp environment.

Do not overload the USB connections on your computer to avoid poor working of the scanner for overloading.

 
Please use films of standard size.

 
Cleaning: Please make sure the scanner is clean before using so as to produce a clean image.

To protect the machine and save energy, 30 minutes without continuous operation will automatically shut down in the state of power-on. Press the power button to turn again to normal use.

3. Check Package Contents

Please check your scanner package whether it contained as followed objects ,if lack of any object, please contact with retailers whom you buy the product from.

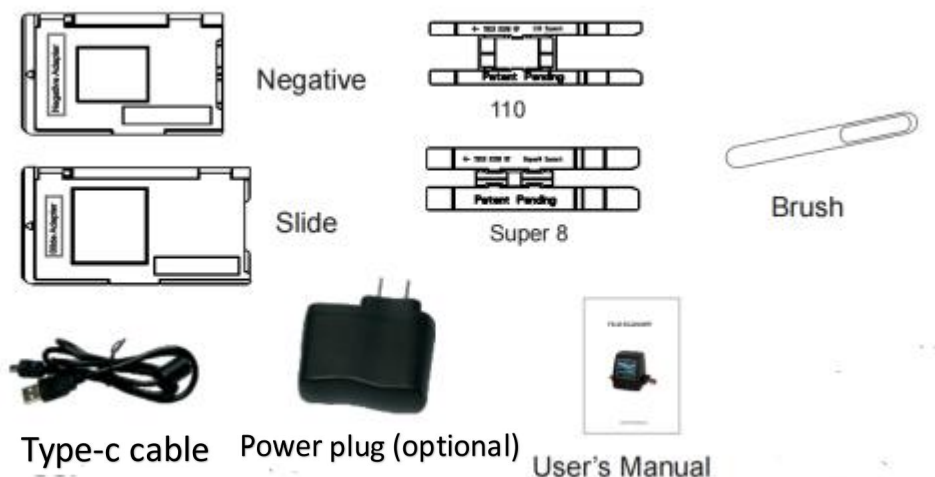

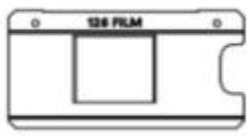

126



HD cable



Please stretch into clean from product side, when you use cleaning brush to clean backlight

4. Product Structure Diagram



 
negative slot




type-c power

HD out

5. Slide and negative holder loading method Loading Negatives

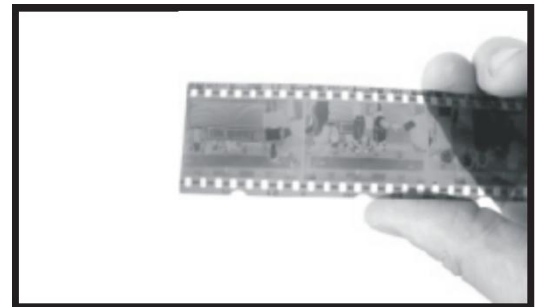

 a. Hold up the negative toward the light. Face the right side of the negative to yourself.

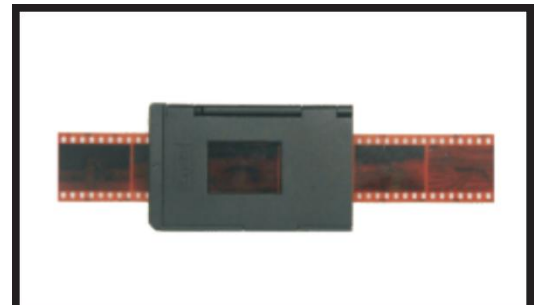


b. Take out negative holder out. Let the side with "open" logo face yourself, and let the side with "<" logo face down. Open



the negative holder, then place negative into recessed area in the holder. Close the negative holder and press the edges so that it locks in place.

c. Insert the negative holder into the slot on the right side of the film scanner .

 Loading Slides

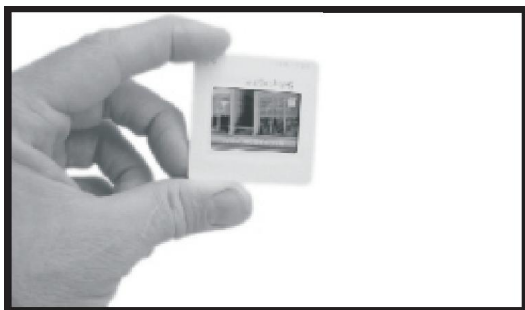

a. Hold up the slide toward the light. Face (we don't provide white small holder)



b. Take out slide holder out. Let the side with "open" logo face yourself, and let the side with "<" logo face down. Open the slide holder, then place slides into recessed area in the holder.(films also could be loaded as a strip into the slide holder, forming drawer type as below picture) Close the slide holder and press the edges so that it locks in place.

 
c.



Insert the slide holder into the slot on the right side Of the film scanner as shown.

6. Operation Guided

(1).Introduction of Menu

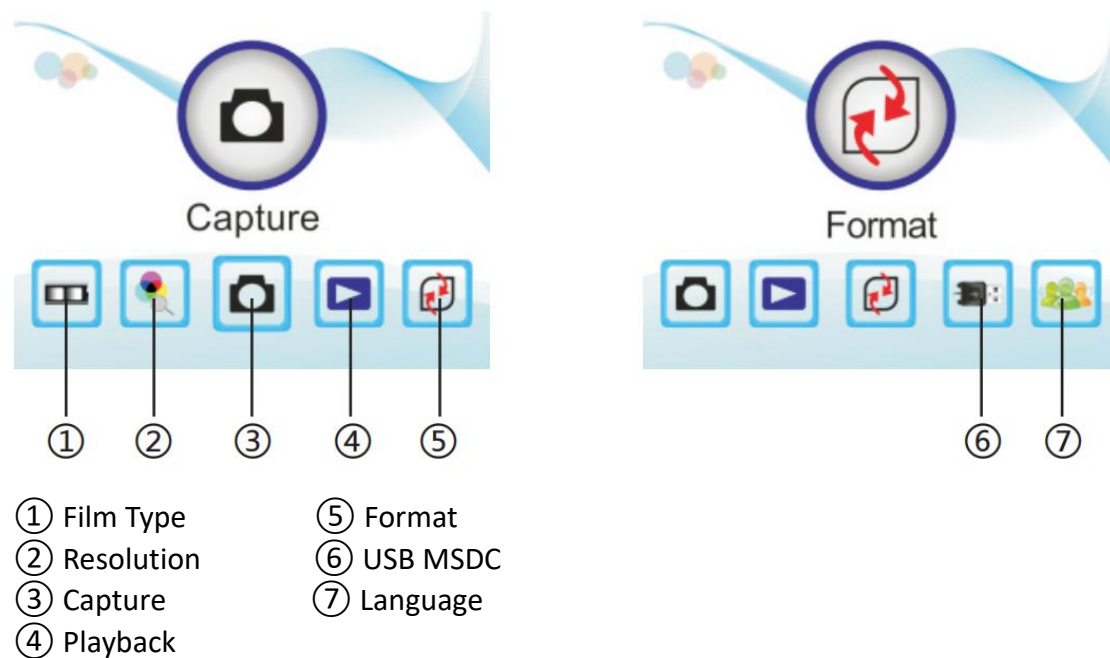



(2).Capture Picture

a.Before scanning please make sure the inner backlight panel is clean.

Note: You can use the provided brush to clean the screen.



  b. In main Menu mode press “OK/Enter” enter capture mode, you can press left button to mirror and press right button to flip the current picture. And you can press OK button to set Exposure. Then press Convert/Mode button again back to main menu.

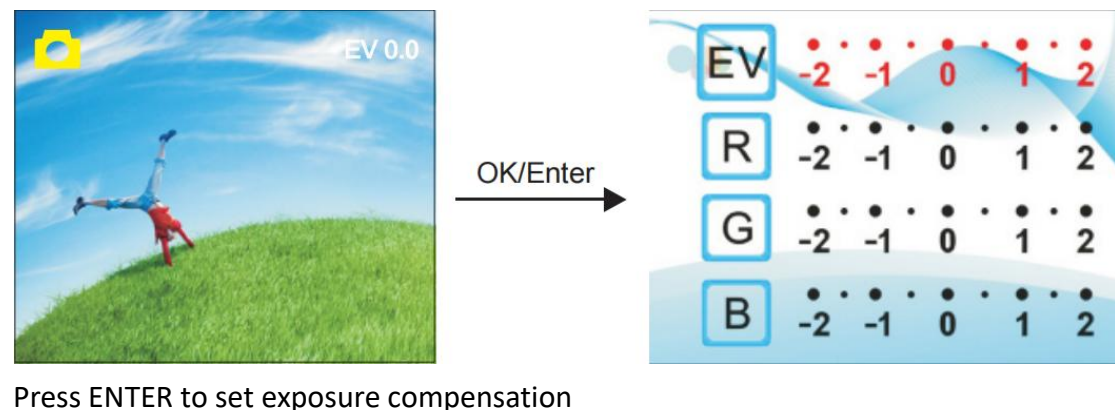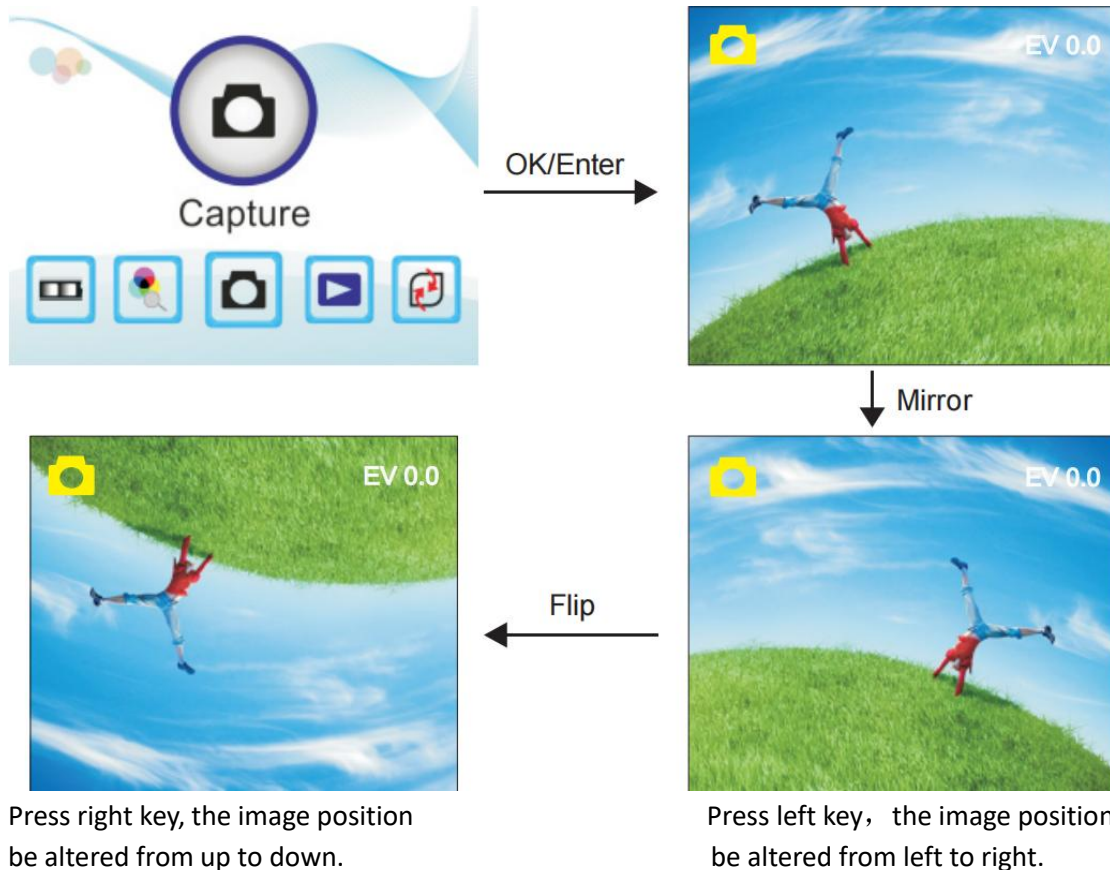

c. In main Menu mode press “OK/Enter” enter capture mode, then press “Mode” then press “OK/Enter” the picture would be captured.

(3).Operation Guide

 
In main menu, press “<” “>” , until  , then press “OK/Enter” you can chose

negative(110、135、126KPK)、slide(110、135、126KPK、Super8)、B&W(110、135、126KPK)



(4).How to playback captured picture

In main menu, press “<” “>” , until  , press “OK/Enter” enter the picture auto-playback mode press again to stop auto playback and you can view captured pictures manually, you can press “<” “>” to view; press “OK/Enter” again enter picture editing mode, you can rotate: delete, exit, save, and “home” back to main menu.

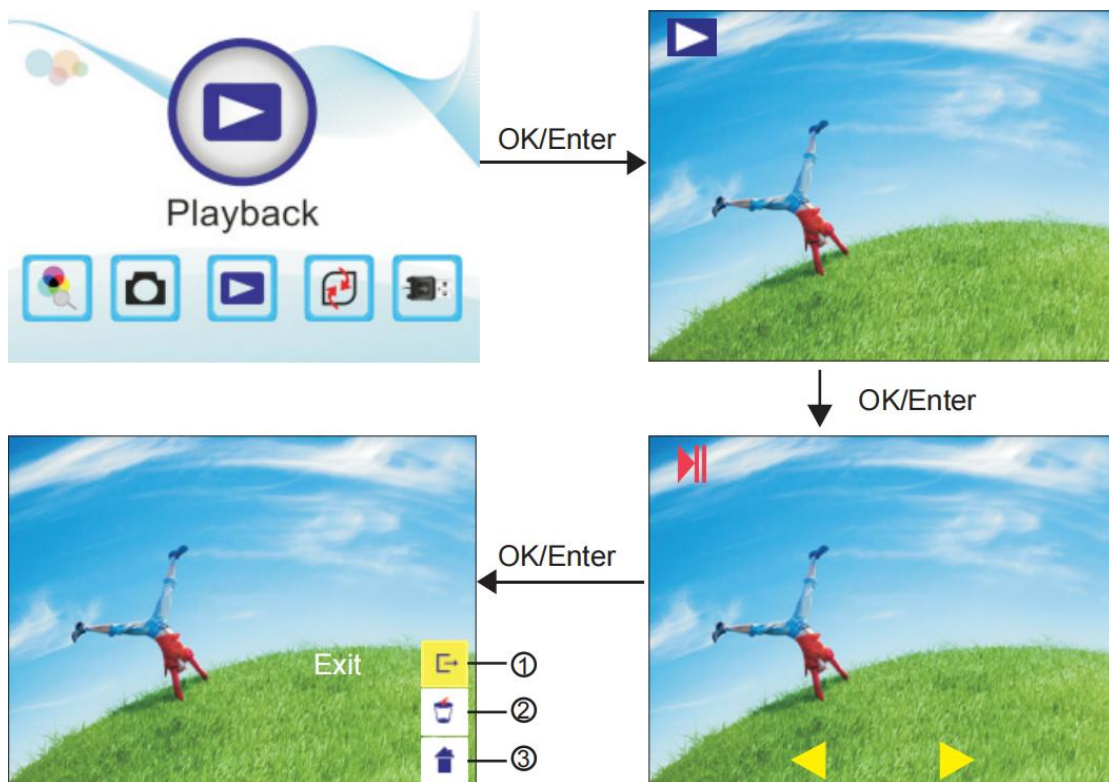


- ① Exit the submenu edit mode, back
- ② Deleting the current picture from memory card
- ③ Exit the submenu edit mode, back to scan

(5).Setting Language


Under main menu mode, press “<” “>”, until  , press “OK/Enter” to choose

 language, then press “<” “>” and “OK/Enter”, one of following 8 language can be set: English、French、German、Italian、Spanish、T-Chinese、S-Chinese、Japanese.

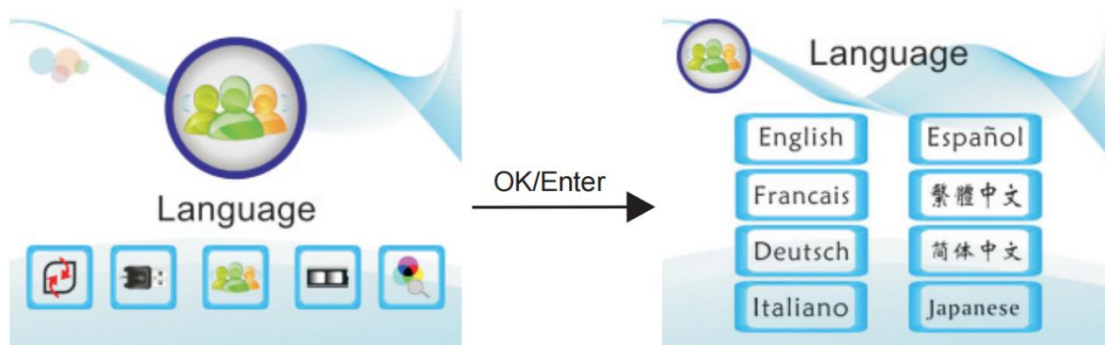


(6).Resolution Choosing

 Under main menu mode , press “<” “>” , until  , press “OK/Enter” to enter into Resolution Choosing Mode, you can choose 14M or 22M(interpolation)

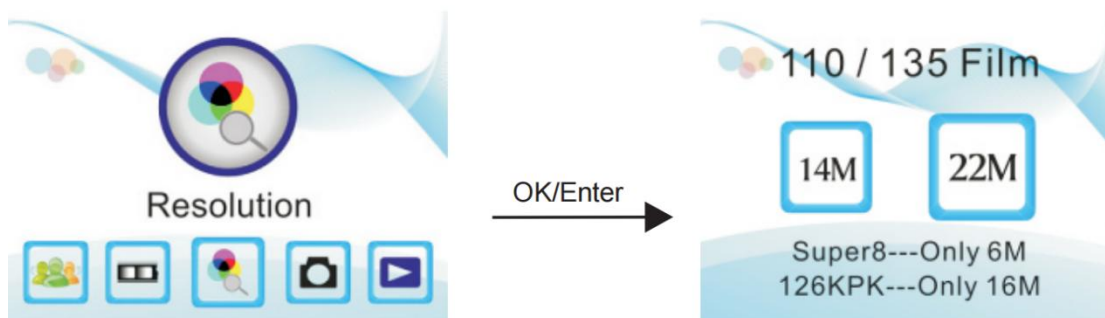

(7) .Formatting

 
In the main menu, press “</>” to "  ", press "OK/Enter" button to enter.

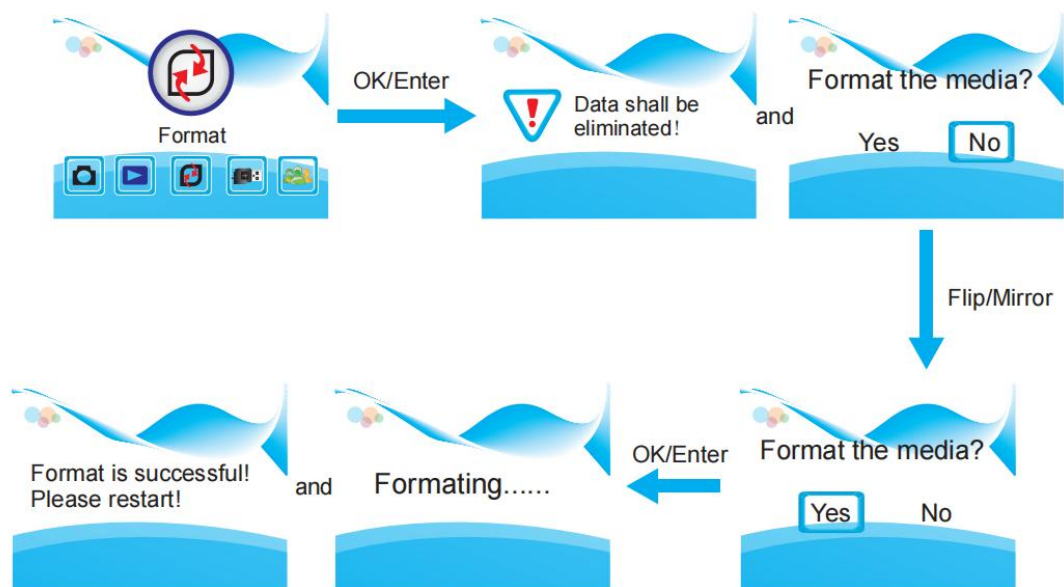

Note: After using this function, all the information in the Micro SD card will be deleted, please note it !

(8).Connect to computer

 Under main menu mode, press “<” “>”, until  , press “OK/Enter”. After successful connecting to computer, you can view and edit capture picture.

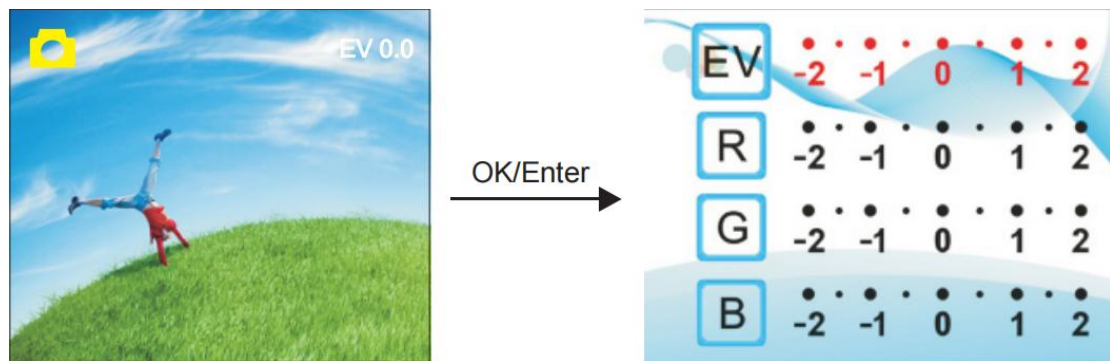

7. Product Specification

Function	Film scanner/USB MSDC
Interface	Type-c mini HD
Image Sensor	22.0 Mega pixels （4416*3312） 1/2.33" CMOS sensor
Display	Color 5" LCD HD
Exposure Control	Automatic / Manual (-2.0 EV~ +2.0EV)
White Balance	Automatic
Resolution	24 Mega pixels/ 48Mega pixels (interpolation)
Film type	135 Film(36*24mm)、

	126KPK Film(27*27mm)、 110 Film(17*13mm)、 Super8 Film(4.01*5.79mm)、 Monochrome、Slide
Picture Effects	B&W,Slides,Negatives
File format	Picture: JPEG
TV-OUT type	NTSC/PAL
Built-in memory	16GB
External memory card	SD card up to 32GB
Power Supply	DC 5V Adapter/ USB Port
Language	S-Chinese / T-Chinese / English / French /German / Italian / Spanish / Japanese
Support system	Windows XP/vista/Windows7/8/ Mac10.7.3 and above
Product Size	L132XW115XH110mm
Weight	330g

(8) .Declaration

Please note products specification is subject to improvement. Any changes of products will not make additional specify.