



1. Product Introduction

(The product will be continuously upgraded and improved, everything will be based on the actual product)

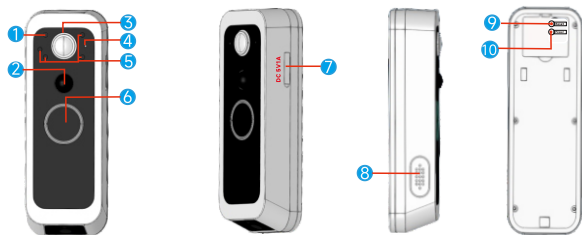

(Doorbell)

- 1. IR Sensor
- 2. PIR Human Detection
- 3. Lens
- 4. Microphone
- 5. IR Leds
- 6. Doorbell Button
- 7. 7.5V-1A Charging Port
- 8. Speaker
- 9. Pairing Button
- 10. Power ON/OFF

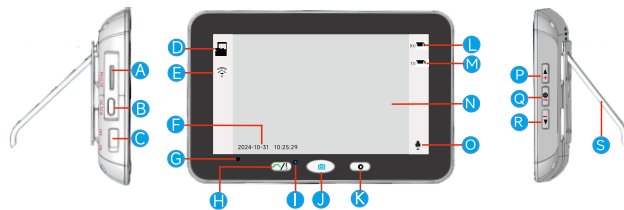

(Display Screen)

- A. TF Card Slot
- B. 5V1A Charging Port
- C. LCD Display Power On/off
- D. TF Card Logo
- E. Signal Indicator
- F. Date&Time
- G. Microphone
- H. Indicator light (red-charging, blak-full, blue-working)
- I. Home Button to View
- J. Video Playback
- K. RX Battery Level
- L. TX Doorbell Battery Level
- M. Display screen
- N. Intercom Indicator
- O. Volume +/- Up Button
- P. Menu Button/OK Button
- Q. R.Volume -/Down Button
- R. Bracket
- S. Bracket

Note:

- The product does not support fast charging. Do not use fast charging adapter to avoid burning out the product, please use a 5V1A adapter.
- The product has been paired at the factory and can be used directly. If you need to pair again, please refer to the pairing operation.

2. Product Pairing (Factory default pairing and can be used directly) Please note!

- Use a screwdriver to remove the anti disassembly screw at the bottom of the doorbell, as indicated by the arrow in Picture 1 (if the screw is not installed on the new machine, it can be removed directly).
- Move the doorbell host and the fixed backboard in the opposite direction (indicated by the arrow in Picture 2) to remove the fixed backboard.
- After separating the backboard and doorbell, find the reset button on the back of doorbell (indicated by the arrow in Picture 3) and press&hold for 3-5 seconds.
- The doorbell indicator light (indicated by the arrow in Picture 4) flashes alternately, the doorbell is pairing mode.
- Turn on the displayer and press&hold the volume+ (indicated by the arrow in Picture 6) for 3-5 seconds. The indicator light will turn on (indicated by the arrow in Picture 5), after the indicator light flashes alternately, and then release, the displayer shows device pairing, and then press the volume+ button, it will automatically enter pairing mode.



3. Function settings

Press the OK(menu) button on the right at the bottom of the settings page, and move the up and down buttons to select the appropriate option, press the OK button or answer button to access the individual function settings.

Menu page (Enter by pressing the menu page)

- 1. PIR
- 2. Ring
- 3. Time
- 4. SD Card
- 5. Language
- 6. Volume
- 7. Brightness
- 8. Color Mode
- 9. Watch
- Version

Back

2. Ring set (Set ringtone as needed)

- Doorbell: Ring 1 Ring 2
 - Ring 3 mute
 - Alarm: Ring 1 Ring 2
 - Ring 3 mute
- Move the cursor up and down, press the confirm key to select settings. Return button returns to the main menu

4. SD card settings Format SD Card

- PIR
 - Ring
 - SD Card
 - Language
 - Volume
 - Brightness
 - Color Mode
 - Watch
 - Version
- Press the confirm button to format the SD card. After the format is completed, the SD card can be formatted through SD card management.

Back

1. PIR Setting

- PIR
 - Ring
 - Time
 - SD Card
 - Language
 - Volume
 - Brightness
 - Color Mode
 - Watch
 - Version
- The blue background and white dots indicate the set functions, while the white dots indicate the pending options. Move the up and down buttons to select the function, press the confirm button to set it, move the cursor to return and click confirm can return to the previous page

3. Time setting


- YYYY MM DD hh mm
 - 1970 01 01 00 23
- Press the confirm button and move the up and down buttons to adjust the value. Once set, press the confirm button again, press the key to set the numerical value, then move the up and down keys to set other values. Once settings, press confirm to set all values, and then return to the main menu

5. Language settings (Set language as needed)


- English
 - 简体中文
- Move the cursor up and down, select the desired language, and press the confirm button. Save settings, return key to main menu

Back


6. Volume Setting

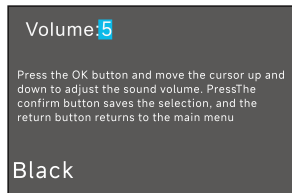


7. Brightness setting

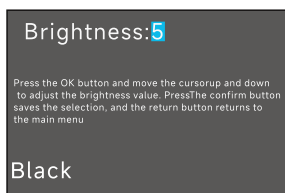

8. Color settings

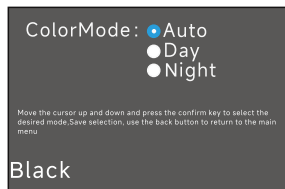

9. Monitoring Settings

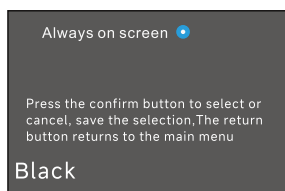

4. FAQ:

4.1.1. Usage (Press and hold the power button for 3 seconds to turn it on or off)

1. Intercom function (the doorbell and display screen need to be separated by a certain distance when intercom, otherwise there will be whistling noise that interferes with the intercom experience)

When press the outdoor doorbell button, the indoor display screen will ring with an image. At this time, press the answer button on the display screen, you can see the outdoor video and sound. Press and hold the answer button, and a microphone image will appear in the lower right corner of the display screen, you can communicate with outdoor visitors.

2. Home button function (wake up)

When the product is in sleep mode, press the home button on the display screen to wake up the outdoor doorbell to view or face to face communication.

3. Video playback function (please use a high-speed monitoring dedicated card in FAT32 format, inferior cards will affect the normal use of the device)

When the product is turned on, please click the playback button on the display screen, you can view the captured video playback.

4. After the setting is completed, the parameters will only take effect after pressing the doorbell to start the device or waking up the device once