

正反面印刷，风琴折，90*120mm

智能遥控打窝船



使用说明书

“渔”悦生活由我智创

配件介绍

天线

挂钩柱

船体电池

充电器

说明书

遥控器电池

遥控器


船体

船体专用尼龙收纳袋
(选配) 便于户外携带方便

成品尺寸：70*32*35cm
(标配)

“渔”悦生活由我智创

船体介绍

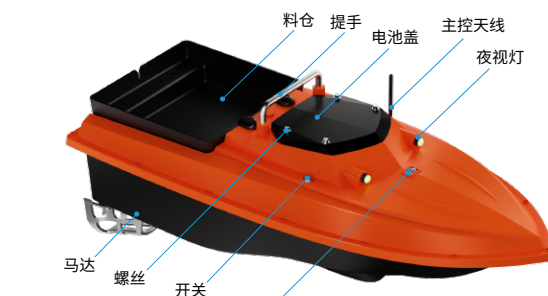

单手遥控器按键功能说明



功能	按键	操作	注意事项
船开机		首先将船装入电池仓,利用魔术贴固定好,电源接口对接插上.按船体开关开机.盖上电池盖,拧紧电池盖螺丝再使用。	船体须固定好才能使用,避免船体电池摇摆碰撞。
遥控器开机		将遥控器电池装入,然后按 2秒进行开机,再次长按两秒可关机。	每次使用完,请关闭遥控器,避免浪费电量。
前后左右行驶	360°方向摇杆	前后左右可通过遥控器上的方向摇杆推动行驶。	避免手上有水操作,导致遥控器进水。
定速巡航	摇杆往前	遥控器摇杆往前推,当前状态保持到3秒时,船会进入定速巡航状态,定速巡航时,摇杆左右摇可改变当前行驶方向,摇杆往后拨,可取消当前定速巡航状态。	当摇杆往前推不足3秒时,船不会进入定速巡航。
GPS信号		当遥控器显示屏的第一排出现 图标表示搜索到GPS信号,可以使用定位功能。	

校准校正

将船开到离岸边5-7米的距离,点按 ,船自动校准,往左转一圈,往右转一圈,转完停止,然后将船开回岸边。

每次使用前都需校准一遍,不校准,船行驶时会出现偏航。

设置GPS原点

在船搜索到GPS信号时,数字选择1号,长按设置原点 ,原点设置成功后,1号数字会出现一个深色框,表示设置成功

每次使用都需要设置原点,设置了原点,船才会返航和显示距离,且原点只能设置1号,未设置原点遥控器会滴滴响提示。

设置钓点

按遥控器的 选择想设置的数字钓点,然后长按 ,当数字出现深色框,遥控器会滴滴两声,表示设置成功。

钓点设置,只能设置2-99号数字。

行驶到GPS定位点

设置完定位点后,选择需要去的定位点数字,点按 ,船会自动行驶到定位点,同时显示屏上显示离定位点距离

如想取消当前行驶目的,摇杆往后拨,可取消当前动作。

定位点清除

长按 4秒,清除所有定位点。

清除完定位点后,遥控器会滴滴响提示定原点。

饵料仓控制

点按1号开仓键打开料仓。

饵料仓打开后,需手动回位,把饵料打回到固定位置时,点按 固定饵料仓

电磁阀开合控制

点按2号开仓键打开,1秒后闭合。

使用时,如有异物卡住,导致打不开,请清理后再使用

灯光控制

点按 打开灯光。

速度调节

点按 **M** 切换速度档位,单按一次滴一声一档,两声两档,三声三档。

遥控器与船配对

1.把船放平地上,2.长按着 键,然后按遥控器开机 键,3.把船开关打开,遥控器按键松手,4.等待3秒,船灯光常亮,配对成功。

在使用时,如发现控制不了船体,或者行驶偏航,可按说明配码。

“渔”悦生活由我智创

人机工学单手遥控手柄
流线型船体


航行更平稳

抗风浪性更强



电池使用与充电说明:

主机电池 (标配)

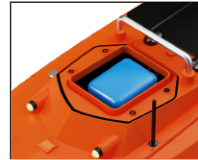

充电器充电

充电 (红灯) 充满 (绿灯)





Intelligent Remote-controlled Fishing Bait Boat



Operating Instructions

Hull Introduction

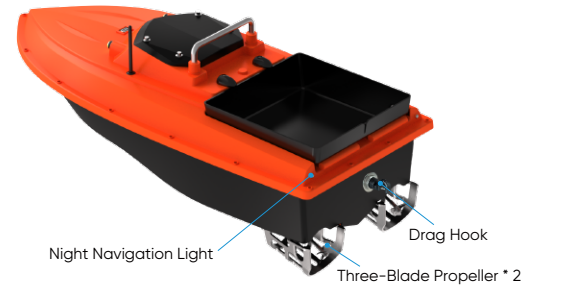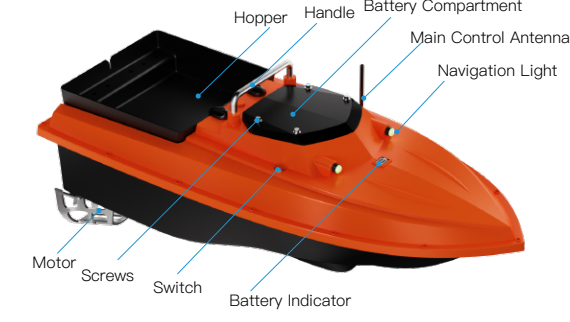

Single-Hand Remote Control Button Functions



功能	按键	操作	注意事项
船开机		首先将船装入电池仓,利用魔术贴固定好,电源接口对接插上.按船体开关开机.盖上电池盖,拧紧电池盖螺丝再使用。	船体须固定好才能使用,避免船体电池摇摆碰撞。
遥控器开机		将遥控器电池装入,然后按 2秒进行开机,再次长按两秒可关机。	每次使用完,请关闭遥控器,避免浪费电量。
前后左右行驶	360°方向摇杆	前后左右可通过遥控器上的方向摇杆推动行驶。	避免手上有水操作,导致遥控器进水。
定速巡航	摇杆往前	遥控器摇杆往前推,当前状态保持到3秒时,船会进入定速巡航状态,定速巡航时,摇杆左右摇可改变当前行驶方向,摇杆往后拨,可取消当前定速巡航状态。	当摇杆往前推不足3秒时,船不会进入定速巡航。
GPS信号		当遥控器显示屏的第一排出现 图标表示搜索到GPS信号,可以使用定位功能。	

Accessories Introduction

船体专用尼龙收纳袋
(Standard Configuration) 便于户外携带方便

成品尺寸：70*32*35cm
(Standard Configuration)

船体

说明书

天线

挂钩柱

遥控器

遥控器电池

船体电池

充电器

Usage Directory	Buttons/Icons	Operating Instructions	Precautions
Boat Power On	Power Button	First, insert the battery into the battery compartment. Secure the battery in place using the provided Velcro straps. Connect the power interface by plugging it in, then switch on the boat by pressing the power button on the hull. After ensuring everything is properly set, close the battery compartment cover and tighten the screws.	The boat's battery must be securely fastened before use to prevent any movement or collision within the hull, which could cause damage
Remote Control Power On		Insert the remote control batteries, then press and hold for 2 seconds to power on; press and hold again for 2 seconds to power off.	After each use, please turn off the remote control to avoid battery drainage.
Move Forward, Backward, Left, and Right	360° Direction Joystick	Use the direction joystick on the remote control to move the boat forward, backward, left, and right.	Avoid operating with wet hands, as water ingress into the remote control may occur.
Cruise Control	Joystick Forward	Push the remote control joystick forward and hold for 3 seconds to enter cruise control mode. While in cruise control, tilting the joystick left or right will change the current direction. Pulling the joystick backward will cancel the cruise control mode.	The boat will not enter cruise control if the joystick is pushed forward for less than 3 seconds.
GPS Signal		GPS signal and also operate the locator function when the first line, on the display of the controller shows this icon.	
Calibration/Correction		Drive the boat to a distance of 5-7 meters from the shore and tap the button to initiate automatic calibration. The boat will turn left once and right once, then stop after completing the turns. Drive the boat back to the shore.	Calibration is required before each use. Without calibration, the boat may deviate from its course.
Set GPS Origin		When searching for GPS signals on the ship, select number 1 and long press to set the origin . After the origin is successfully set, a dark box will appear for the number 1, indicating successful setting.	The origin must be set each time for the boat to return and display distance. Only number 1 can be set as the origin. If the origin is not set, the remote control will beep to prompt.
Set Fishing Spot		Press the button on the remote control to select the desired number fishing spot, then long press . When a dark colored box appears on the number, the remote control will beep twice to indicate successful setting.	GPS Fishing spots can only be set with numbers 2-99.
Navigate to GPS Coordinate		After setting the anchor point, select the number of the anchor point you want to go to, and click . The boat will automatically drive to the anchor point, and the distance from the anchor point will be displayed on the screen.	To cancel the current destination, pull the joystick backward to cancel the current action.
Clear Coordinate		Press and hold for 4 seconds to clear all coordinates.	After clearing all GPS coordinates, the remote control will beep to prompt setting the origin.
Hopper Control		Tap to open the bait compartment.	
Solenoid Valve Opening and Closing Control		Press the No. 2 button to open hopper; it will automatically close after 1 second	After opening the bait compartment, manually return it. When the bait is returned to the fixed position, tap the button to secure the bait compartment.
Lighting Control		Tap to turn on the boat's lights.	If an object is stuck and prevents opening, clean it before using again.
Speed Adjustment	M	Press M to switch speed gears. One press is one gear, two presses are two gears, and three presses are three gears.	Speed varies with water conditions and wind strength.

Ergonomic Single-Hand Remote Control Handle
Streamlined Hull


Steadier Navigation

Stronger Wind and Wave Resistance



Battery Usage and Charging Instructions:

Main Unit Battery (Standard Configuration)

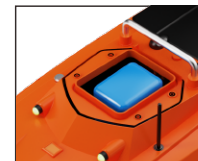

Charger Charging

充电 (Red Light) 充满 (Green Light)

