


## Camera User Manual

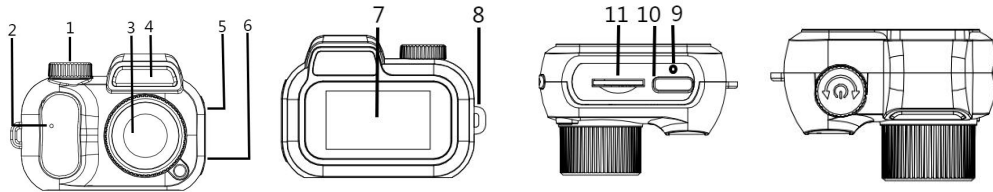

一. 1.switchg/on-off+Knob switch、electronic magnification 2.recording 3.High-definition AF lens module 4.indicator light 5.pattern 6. Filter mode key 7.lwl-tcg 8.Hanging rope buckle 9.Reset Button 10.Power interface 11.TF interface



photo mode



video mode



As the electron multiplies,

the forward rotation multiple becomes larger and the reverse rotation multiple becomes



smaller playback mode

2.switchg/on-off、electronic magnification

The first step is to insert TF card, press the power button for 3 seconds, turn on the display screen, turn on and enter the standby photo mode (Figure 1), the electronic multiplier, the forward rotation multiple becomes larger, the reverse rotation multiple becomes smaller. Press the Start button for 3 seconds to shut down.

3, take pictures

1.Inthe state of figure 1,click the switch button to complete a photo shoot



2.for mirror photography,clik the filter mode key to select figure2

Thedesiredbackground ( figure2 ) and press the switch key to complete the photo and save

4, video



Click the mode key (figure 3) , to enter video mode,click the switch button again to pause the video

5, play



Click the mode key (figure 4) , In playback mode,the

machine clicks on the key playback。 Press the mode key to select the next paragraph.

Long press mode ingot to return to photo mode

6, Reset

When the machine fails,hold down the mode key and press the boot key.Machine shutdown reset complete

7, parameters

| project          | Related specifications |
|------------------|------------------------|
| Screen size      | 0.96 inches            |
| Video format     | AVI                    |
| Video Resolution | 1920*1080P             |
| Photo Resolution | 3760*2128              |
| Auto focus       | Support                |
| Video frame      | 30FPS                  |
| Picture format   | JPG                    |
| Image Ratio      | 4;3                    |
| Battery capacity | 180mAh                 |
| Working time     | 100min                 |
| Charging voltage | DC-5V                  |
| Storage          | TF card                |
| Battery type     | polymer                |

8, charging instructions

It charged with a 350~500MA charger or directly connect the computer port for charging. During charging, the battery symbol flashes and stop flash when fully charged.

Note:Do not place them on the bed, under pillows or where children can reach them during charging

Waterproof the product doesn't have waterproof performance, please keep it dry,if the camera watering, please contact the manufacturer for maintenance. Interference: All equipment may be disturbed to affect the performance, please stay away from the

interference source when working.

Safety: This machine and its accessories may contain some small parts, please place them out of reach of children. It is forbidden to dismantle the camera without permission, and the consequences are borne.

Document backup: due to external or operation errors, the original files in the camera may be lost, please make the file backup in time.

Transmission: When the camera and computer data in transmission, please do not disconnect the camera to prevent data loss. Thank you for buying and using it.