

Please Check If The Following Items Are Available:

- | | |
|------------------------------------|-----------|
| 1. APPLLP 2 MAX Smart Watch | *1 |
| 2. Type-c charging cable | *1 |
| 3. Watch Manual | *1 |

 
Please read the instruction manual carefully before use and keep it properly for quick and correct installation and use.

1. In Line With The Principle Of Continuous Improvement And Optimization, The Company Reserves The Right To Modify And Improve Any Product Information And Functions Described In The Document Without Prior Notice.

2. Due to the continuous improvement, optimization, and upgrade of the product, please follow the actual operation


3. The product images shown in this manual are for reference only. Please refer to the actual product.

Product Description:

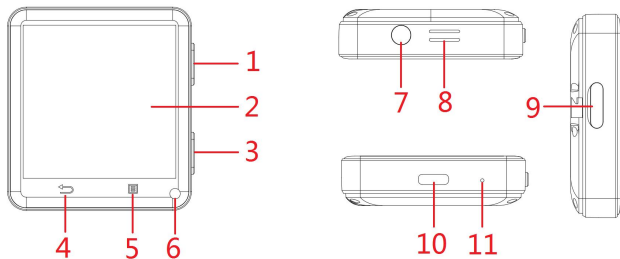

①. Power button ②. Display screen ③. Back button ④. Virtual back button ⑤. Virtual recent task button ⑥. Front camera ⑦. Side camera ⑧. Speaker ⑨. Nano SIM card slot ⑩. TYPE-C charging port

 11. Microphone

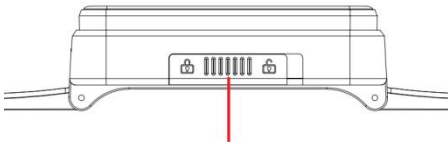

Watch Strap Clip

SIM Card Installation Instructions:

1. This device only supports Nano SIM cards. Before installing the SIM card, please check whether the network frequency band used by the network operator is consistent with this product
2. APPLP 2 MAX Support (2G / 3G / 4G Network) Frequency

Bands Are: **GSM: 800 / 850 / 900 / 1800 WCDMA: B1 / B2 / B5 / B8 TDS: B34 / B39 LTE-FDD: B1 / B2 / B3 / B4 / B5 / B7 / B8 / B12 / B17 / B20 / B66 LTE-TDD: B38 / B39 / B40 / B41**

 
Most Of The Current 2G Network Base Stations Have Gradually Been Closed. It Is Recommended To Use The Standard 4G Network Nano SIM Card. The SIM card Needs To Activate The Volte Function (For Activation Methods, Please Consult The Operator's Customer Service Or Business Office)

3. APPLLP 2 MAX Watch SIM Card Needs To Activate Data Traffic And Caller ID Functions


4. Do not use self-cutting cards and SIM cards from virtual operators. Using self-cutting cards may damage the watch or

cause the card to not be read.

Please use a standard Nano card (do not use card clippers)



Ordinary
SIM card

 


Micro
SIM card



Nano
SIM card

How To Charge And Malfunction Your Watch:

 Before Using This Product, Please Charge The Watch For 2 Hours.If It Cannot Be Turned On, Please Charge The Device With a 5V/1A Or Higher Charger For More Than 20 Minutes To Activate The Battery.

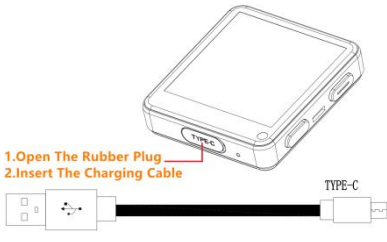

Button Definition

Upper Key:

- ①. Long Press To Power On
- ②. Short Press To Turn Off/On The Screen (Double-Clicking The Screen In The Off State Can Also Turn On The Screen)
- ③. Long Press For Two Seconds In The On State To Enter The Shutdown/Restart Selection Interface

④. If The Watch Freezes Due To Improper Operation, Long Press The Power Button For 10 Seconds To Force The Watch To Restart

Lower Key:

①. In The Clock Interface, Short Press To Enter The Main Menu Long Press To Call The Volume Adjustment Shortcut Key

②. In The Non-Clock Interface, Short Press To Return To The Main Menu



: Virtual back button, short press to return to the previous level.



: Recent tasks button, short press to call out recent tasks.

Main Menu Function Introduction

1. Phone

2. Settings

3. Browser

4. Calculator
5. Calendar
6. Contacts
7. Photo Album
8. Messages
9. Music
10. Stopwatch
11. Super Power Saving
12. One-click Cleanup
13. Clock
14. Video Player
15. Recorder

- 16. App Market
- 17. Style Settings
- 18. Watch Face Market
- 19. Pedometer
- 20. Folder Management
- 21. Camera

Common Troubleshooting Solutions:

The Phone Cannot Recognize The Sim Card?

- 1). Install Another Sim Card To Rule Out The Possibility Of Damage.
- 2). Check Whether The Sim Card Slot Is Dirty Or Deformed.

The Standby Time Is Short, Is There a Battery Problem?

The Standby Time Depends On The User's Usage Habits And Frequency. The Device Has Android System With Rich Features And Powerful Configuration. When Using Power-Hungry Applications Such As Social Media Applications And Games, Power Consumption Will Increase Accordingly.

Does The Watch Get Hot Easily?

Use High Power Applications For Extended Periods Of Time. The Processor Generates a Lot Of Heat When Running At High Speeds, So The Surface Of The Watch Is Smaller And The Heat Dissipation Is Relatively Slow. Try To Avoid Using High-Power Applications For Extended Periods Of Time.

Does It Support Bluetooth Calling?

Not Supported, You Need To Install a Sim Card To Use It.

GPS Function Failure?

- 1).** Please Check Whether The GPS Is Turned On And Set The GPS To High-Precision Mode.
- 2).** When Using The GPS Function For The First Time, Please Use GPS Positioning In An Open Outdoor Area.

Kind Tips:

- ✘ Improper Operation May Cause The Product To Freeze. You Can Forcefully Restart The Watch By Pressing And Holding The Power Button For 10 Seconds.
- ✘ For Example, When Using The Mobile Network, Making Calls, Surfing The Internet, Video And Other

High-Energy-Consuming Programs, The Power Consumption Will Be Relatively Large, And The Machine May Become Slightly Hot Or Hot, Which Is Normal. If The Machine Prompts a High Temperature Alarm, Please Reduce The Use Of Such High Power Consumption Applications.

✂ Water Resistance Is Not Permanent And May Weaken Over Time. Supports Hand Washing, Rain, And Short-Term Soaking. Scenarios Such As Hot Showers Are Not Supported.

✂ Note: Several Situations May Affect The Waterproofness: The Device Is Dropped, Bumped, Or Impacted It Comes Into Contact With Soapy Water, Shower Gel, Detergent, Perfume,

Oil, Hot Water, Sauna And Other High-Temperature And High-Humidity Scenes.

✘ Equipment Damage Caused By Liquid Entering Is Not Covered By The Free Replacement Warranty.

✘ Our Company Reserves The Right To Modify The Contents Of This Manual Without Any Prior Notice. Some Functions Are Different In The Corresponding Software Versions, Which Is Normal.

Third Party Copyright Statement:

①. The Copyright Of The Licensed Content In This Product (Including But Not Limited To Text, Pictures, Audio, Video Or Software, Etc.) Belongs To The Copyright Owner, And The

Company Does Not Own The Intellectual Property Rights Of These Contents.

②. The Company Has Nothing To Do With The User's Own Copying, Installation, Downloading Of Third-Party Content (Including But Not Limited To Third-Party Works Such As Text, Pictures, Audio, Video Or Software) To This Product Or Attachments, As Well As The Uploading Of Third-Party Content Through This Product. Users Bear All Responsibilities And Risks Arising From Third-Party Content.

③. The Company Will Neither Provide Any Services To Users With Respect To The Above-Mentioned Third-Party Content,

Nor Assume Any Responsibility For The Legality, Quality Or
Other Aspects Of These Contents.