

Please Check If The Following Items Are
Available :

- | | |
|----------------------------|----|
| 1. APPLP 3 Smart Watch | *1 |
| 2. Magnetic Charging Cable | *1 |
| 3. Watch Manual | *1 |
| 4. SIM card opener | *1 |

Please read the instruction manual carefully
before use and keep it properly for quick
and correct installation and use.

1. In Line With The Principle Of Continuous Improvement And Optimization, The Company Reserves The Right To Modify And Improve Any Product Information And Functions Described In The Document Without Prior Notice.

2. Due To The Continuous Improvement, Optimization And Upgrade Of The Product, The Actual Operation May Be Slightly Different From The Above, Please Refer To The Actual Operation.

3. The Product Pictures Shown In This Manual Are For Illustration Only, Please Refer To The Actual Product. The Product Pictures In The Manual Are For Illustration Only, Please Refer To The Actual Product.

SIM Card Installation Instructions :

1. This device only supports Nano SIM cards. Before installing the SIM card, please check whether the network frequency band used by the network operator is consistent with this product

2. APPLP 3 Support (2G / 3G / 4G Network);
Frequency Bands Are: GSM: 850 / 900 / 1800 /
1900 ; WCDMA: B1 / B2 / B5 / B8; LTE-FDD: B1 /
B2 / B3 / B4 / B5 / B7 / B8 / B12 / B17 / B20
/ B28 / B66; LTE-TDD: B34 / B38 / B39 / B40 / B41;

 
Most Of The Current 2G Network Base Stations
Have Gradually Been Closed. It Is Recommended
To Use The Standard 4G Network Nano SIM Card.
The SIM card Needs To Activate The VoLTE
Function (For Activation Methods, Please
Consult The Operator's Customer Service
Or Business Office)

3. APPLP 3 Watch SIM Card Needs To Activate


Data Traffic And Caller ID Functions

4. Do not use self-cutting cards and SIM cards from virtual operators. Using self-cutting cards may damage the watch or cause the card to not be read.


कृपया मानक नैनो कार्ड का उपयोग करें
(कार्ड क्लिपर का उपयोग न करें)

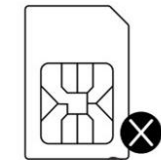

साधारण सिम
कार्ड

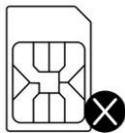 



माइक्रो सिम
कार्ड

 

नैनो सिम
कार्ड

How To Charge And malfunction Your Watch :

  Before Using This Product, Please Charge The Watch For 2 Hours. If It Cannot Be Turned On, Please Charge The Device With a 5V/1A Or Higher Charger For More Than 20 Minutes To Activate The Battery.

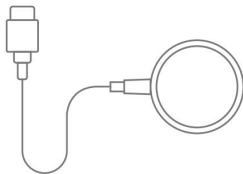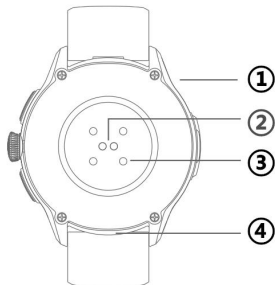

① Microphone hole; ② Sensor;
③ Charging area; ④ Speaker;

Instructions:

सिम कार्ड स्लॉट



ऊपर बटन:

मेनू में प्रवेश करने के लिए डायल पेज पर क्लिक करें, डायल स्विच करने के लिए डबल क्लिक करें; वापस लौटने के लिए अन्य पृष्ठों पर क्लिक करें, वॉल्यूम समायोजित करने के लिए लंबे समय तक दबाएँ

कैमरा

अगला बटन:

चालू/बंद करने के लिए देर तक दबाएँ, स्क्रीन चालू और बंद करने के लिए थोड़ी देर तक दबाएँ



Instructions:

बाईं ओर स्वाइप करें:

खेल डेटा और
हृदय गति

नीचे खिसकना:

स्थिति पट्टी



वॉच फेस स्विच करने के लिए
मुख्य इंटरफ़ेस पर स्क्रीन को
दबाकर रखें

दांयी ओर स्वाइप करें:

एआई विशेषताएं



How to connect the Bluetooth Assistant APP to a mobile phone

APPLP 3 is compatible with Android 5.1 and iOS 8.2 and above. You can download HiSportPro and install it through the following QR code



Android: Search for HiSportPro in the Google Play app market to download

iOS: Search for HiSportPro in the App Store to download

1. Turn on the Bluetooth of your phone and watch;
2. Turn on the Bluetooth of your watch and enable detection;
3. Open the Bluetooth Assistant and enable the Bluetooth service;
4. Open HiSportPro on your phone, click Device-Bind Device, and scan the QR code on the watch to bind;
5. Download the APP on your phone and register and log in. After logging in, scan the QR code of the watch and follow the steps to bind. (Note: Click " Allow" or " Yes" on all pop-up windows)

उपकरण



बाईंड टिवाइस

जुड़े नहीं हैं

सेटिंग्स



मदद



उपयोगकर्ता का समझौता



संस्करण संख्या

V1.0.9



कैश को साफ़ करें

0B

उपकरण



LOKMAT

अनबाईंड

जुड़े हुए

 50%

सेटिंग्स



मदद



उपयोगकर्ता का समझौता



संस्करण संख्या

V1.0.9



कैश को साफ़ करें

0B

उपकरण



LOKMAT

अनबाइंड

जुड़े हुए

 50%

सेटिंग्स



मदद



ब्लूटूथ युग्मन अनुरोध



"LOKMAT" आपके iPhone के साथ युग्मित होना चाहता है। कृपया पुष्टि करें कि "LOKMAT" पर कोड "584487" प्रदर्शित है। किसी भी एक्सेसरी पर यह कोड दर्ज न करें।

V1.0.9



 
रद्द करना

बाँधना

0B

Slide down status bar function introduction

1. WIF I connection;
2. Traffic usage status;
3. Bluetooth;
4. Do Not Disturb mode;
5. Airplane mode;
6. Position switch;
7. Volume adjustment;
8. Screen brightness adjustment;
9. Screen ratio switching
(when using the software, you can switch the screen to different ratios) ;
10. Screen recording function ;

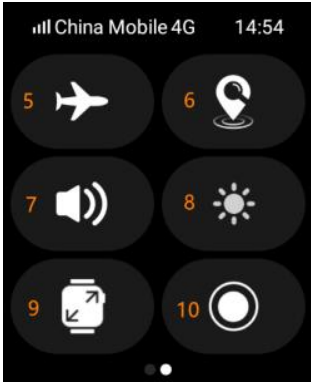

Common Troubleshooting Solutions :

The Phone Cannot Recognize The Sim Card ?

1). Install Another Sim Card To Rule Out The

Possibility Of Damage.

2). Check Whether The Sim Card Slot Is Dirty Or Deformed.

The Standby Time Is Short, Is There a Battery Problem ?

The Standby Time Depends On The User' s Usage Habits And Frequency. The Device Has Android System With Rich Features And Powerful Configuration. When Using Power-Hungry Applications Such As Social Media Applications And Games, Power

Consumption Will Increase Accordingly.

Does The Watch Get Hot Easily ?

Use High Power Applications For Extended Periods Of Time. The Processor Generates a Lot Of Heat When Running At High Speeds, So The Surface Of The Watch Is Smaller And The Heat Dissipation Is Relatively Slow. Try To Avoid Using High-Power Applications For Extended Periods Of Time.

Does It Support Bluetooth Calling ?

Not Supported, You Need To Install a Sim Card To Use It.

GPS Function Failure ?

- 1). Please Check Whether The GPS Is Turned On And Set The GPS To High-Precision Mode.
- 2). When Using The GPS Function For The First Time, Please Use GPS Positioning In An Open Outdoor Area.

Kind Tips :

✘ The Test Results Of This Product Are For Reference Only And Are Not Intended For Any Medical Use Or Basis. Please Follow The Doctor's Instructions And Do Not Self-Diagnose Or Treat Based On The Treatment Results.

✘ The Watch Is Charged Magnetically. When Charging, Check That The Magnetic Contact Position Is Free Of Foreign Objects And Dirt. Due To The Loss Of The Battery Itself, Long-Term Inactivity May Cause The Product

To Fail To Turn On Due To Battery Exhaustion. Users Are Asked To Charge Regularly Every Week To Ensure That The Device Is Normal Work.

✘ Improper Operation May Cause The Product To Freeze. You Can Forcefully Restart The Watch By Pressing And Holding The Power Button For 10 Seconds.

✘ For Example, When Using The Mobile Network, Making Calls, Surfing The Internet, Video And Other High-Energy-Consuming Programs, The Power Consumption Will Be Relatively Large, And

The Machine May Become Slightly Hot Or Hot, Which Is Normal. If The Machine Prompts a High Temperature Alarm, Please Reduce The Use Of Such High Power Consumption Applications.

✘ Water Resistance Is Not Permanent And May Weaken Over Time. Supports Hand Washing, Rain, And Short-Term Soaking. Scenarios Such As Hot Showers Are Not Supported.

✘ Note: Several Situations May Affect The Waterproofness: The Device Is Dropped, Bumped, Or Impacted; It Comes Into Contact

With Soapy Water, Shower Gel, Detergent, Perfume, Oil, Hot Water, Sauna And Other High-Temperature And High-Humidity Scenes.

✘ Equipment Damage Caused By Liquid Entering Is Not Covered By The Free Replacement Warranty.

✘ Our Company Reserves The Right To Modify The Contents Of This Manual Without Any Prior Notice. Some Functions Are Different In The Corresponding Software Versions, Which Is Normal.

Third Party Copyright Statement :

- ①. The Copyright Of The Licensed Content In This Product (Including But Not Limited To Text, Pictures, Audio, Video Or Software, Etc.) Belongs To The Copyright Owner, And The Company Does Not Own The Intellectual Property Rights Of These Contents.
- ②. The Company Has Nothing To Do With The User' s Own Copying, Installation, Downloading Of Third-Party Content

(Including But Not Limited To Third-Party Works Such As Text, Pictures, Audio, Video Or Software) To This Product Or Attachments, As Well As The Uploading Of Third-Party Content Through This Product. Users Bear All Responsibilities And Risks Arising From Third-Party Content.

③. The Company Will Neither Provide Any Services To Users With Respect To The Above-Mentioned Third-Party Content, Nor

Assume Any Responsibility For The Legality,
Quality Or Other Aspects Of These Contents.