

Please Check If The Following Items Are Available:

- | | |
|------------------------------------|-----------|
| 1. APPLLP 8 PRO Smart Watch | *1 |
| 2. Magnetic Charging Cable | *1 |
| 3. Watch Manual | *1 |
| 4. SIM Card Tray | *1 |

Please read the instruction manual carefully before use and keep it properly for quick and correct installation and use.

1. In Line With The Principle Of Continuous Improvement And Optimization, The Company Reserves The Right To Modify And Improve Any Product Information And Functions Described In The Document Without Prior Notice.

2. Due To The Continuous Improvement, Optimization And Upgrade Of The Product, The Actual Operation May Be Slightly Different From The Above, Please Refer To The Actual Operation.

3. The Product Pictures Shown In This Manual Are For illustration Only, Please Refer To The Actual Product. The Product Pictures In The Manual Are For Illustration Only, Please Refer To The Actual Product.

SIM Card Installation Instructions:

 
- 1.** This device only supports Nano SIM cards. Before installing the SIM card, please check whether the network frequency band used by the network operator is consistent with this product
- 2.** APPLLP 8 PRO Support **(2G / 3G / 4G Network)**; Frequency Bands Are: **GSM: 850 / 900 / 1800 / 1900 ; WCDMA: B1 / B2 / B5 / B8; LTE-FDD: B1 / B2 / B3 / B5 / B7 / B8 / B12 / B17 / B20; LTE-TDD: B34 / B38 / B39 / B40 / B41**; Most Of The Current 2G Network Base Stations Have Gradually Been Closed. It Is Recommended To Use The Standard 4G Network Nano SIM

Card. The SIM card Needs To Activate The Volte Function (For Activation Methods, Please Consult The Operator's Customer Service Or Business Office)


3. APPLLP 8 PRO Watch SIM Card Needs To Activate Data Traffic And Caller ID Functions

4. Do not use self-cutting cards and SIM cards from virtual operators. Using self-cutting cards may damage the watch or cause the card to not be read.

Please use a standard Nano card (do not use card clippers)



Ordinary
SIM card

 


Micro
SIM card



Nano
SIM card

How To Charge And Malfunction Your Watch:

Before Using This Product, Please Charge The Watch For 2 Hours.If It Cannot Be Turned On, Please Charge The Device With a 5V/1A Or Higher Charger For More Than 20 Minutes To Activate The Battery.

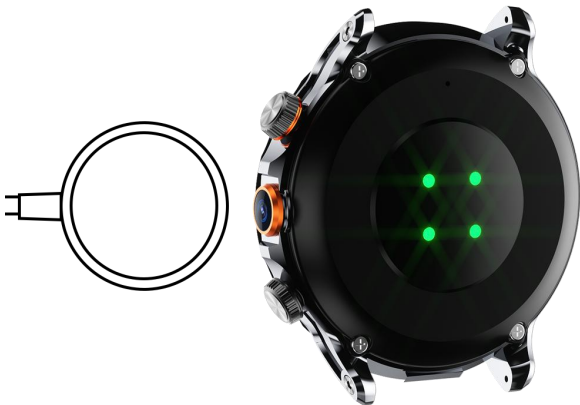

Up Button:
Click on the dial page to enter the menu,
Double click to switch the dial;
Click on other pages to return.
Long press to adjust the volume.

SIM card slot



Camera

Next button:
Long press to turn on/off;
Short press to turn on and off the screen.



Button Definition

Upper Key: ①. Short Press Once On The Dial Interface: Enter The Main Menu; ②. Short Press Once On The Main Menu Interface: Return Key; ③. Double-Click 2 Times: Switch To Different Ui Styles; ④. Long Press For 3 Seconds: Pop Up Sound Adjustment.

Lower Key: Long Press For Power On/Off Function, Short Press For Screen Lock Function

Swipe Left:
Sports Data And
Heart Rate



Press And Hold The Screen On The Main Interface To Switch The Watch Face



Slide Down:
Status Bar

Swipe Right: Music Player

Slide Up: 3D dynamic effect on dial

Decline: Brightness Adjustment, Wifi Switch, Bluetooth Switch, Traffic View, Power Display, Flight Mode, Positioning Switch, Volume Adjustment, Display Management, Screen Switching, NFC Switch, Drainage Function (Long Press To Enter The Secondary Operation Menu Interface)

Swipe Right: Camera

Swipe Left: Exercise, Heart Rate, Customization

Main Menu Function Introduction

1、Telephone; **2**、Set Up; **3**、Browser; **4**、Calculator; **5**、Calendar;
6、Address Book; **7**、Photo Album; **8**、Information; **9**、Music;
10、Stopwatch; **11**、Map; **12**、Super Power Saving; **13**、One Click Cleanup; **14**、Clock; **15**、Video Player; **16**、Flashlight;
17、Recorder; **18**、Sports; **19**、Application Market; **20**、Drainage With One Click; **21**、Heart Rate Function; **22**、Blood Oxygen Function; **23**、User Guide; **24**、Style Settings; **25**、Dial Market; **26**、NFC; **27**、Count Steps; **28**、Respiratory Function; **29**、Folder Management; **30**、Camera;

Common Troubleshooting Solutions:

The Phone Cannot Recognize The Sim Card?

- 1).** Install Another Sim Card To Rule Out The Possibility Of Damage.
- 2).** Check Whether The Sim Card Slot Is Dirty Or Deformed.

The Standby Time Is Short, Is There a Battery Problem?

The Standby Time Depends On The User's Usage Habits And Frequency. The Device Has Android System With Rich Features And Powerful Configuration. When Using Power-Hungry Applications Such As Social Media Applications And Games, Power Consumption Will Increase Accordingly.

Does The Watch Get Hot Easily?

Use High Power Applications For Extended Periods Of Time. The Processor Generates a Lot Of Heat When Running At High Speeds, So The Surface Of The Watch Is Smaller And The Heat Dissipation Is Relatively Slow. Try To Avoid Using High-Power Applications For Extended Periods Of Time.

Does It Support Bluetooth Calling?

Not Supported, You Need To Install a Sim Card To Use It.

GPS Function Failure?

- 1). Please Check Whether The GPS Is Turned On And Set The GPS To High-Precision Mode.
- 2). When Using The GPS Function For The First Time, Please Use GPS Positioning In An Open Outdoor Area.

Kind Tips:

- ✂ The Test Results Of This Product Are For Reference Only And Are Not Intended For Any Medical Use Or Basis. Please Follow The Doctor's Instructions And Do Not Self-Diagnose Or Treat Based On The Treatment Results.
- ✂ The Watch Is Charged Magnetically. When Charging, Check That The Magnetic Contact Position Is Free Of Foreign Objects And Dirt. Due To The Loss Of The Battery Itself, Long-Term Inactivity May Cause The Product To Fail To Turn On Due To

Battery Exhaustion. Users Are Asked To Charge Regularly Every Week To Ensure That The Device Is Normal. Work.

✘ Improper Operation May Cause The Product To Freeze. You Can Forcefully Restart The Watch By Pressing And Holding The Power Button For 10 Seconds.

✘ For Example, When Using The Mobile Network, Making Calls, Surfing The Internet, Video And Other High-Energy-Consuming Programs, The Power Consumption Will Be Relatively Large, And The Machine May Become Slightly Hot Or Hot, Which Is Normal. If The Machine Prompts a High Temperature Alarm, Please Reduce The Use Of Such High Power Consumption Applications.

✘ Water Resistance Is Not Permanent And May Weaken Over Time. Supports Hand Washing, Rain, And Short-Term Soaking. Scenarios Such As Hot Showers Are Not Supported.

- ※ Note: Several Situations May Affect The Waterproofness:
The Device Is Dropped, Bumped, Or Impacted; It Comes Into Contact With Soapy Water, Shower Gel, Detergent, Perfume, Oil, Hot Water, Sauna And Other High-Temperature And High-Humidity Scenes.
- ※ Equipment Damage Caused By Liquid Entering Is Not Covered By The Free Replacement Warranty.
- ※ Our Company Reserves The Right To Modify The Contents Of This Manual Without Any Prior Notice. Some Functions Are Different In The Corresponding Software Versions, Which Is Normal.

Third Party Copyright Statement:

- ①. The Copyright Of The Licensed Content In This Product (Including But Not Limited To Text, Pictures, Audio, Video Or Software, Etc.) Belongs To The Copyright Owner, And The

Company Does Not Own The Intellectual Property Rights Of These Contents.

②. The Company Has Nothing To Do With The User's Own Copying, Installation, Downloading Of Third-Party Content (Including But Not Limited To Third-Party Works Such As Text, Pictures, Audio, Video Or Software) To This Product Or Attachments, As Well As The Uploading Of Third-Party Content Through This Product. Users Bear All Responsibilities And Risks Arising From Third-Party Content.

③. The Company Will Neither Provide Any Services To Users With Respect To The Above-Mentioned Third-Party Content, Nor Assume Any Responsibility For The Legality, Quality Or Other Aspects Of These Contents.