

Multi Function Instructions


Armor 30




Custom Key

- Enter the Settings and locate the 'Custom Key' option.

Step 1

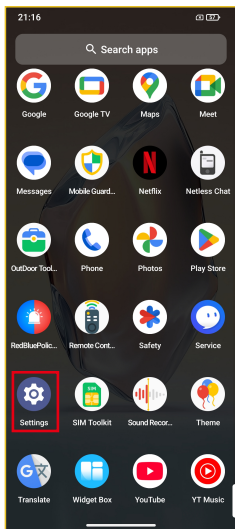

Step 2

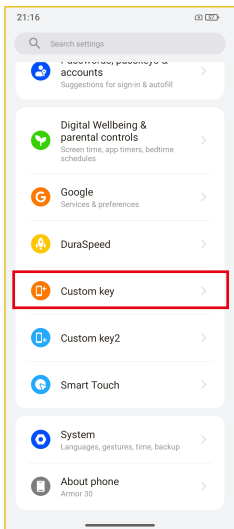





Custom Key

- You can set up to 3 different shortcuts simultaneously: single click, double click, and long press.
- To configure these shortcuts, tap on single click, double click, or long press to select and activate your preferred app.

Step 3

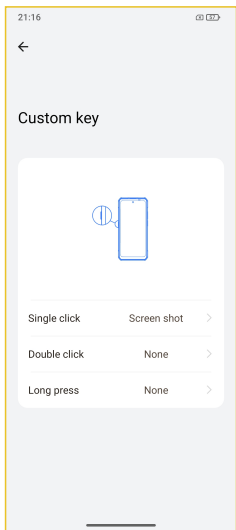

Step 4

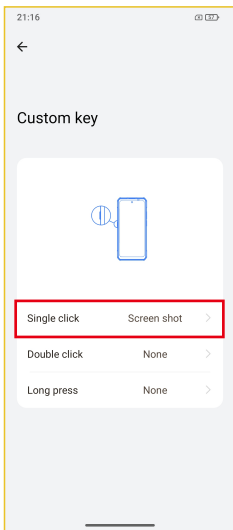





Custom Key

- You can assign these shortcuts to access features such as recording, flashlight, screenshot, underwater camera, SOS, Zello, and more, or to any installed apps on your phone with a single click, double click, or long press.

Step 5

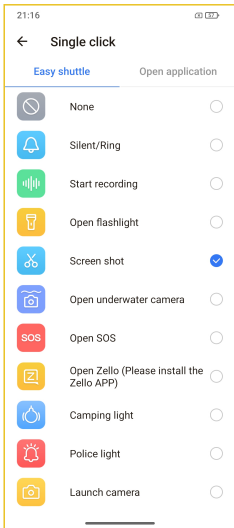

Step 6

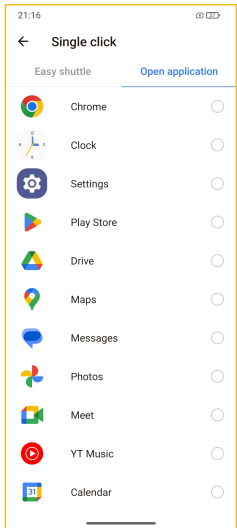



Camping Light

- The Camping Light app provides a user-friendly and intuitive User Interface and runs in the background. It allows for optional modes and adjustable settings of brightness and duration. And overheating protection is installed.

Supports One-key operation:


>Enter Settings>Tap Custom Key

>Select Single Click, Double Click, or Long Press to enter

>Tap 'Easy shuttle', and check 'Camping Light'.

>You can always press the Custom Key for quick access to the Camping Light app according to your previous setting.

⚠ Warning: The Camping light is too bright to stare at directly. Do not irradiate light-sensitive equipment at close range.

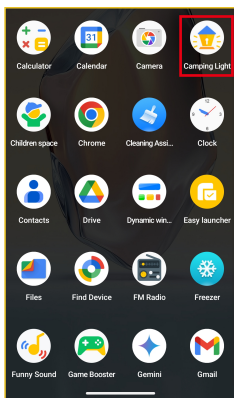





Camping Light

- The lighting mode is versatile for setting up a campsite, night fishing, hiking, cycling, or any other tasks that require adequate lighting.

Brightness settings: Scroll the bar to change brightness.

Duration settings: Check the duration from 5 to 30 minutes.

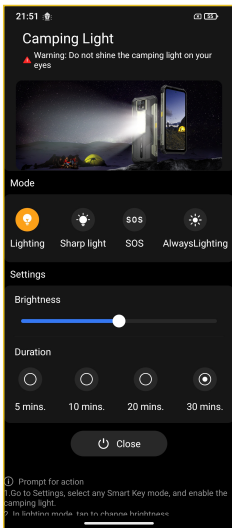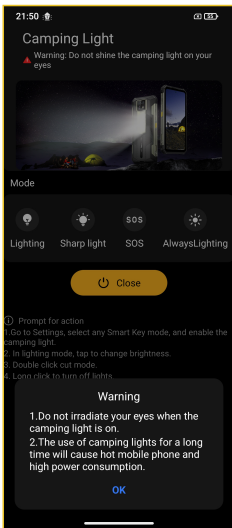


Lighting Mode




Camping Light


- The sharp light mode offers a more focused and intense beam of light for situations where a stronger and more concentrated light source is needed, such as when searching for objects, signaling, or navigating in low-light conditions.
Duration settings: Check the duration from 5 to 30 minutes.
- SOS mode is an emergency signal for distress or help when you need to attract attention and communicate your need for assistance.
- AlwaysLighting mode offers a way to keep the camping light illuminated continuously.

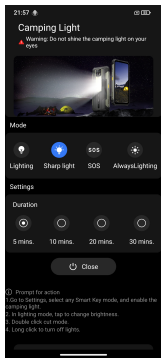

Sharp Light Mode

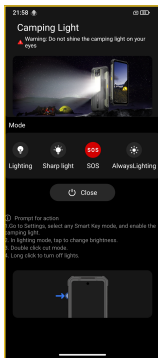

SOS Mode

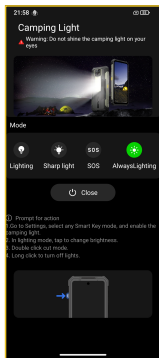

Always Lighting



Warning Light

- In case of any emergencies such as fire, first-aid, police services or encountering any accidents, you can open the simulated warning light to alert and guide.



Supports One-key operation:

>Enter Settings>Tap 'Custom Key'

>Select Single Click, Double Click, or Long Press to enter

>Tap 'Easy shuttle', and check 'Police Light'.

>You can always press the Custom Key for quick access to the Warnig Light app according to your previous setting.

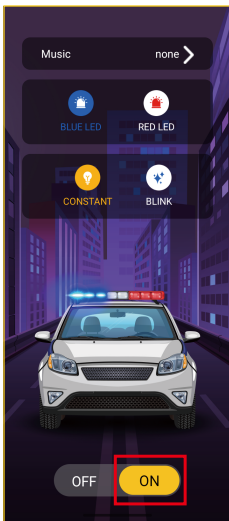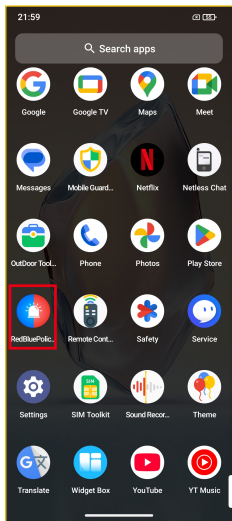





Warning Light

>Enter the Warning Light app, and tap the ON button to activate the warning light.

>Select the light effect: Red Light, Blue Light, or Red-Blue Light (the red and blue lights on at the same time)

>Select the light mode: Constant, or Blink>Select the warning sound (music): You are allow to choose from the simulated fire alarm, ambulance siren, police siren or other warning sounds.

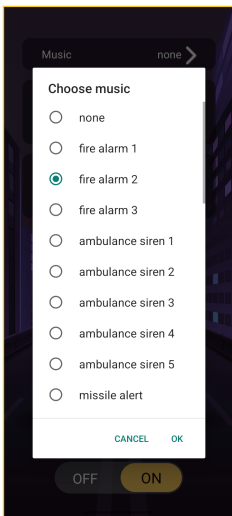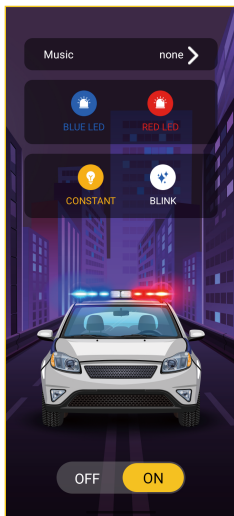




Underwater Camera

- Pull down the Quick Setting Menu or press the Custom Key according to your previous setting to activate the underwater camera.

Step 1

Step 2

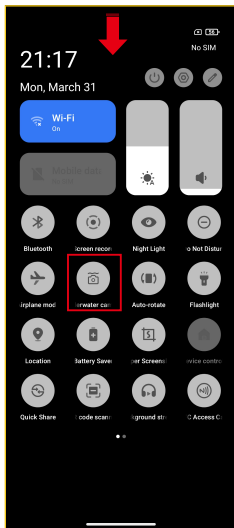

The interface does not support touch. Press the Easy Key to exit.

Press the up button of volume to take photos and press the down button of volume to record videos.

Enter the underwater camera, press the volume up button for a long time, then press the volume down button to switch the front and back camera.



OK


CANCEL



Underwater Camera

- Short press Volume “+” to take photos.
- Short press Volume “-” to record videos.
- First long press Volume “+” for a long time, then short press Volume “-” to switch to front/rear camera.
- Press the Custom Key to exit.

Step 3

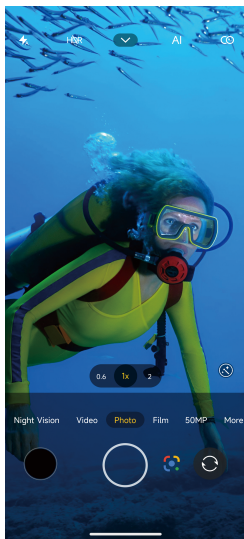

Step 4







Camera Key

- Enter the Settings and locate the 'Custom Key 2' option. Check 'Launch camera', you can set a shortcut to the camera by single click, double click, or long press of the physical camera key.
- Confirm your selection and exit the settings. Test the camera key to ensure it works as intended.

Step 1

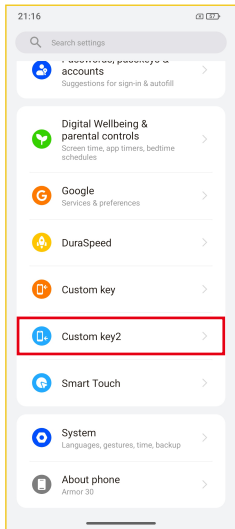

Step 2

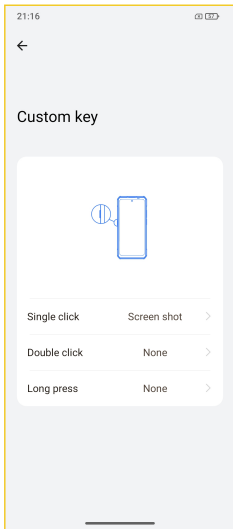





Memory Expansion

- The dynamic RAM can be extended by activating the Virtual RAM in the Settings to make the system run more smoothly.
- Go to the Settings, find 'Special function' and click on 'RAM expansion'.

Step 1

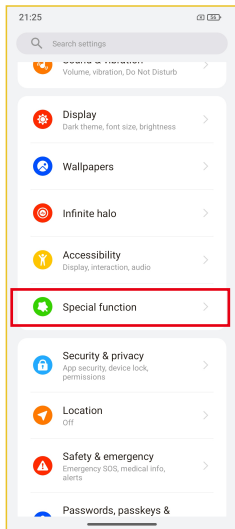

Step 2

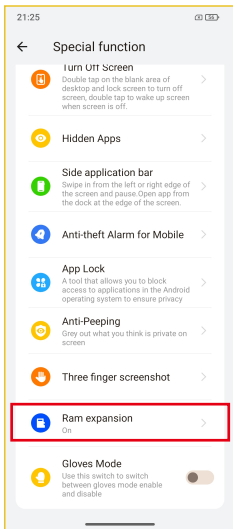





Memory Expansion

- Check the 'Memory Expansion' feature and tap on "Set virtual RAM" to set the desired amount of virtual RAM.
- Tap 'Activate and restart' to enable the RAM Expansion.

Step 3

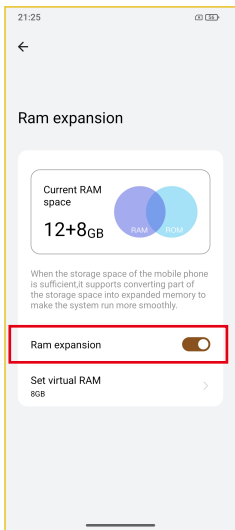

Step 4

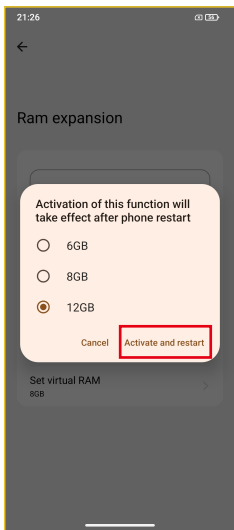



uSmart Expansion Connector

- Supports any expansion accessories compatible with uSmart Connector, such as endoscope, etc. To learn more the supported multi-function accessories, please visit ulefone.com or contact your dealer.
- Using the uSmart series accessories requires download of uSmart Camera App.







uSmart Camera App Download and Install

- Two ways to install uSmart Camera App

Open the Files by Google app, find the uSmart Camera APK file, open the file and install it. The file is usually in the download folder directory.

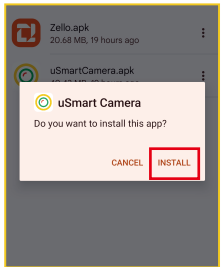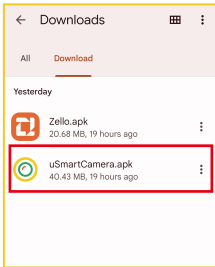

To use uSmart accessories, you can scan the QR code below to download the uSmart Camera APK file, and it is ready to use when the installation complete.





Wired Reverse Charging

- The wired reverse charging capability enables the phone to act as a power source and charge other devices such as iPhone, tablets, smartwatches, or Bluetooth headphones through a USB cable.

How-to-use:

>Use a compatible cable or adapter to connect the phone to the device you want to charge.

> Remove the USB cable or adapter when charging is finished.

