 



Blackview

— Enjoy Smart Life —

SHARK 9
 
<http://www.blackview.hk>

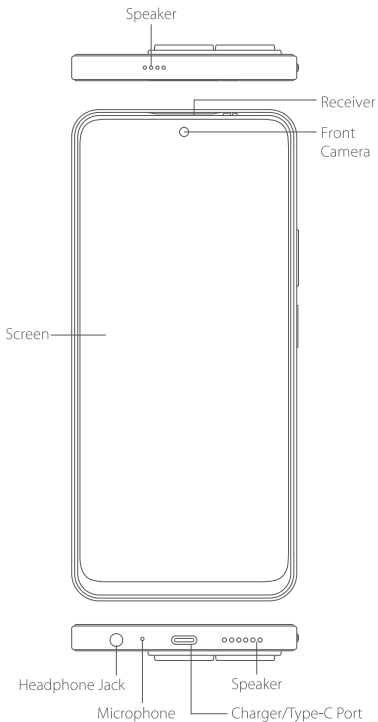


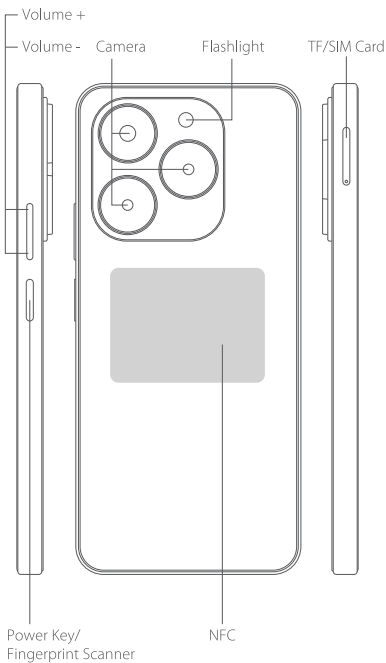



❶ How to insert the card

To make sure your smartphone be able to call, put the SIM card in the following order.

 
- Press the card pin into the side hole and then the card tray pops up and pull out it.

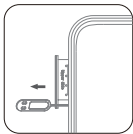

  - Take out the card slot and place the Nano card or Nano card and TF card with the metal side facing down. Make sure the bevel angle is aligned with the bevel angle of the card slot and placed in the corresponding card slot.

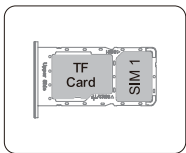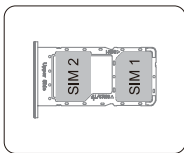

 - Insert the card holder into the phone in the direction of the arrow.

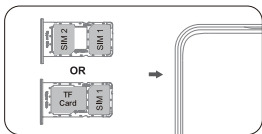

② How to boot

Non-removable battery

Press the power button for 3-5 seconds to boot

③ How to send SMS, MMS

SMS

- Open the SMS app
- Select New Information
- Enter a phone number or browse your contacts
- Select Edit Information and enter your text
- Send ➤

MMS - video

- When writing a text message
- Select images, videos or other files you want to add, even You can take a new picture or video right away.
- Selecting or sending ➤

④ Language switching settings

- Main menu—settings—system setting—language and input method
- Language and input method—language—language adding
- Select the language you need, the system will automatically jump back to the language interface.
- Select the icon after the language bar and drag it to the first one.

⑤ SAR

- The maximum electromagnetic radiation absorption ratio (SAR) of this product is $\leq 2.0\text{W/kg}$.
- In line with the requirements of the national standard GB 21288-2007.

ⓐ Safety- In order to ensure safely using the product, you must strictly abide by the following rules

- The phone should be at least 15 cm away from any medical implant or rhythm adjuster and never put the device in your coat pocket.
- Do not expose the device and other batteries together with the high temperatures or heat-generating equipment such as sunlight, heaters, microwave ovens, ovens or water heaters. Overheating of the battery can cause an explosion.
- When charging is complete or not charging, disconnect the charger from the device and unplug the charger from the power outlet.
- If the device is equipped with a non-removable battery, do not replace the battery yourself to avoid damaging the battery or device.
- Use of an unapproved or incompatible power source, charger or battery may cause fire, explosion or other hazards.
- Do not disassemble or reset the battery, insert other objects, immerse in water or other liquids to avoid battery leakage, overheating, fire or explosion.
- Do not drop, crush, scratch or puncture the battery to avoid subjecting the battery to excessive external pressure, resulting in internal short-circuit and overheating of the battery.
- The company does not bear the responsibility for accidents caused by non-standard related charging equipment.
- Hereby, Shenzhen DOKE Electronic Co., Ltd declares that this radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<https://support.blackview.hk/download/2>

⑦ Maintenance

- Thoroughly understand the maintenance of this mobile phone to use the mobile phone more safely and effectively, and extend the service life of the mobile phone as much as possible.
- Please follow the instructions in the manual to open the phone, disassemble the accessories, and do not try other methods.
- Please avoid falling, knocking or shaking your phone. Rough handling of the phone can cause the screen to rupture, damaging the internal circuit board and the delicate structure.
- Do not use chemical solvents or detergents to clean your phone. Wipe the phone case with a soft cotton cloth dampened with water or a mild soap.
- Clean the lens with a clean, dry, soft cloth.
(Example: camera lens) and display.
- If you encounter an abnormal image such as a crash during use, the processing method is as follows: For a mobile phone that cannot remove the battery, please press and hold the power button for more than 12 seconds, the mobile phone will be forced to restart (unlock the phone when restarting) It can solve the general bug; for the mobile phone that can remove the battery, please remove the battery, then insert the battery and restart it to solve the bug.
- When the charger is not in use, please unplug it from the power outlet. Do not connect the battery that has been fully charged to the charger for a long time, as overcharging will shorten the battery life.

RF Specification:

Function	Operation Frequency	Max RF output power:
BLE	2402MHz~2480MHz	-1.64dBm
BT(BR+EDR)	2402MHz~2480MHz	3.28dBm
WIFI 802.11b/g/ n(HT20/40)	802.11b/g/n(20MHz): 2412~2472MHz; 802.11n(40MHz):2422~2462MHz	16.12dBm
Wi-Fi 5.2G(802.11a/n20/n40/ac20/ac4 0/ac80)	802.11a/ n20/ac20:5180MHz~5240MHz 802.11 n40/ac40:5190MHz~5230MHz 802.11 ac80:5210MHz	13.66dBm
Wi-Fi 5.8G(802.11a/n20/n40/ac20/ac4 0/ac80)	802.11a/ n20/ac20:5745MHz~5825MHz 802.11 n40/ac40:5755MHz~5795MHz 802.11ac80:5775MHz	12.51dBm
GSM/GPRS/EGPRS 900	TX(Uplink):880M-915MHZ; RX(Downlink):925M-960MHZ	32.25 dBm
GSM/GPRS/EGPRS 1800	TX(Uplink):1710M-1785MHZ; RX(Downlink):1805M-1880MHZ	29.32 dBm
WCDMA B1	TX(Uplink):1920-1980MHZ; RX(Downlink):2110-2170MHZ	23.23 dBm
WCDMA B8	TX(Uplink): 880-915MHZ; RX(Downlink):925-960MHZ	22.25 dBm
LTE FDD B1	TX(Uplink):1920-1980MHZ; RX(Downlink):2110-2170MHZ	23.2dBm
LTE FDD B3	TX(Uplink) :1710-1785MHZ; RX(Downlink):1805-1880MHZ	22.63 dBm
LTE FDD B7	TX(Uplink) :2500-2570MHZ; RX(Downlink):2620-2690MHZ	22.29 dBm
LTE FDD B8	TX(Uplink): 880MHz to 915 MHz RX(Downlink): 925 MHz to 960 MHz	22.84 dBm
LTE FDD B20	TX(Uplink): 832MHz~862MHz; RX(Downlink):791MHz~821MHz	22.73 dBm
LTE FDD B28	TX(Uplink): 703 MHz to 748MHz RX(Downlink): 758 MHz to 803 MHz	22.69 dBm
LTE TDD B38	Uplink & Downlink: 2570 MHz to 2620 MHz	22.5 dBm
LTE TDD B40	Uplink & Downlink: 2300 MHz to 2400 MHz	22.77 dBm
LTE TDD B41	Uplink & Downlink: 2496 MHz to 2690 MHz	22.38 dBm
NR FDD n1:	Uplink: 1920 MHz to 1980MHz Downlink: 2110 MHz to 2170 MHz	22.82 dBm
NR FDD n3:	Uplink: 1710 MHz to 1785 MHz Downlink: 1805 MHz to 1880 MHz	24.00 dBm
NR FDD n7:	TX(Uplink) :2500-2570MHZ; RX(Downlink):2620-2690MHZ	22.56 dBm
NR FDD n8:	Uplink: 880 MHz to 915 MHz Downlink: 925 MHz to 960 MHz	23.64 dBm
NR FDD n20:	Uplink: 832 MHz to 862 MHz Downlink: 791 MHz to 821 MHz	23.77 dBm
NR FDD n28:	Uplink: 703 MHz to 748 MHz Downlink: 758 MHz to 803 MHz	23.91 dBm
NR TDD n38:	Uplink & Downlink: 2570 MHz to 2620 MHz	24.34 dBm
NR TDD n40:	Uplink & Downlink: 2300 MHz to 2400 MHz	24.47 dBm

NR TDD n41:	Uplink & Downlink: 2496 MHz to 2690 MHz	27.96 dBm
NR TDD n77:	Uplink & Downlink: 3300 MHz to 4200 MHz	27.48 dBm
NR TDD n78	Uplink & Downlink: 3300 MHz to 3800 MHz	27.14 dBm
NFC	13.56MHz	-2.06 dBuA/m@10m
FM	Rx(Downlink): 87.5MHz~108MHz	--
GPS	Rx(Downlink): 1.57542GHz	--

Warning:

1. Use carefully with the earphone may be possible excessive sound pressure from earphones and headphones can cause hearing loss.

2. CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.



3. The product shall only be connected to a USB interface of version USB2.0.

4. Adapter shall be installed near the equipment and shall be easily accessible.

5. Operation temperature: -10~40°C.

6. The plug considered as disconnect device of adapter.

7. SAR: The device complies with RF specifications when the device used at 0.5cm from your body (SAR limit 2.0 W/Kg for 10-g). Member DAS Separation distance of 0mm (SAR limit 4.0 W/Kg for 10-g). The device is in compliance with the requirements.

8. DOKE COMMUNICATION (HK) LIMITED hereby declares that this Smart phone is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

9. According to Article 10(2) of Directive 2014/53/EU, the Smart phone can be used in Europe with restriction.

Restrictions in the 5 GHz band:

According to Article 10 (10) of Directive 2014/53/EU, the packaging shows that this radio equipment will be subject to some restrictions when placed on the market in Belgium (BE), Bulgaria (BG), the Czech Republic (CZ), Denmark (DK), Germany (DE), Estonia (EE), Ireland (IE), Greece (EL), Spain (ES), France (FR), Croatia (HR), Italy (IT), Cyprus (CY), Latvia (LV), Lithuania (LT), Luxembourg (LU), Hungary (HU), Malta (MT), Netherlands (NL), Austria (AT), Poland (PL), Portugal (PT), Romania (RO), Slovenia (SI), Slovakia (SK), Finland (FI), Sweden (SE), Turkey (TR), Norway (NO), Switzerland (CH), Iceland (IS), and Liechtenstein (LI).

The WLAN function for this device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

	ES	LU	RO	CZ	FR	HU	SI
	DK	HR	BE	BG	DE	EE	IE
	EL	IT	Cy	LV	LT	SK	MT
	NL	AT	PL	PT	FI	SE	TR
	NO	CH	IS	LI			



Follow Blackview communtiy, a place where you
can share and discuss with Blackview user
keep posted with most up-to-day news