 




USER MANUAL

Product Description

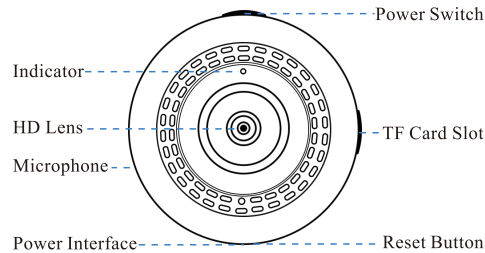

How to reset camera: When the camera is turned on, hold on the reset button for about 3 seconds until you see the red light and blue light alternately flashing slowly, and then the blue light flashing slowly or keep on.

— 1 —

Device Description

- This device has two modes: AP mode and WiFi mode
- Built-in battery.
- Support DC5V/2A power supply.

Indicator Status

Yellow light: always bright during charging

Blue light: AP mode, slow flash---recording; keep on---stop recording

Red light: WiFi mode, slow flash---recording; keep on---stop recording

Restore factory: The red light and blue light alternately flashing slowly

— 2 —

Step 1: Pre-Setup

- ☑ Press power to turn on the camera.
- ☑ Long Press the reset button 3 seconds to reset.
- ☑ It's recommended to place the camera within 2 meters of the router for the first time connecting to the Internet.
- ☑ Connect the mobile phone to the router Wi-Fi, and know the Wi-Fi connection password. (Only 2.4GHz Wi-Fi is supported).


(How to power off: Long press the power button for 3 seconds to power off.)

— 3 —

Step 2 : APP Download and Registration





- 1 Search for "Fowl" in App Store or Google Play, or scan the QR code to download the app.

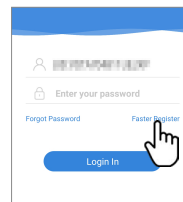

- 2 Click "Register", enter the user name and password to complete the registration.

— 4 —


Step 3: Add Devices to the APP Method One: AP Connection

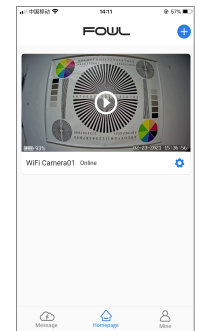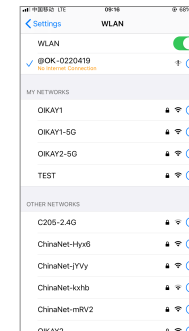

- 1 Please go to your mobile phone WiFi Settings, select the WiFi hotspot that start with OK-XXX and connect it.
- 2 Open the app and Click play to watch and operate the camera.

— 5 —


Configure WiFi

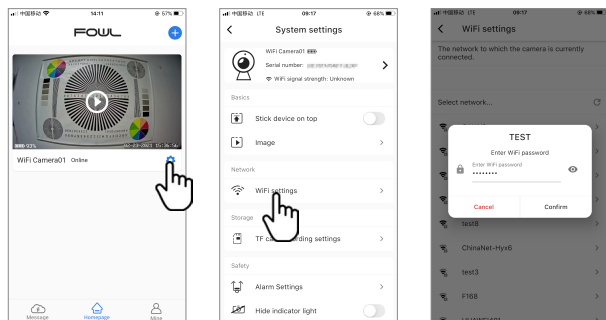

- 1 Enter camera parameters
- 2 Select WiFi settings.
- 3 Select your home WiFi and enter the WiFi password correctly.


— 6 —

Method Two: Sonic Connection

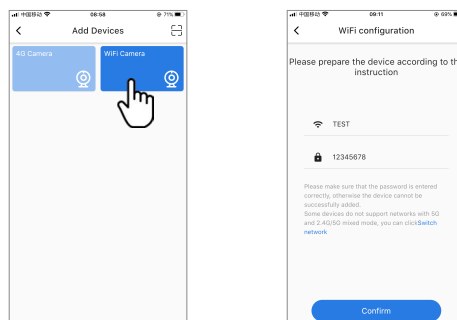

- 1 Click Add device and choose
- 2 Please enter the correct WiFi camera.
WiFi password, (The device does not support 5G Hz network).


— 7 —

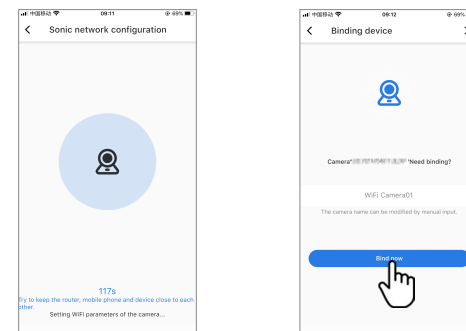

- 3 About 20 seconds later, you will be prompted for a successful binding.
- 4 Click "Bind now".

— 8 —


Device Share

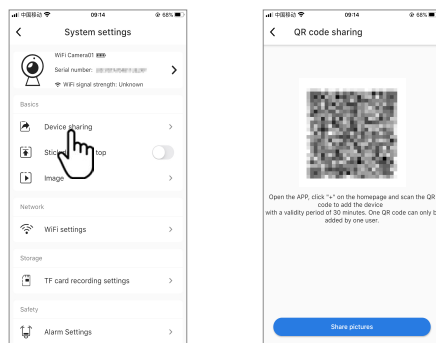

Click "Settings" on the right corner, then select "Device Share"--- "QR Code Sharing". Other users can open the app and click the "+" in the upper right corner of the home page to scan the QR code to add the device.

— 9 —

Dedicated PC Video Player

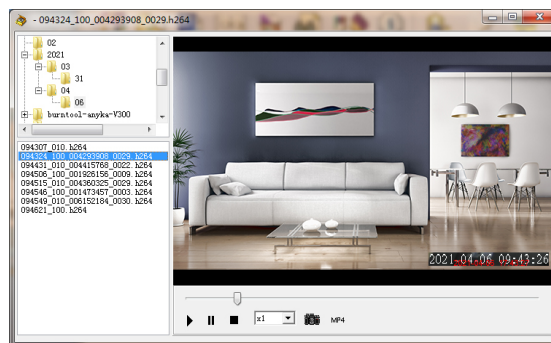

Download dedicated video player for playing Micro SD card video:
<https://www.cookycam.cn/download/VideoPlayer.exe>

If any questions, please feel free to contact our customer service.
Thank you!

— 10 —

— 11 —