


Portable compact voice recorder MP3 player
User's guidance

Please read this user guide carefully before use


★If you want to read the data, please use the original data cable★
(Other data lines may not be connected properly)

Product introduction

Machine switch position:

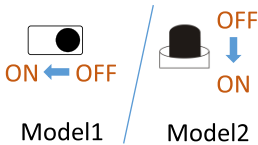

Adapter cable :

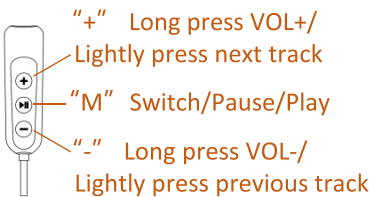

When play music or recording, the machine needs to be used with an adapter cable, first plug the adapter cable into the machine, and then plug the earphone into the adapter cable!!!

Key Operation Description:
Lightly press---press once
Long press---press for 3 seconds

- ★ Toggle the switch to 'ON' to power on, the red light is on
- 1) Without the earphone plugged in, after power on (the red light flashes slowly 5 times)/(the blue light flashes slowly 5 times [voice control/long recording]) to enter the recording;
- 2) After plugging in the headphones, start recording and playback;
- ★ Recording save
- 1) During the recording process, toggle the switch to 'OFF' to shut down and save the recording;
- 2) Insert headphones during recording, save the recording and the red light will flash once and enter the recording playback state;
- ★ Music/Recording playback
- In playback state (the red light is always on)
- 1) Short press the 'play/pause button' to switch between 'music/recording';
- 2) Long press the 'play/pause button' to enter the pause state;
- 3) Long press '+', '-' to adjust the volume, short press to tune up and down;
- In pause state (red and blue lights flash alternately)
- 1) Short press the 'play/pause button' to resume playback;
- 2) Long press '-' to enter the deletion state (purple light flashes

slowly), then short press '+' to exit the deletion state, Short press the 'play/pause button' to delete a single file; Long press the 'play/pause button' to delete all files;

- ★ Fast forward/rewind settings
- After plugging in the earphone, toggle the switch to 'ON', press and hold '+' at the same time to enter the playback state, At this time, long press '+', '-', no longer adjust the volume, but fast forward and rewind. Under this setting, there is no Volume adjustment function

- ★ Recording parameter settings
- After connecting to the computer, open the removable disk, as shown in the figure below, find the TXT file with the file name "MRECSET", double-click to open the "MRECSET" file, and set the recording parameters, including time setting (TIME), voice control setting (VOR), bit rate setting (BIT), gain setting (GAIN), recording time segment setting (PART)
- As shown :
- ★ System time setting: The numbers in the format of " " will appear in the document. Manually set the time and date according to the format of the document. You can also select the content

after the colon and use F5 to quickly refresh (only for operating systems above WIN10), and the time setting is complete.

- ★ Voice-activated VOR setting: The default voice-activated number is 0, which means no voice-activated recording. The voice control level has 1-7 numbers to choose from. If it is exceeded, it will be invalid. If there is no sound from the outside world, the recording will be paused. If it is detected that there is sound from the outside world, the recording will be restarted.
- ★ Bit rate BIT setting: 1-4 correspond to 32kbps, 64kbps, 128kbps, 192kbps recording bit rate setting, the default is 4,192kbps.
- ★ Gain setting: 1-7 numbers are optional, the larger the number, the greater the sensitivity of the microphone head and the louder the recording sound, the default is 7.

MRECSET - 记事本

文件(F) 编辑(E) 格式(O) 查看(V) 帮助(H)

TIME:22:55 2021/4/21

VOR:0 //Voice activated setting (0--7) 0 is off, 1-7 is voice activated on, the larger number is, the more sensitive will be.

BIT:4 // Bit Rate Setting, 1 is 32K, 2 is 64K, 3 is 128K, 4 is 192K

GAIN:7 // Recording Sensitivity (1--7) The larger number is, the louder recording sound will be.

PART:60 //Recording File Segmented Time (10--240 minutes). Example: 60.

- ★ Recording time segment part setting: In order to prevent the recording file from being unable to be saved in case of sudden recording, users can set the safest recording segment time when recording for a long time, and can set any time from 10 minutes to 240 minutes.
- ★Other situations:
When entering playback, if there is no file, the red light will flash quickly and then the purple light will be on, and when the recording memory is full, the purple light will flash a few times and then switch to recording and playback. The light is always on, and the purple light flashes once when it is turned off.

Q&A

- 1/Suddenly unable to record:
Please back up important files first and format them on the computer. If they can be used normally after formatting, please clean up the computer in time. This is a computer virus infection of the recorder, causing the recorder to be unusable. It may take a long time It will cause damage to the machine beyond repair.
- 2/The indicator light has no response or is always on in an abnormal state:
Please back up important files first, and then restore the factory settings. After connecting to the computer, click My Computer, find the mobile drive letter and right-click the mouse, select Format, and then select Quick Format. In this way, the factory settings can be restored and most of the faults can be eliminated.
- 3/No response after connecting to the computer via the data cable:

Reconnect the computer (check whether the plug is inserted in place) and see if the removable disk can be found. If the computer still does not respond, try to connect to a different computer. Some computers cannot be recognized because of lack of drivers. If you still can't recognize it after trying (the recorder is always red or blue), you can contact the after-sales firmware upgrade.

- 4/Turn on the earphones but not enter the play state
Insert the earphones, turn the switch to the ON position, after the light goes out, turn the switch back to the OFF position, when you see the red light, turn the switch to the ON position again, and it will enter the playback state.

★★★This machine comes with an intelligent reset system, please save the recording file before connecting to the computer. Because the recording effect and sound quality of this product are relatively clear and the parameters are relatively high, the recording file is relatively large, please extract it in time. The company is not responsible for the loss of data.

Function parameter

Product type	Voice recorder	4GB	Can save 48 hours
Record method	Power on recording, power off saving	8GB	Can save 96 hours
Battery	Environmentally friendly polymer lithium battery	16GB	Can save 192 hours
Recordin bit rate	192KBPS	32GB	Can save 384 hours
Recorder format	WAV	Sampling Rate	48KHz
Play format	MP3/WMA/WAV		