



ACTION CAMERA

User Manual

Model: KM25



www.iyesido.com

Guangzhou Guan Su Ge Technology Co., Ltd.
Room A06, Floor 2, T28 Class, No. 16, East Of Hao Ke Zhou
Street, Shixi Village, HaiZhu District, Guangzhou, China.


Product Display

Thank You For Purchasing KM25 Product!
The Brief Description Of The Product Assures You
To Operate Freely, Fully Embodies The Value Of
This Product, Please Read Carefully Before Use.



Display Of Appearance

Product Description

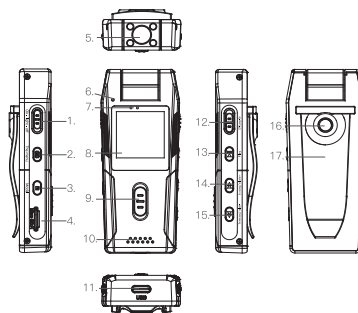

Key Functions:

1. The Indicator Light One Key Switch Indicator Light And Display Screen.
2. Menu: Short Press To Enter Menu, In The Normal Boot In To Enter Submenu Short Press To Return To The Higher Level Menu, Enter File Playback Mode For The Delete Key.
3. Mode Key: Short Press Switch In The Normal Boot Video., Pictures, Recording And Playback Four Patterns.
4. The Tf Card Slot: Maximum Support 128 Gb, Need Fat32 Format (64 G, 128 G For The First Time Use Need To Format The Tf Card, Please Pay Attention To The Backup Data).
5. HD Camera
6. Audio Input Hole
7. The LED Light Hole
8. Screen: 1.3-inch TFT Color Display

Key Functions

9. A Fast Video Recording Preservation Keys: Without Turning A Key Switch On The Video/a Button To Open Machine Recording/a Button To Save The Video/Key.
10. Horn Hole: Playing Over The Loudspeaker Sound Outside.
11. The USB Interface.
12. Night-vision Light Key: A Key Switch Night Lights.
13. Long Play Button: Press Switch On/Off, Videos, Short Press The Play/pause, In Short The Main Menu, Press To Enter Submenu Or Save The Modify Settings, Such As A Crash Situation, Through The Long Button Press Reset The Machine For 10 SEC.
14. Previous Video: Short Press In Playback Mode Switch On A Song, Play Audio Video Short According To Increase The Volume.
15. Next Video: Turn Short Boot Mode According To The Image 180 Degrees, in Playback Mode Under Short According To Switch To The Next Song, In The Playback Of Audio Video Short According To Decrease Volume.
16. Fixed Bracket
17. The Back

• Clip Switch On/Off: (Use The Machine Before, Please Insert TF Card, You Can't Get Action)

1. When The Machine Is Turned Off, Press "Play" On.
2. When The Machine Is On, Long Press "Play" Button To Turn It Off.
3. Standby Mode, Without Any Operation 3 Minutes The Machine Automatic Shutdown To Save Power.

• Record Video/Save Video

1. In The Shutdown State, Switch Machine Front Push Up "Video" Button, The Machine And The Phone Is Switched On Enter A State Of The Video, Blue Lights Flashing, Then Push Down "Video" Button To The Middle Position Save The Video.

Key Functions

2. In The Boot State, Video Mode For Short, After The Play Button Into A State Machine Video, Blue Lights Flashing.
3. Short, After The Play Button Again To Save The Current Video File.
4. 10 Minutes Video Files Automatically Saved To A File The File Is Too Large And Not Lost.
- When Recording/Save
1. In The Shutdown State, Switch Machine Front Push Down The "Record" Button And The Machine Boot Up And Into The Recording State, Blue Lights Flashing, Then Push "Record" Button To The Middle Position To Save Video.
2. In The Boot State, Recording Mode For Short, After The Play Button Into A State Machine Recording, Blue Lights Flashing.
3. Then Short Press "Play" Button, Save The Current Video File.
4. The Recording File For 1 Hour Automatically Save The File Is Too Large And Not Lost For A File.
- When Playing The Video/Audio/Photo/Deleting Files
1. Short Press The "Mode" Key To Switch To The Replay File, Short Press "Play" To Play The Video/audio/photo Files.
2. The Pause/stop Play Video/audio/photo Interface. For A Song, Short Press "Next" Short Press "On A Song" Song" For The Next Song.
3. Video/audio, Short Press "On A Song" To The Volume Increase, Short Press The "Next Song" Key To The Sound Volume Decreases.
4. Found In Video/audio Interface, You Want To Delete The File, Short Press The "Menu" Key, Will Pop Up Menu And Select Delete Confirmation Option, Short Press "Play" Button To Confirm, Short Press "Menu" Key To Exit.
- Take A photo/View Photos
1. Short Press The "Mode" Key To Switch To The Picture Mode, Short Press "Play".


Key Functions

2. Short Press The "Mode" Key To Switch To The Playback Interface, Short Press "Up A Song""next" Button View Photos.
- The Settings Menu
1. The Model Of Video/photo Mode, Short Press The "Menu" Key Pop Up Settings Menu, Short Press The "Up A Song" "The Next Song" Key To Select, Short Press "Play" Button To Enter, Short Press "Menu" Key To Exit.
2. Resolution: Video Resolution Can Choose 1080P To 720P.
3. Photo Quality: Photo Resolution Can Choose 12M(4032 * 3024 Pixels), 10M(3648 * 2736 Pixels), 8M(3264 * 2448 Pixels) 5M(2592*1944 Pixels), 3M(2048 *1536 Pixels).
4. Loop Video: Can Choose (1 Minute, 2 Minutes, 3 Minutes 5 Minutes, 10 Minutes), The Default Video 10 Minutes Automatically Saved To A File.
5. Time Watermark: Open/Close.
6. Video Voice: Open/Close.
7. Screen Protection: Choose(1 Minute, Two Minutes, Three Minutes) 2 Minutes By Default.
8. Automatic Shutdown, can Choose(Guan, 1 Minutes, 3 Minutes, 5 Minutes) 3 Minutes By Default.
9. Voice Button: Open/Close.
10. Language: Native Support Multilingual Settings, Simplified Chinese, traditional Chinese, English And So On Many Languages Can Choose.
11. The Date And Time: Short Press The "Up A Song, The Next Song" Key Value Is Set Size, short Press "Play" Button To Confirm, Short Press "Menu" Key To Exit.
12. Formatting, Such As Replacement Of 64 G, 128 G Memory Card, Please On The Device To Format A On Its Own.
13. The Date And Time: Short Press The "Up A Song, The Next Song" Key Set Value Size, Short Press "Play" Button To Confirm, Short Press "Menu" Key To Exit.
14. Restore Factory Settings: Restore Factory Settings.
15. The Version Number.

Computer Connection

1. Insert One End Of The USB Cable Into The Machine To The USB Port, The Other End Inserted Into The Computer's Usb Port, The Machine Screen Will Pop Up "Memory" And "Camera", Short Press The "A Song", "The Next Song" Key Selection, Short Press That Will Identify And Pop-Up "Removable Disk" Logo.
2. Select "Memory" For A Few Seconds After The Computer Will Recognize, Pop-up "Removable Disk" Logo And Can Carry Out Data Transmission.
3. Select The "Camera", Can Open The Video Dialogue Software (Such As: Tencent Co), Can Be When Pcamera (Webcam).

Tip:

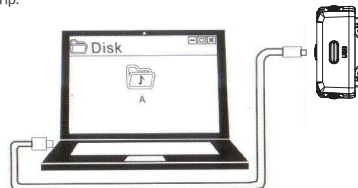

- A. Please Use The Normal Method Of Removing The Removable Disk, In Order To Prevent Data Loss.
- B. If A Computer Can't Identify, Or In A Few Seconds Later Still Did Not Pop Up Mobile Disk, Please Reset And A New Plug Again.
- C. Because To Copy The Machine Video Files To Play On The Computer, May Be Because The Data Quantity Is Too Large! Transport Couldn't Keep Up With, To Play Not Smooth, Sound Card, Etc. Bad Phenomenon.

Charging

- 1) Insert One End Of The Usb Cable Into The Machine To The USB Port, The Other End Inserted Into The Computer Or Charger USB Port, Fully Charged About 3 Hours, Charging Icon On The Screen Turns Red, Lights Flashing, Charge Indicator Into A Long Red Light On.
- 2) When The Machine Is Video Plug In The Charger, The Machine Can Charge And At The Same Time Video/Audio/ Pictures.

• Low General Troubleshooting

There Is A Problem	Possible Reasons For	The solution
Can't Boot Up	The battery Is Running Out Whether The Coan Chained By Incorrect Operation	Please Promptly To The Built-in Lithium Ion Battery Recharge, Turn Off Again After Restart Of Press The Reset Button
USB Stick, Can't Find The Removable Disk Drive	Whether The Usb Connection Damaged Computer Motherboard Support Usb Interface Usb Connection Is Properly Inserted Into The Computer And The Machine On The Usb Interface It There Is Something Wrong With The Computer	Please Replace The Usb Cable Please Upgrade Your Motherboard Drivers Please Connect Another The Usb Cable Please Restart Your Computer
Can't Video Or Video	Using Low-speed Card May Cause Storage File Is Invalid Or Not	Please Use The CLASS More Than 10 CARDS At A High Speed
Machine Without Insert Tf Card Computer Choose Open The Usb Storage Device	Computer Will Pop Up "If You Want To Format It" The Words	Insert Tf Card, And Then Select Open The Usb Storage Device

Kind Tips

If The Machine Is Not Used For A Long Time, Please Charge/discharge The Product Every 3 Months.

The Final Interpretation Of The Product Belongs
To Guan Su Ge Technology.