



CORDLESS VACUUM CLEANER

User Manual

Model: EC32



www.iyesido.com

Guangzhou Guan Su Ge Technology Co., Ltd.
Room A06,Floor 2,T28 Class,No.16,East Of Hao Ke Zhou
Street, Shixi Village, HaiZhu District,Guangzhou,China.


Product Display

Thank You For Purchasing EC32 Product!
The Brief Description Of The Product Assures You
To Operate Freely, Fully Embodies The Value Of
This Product, Please Read Carefully Before Use.



Product Display

Product Diagram

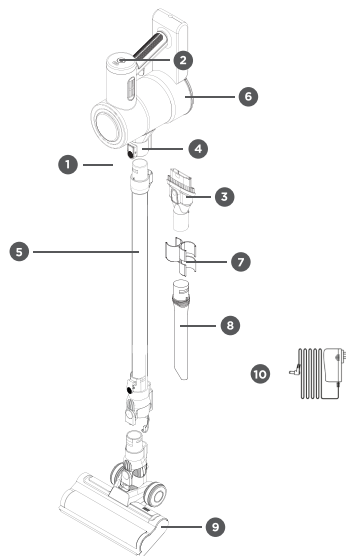


- | | | |
|---------------------------------------|-------------------|-----------------------------|
| 1. Main Vacuum | 2. Power Button | 3. Brush Tool |
| 4. Tube Release | 5. Metal Tube | 6. Dustbin Canister Release |
| 7. Accessory Mount (For Tube Storage) | 8. Crevice Tool | |
| 9. Motorized Floor Brush | 10. Power adapter | |

Product Diagram


List Of Package

1. Main Unit * 1
2. 2-in-1 Brush * 1
3. Flat Suction Nozzle * 1
4. Storage Stand * 1
5. Charger * 1
6. User Manual * 1
7. Extension Tube * 1
8. Electric Floor Brush * 1
9. Wall Mount Bracket * 1
10. Filter Cotton * 2

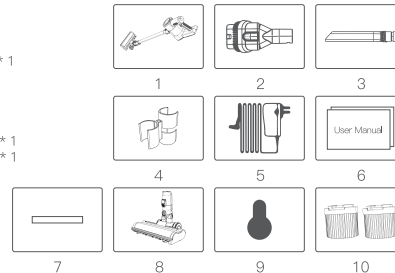

Main Vacuum And Tube Assembly

The EC32 Is Designed To Be Used As A Full Size Stick Vacuum Or As A Hand Vacuum (With The Crevice Or Brush Tools). Follow The Directions Below To Assemble The Vacuum For Desired Use.

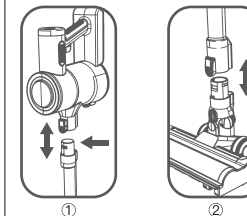

1. TUBE INSTALLATION

Insert Metal Tube Into The Main Vacuum As Shown Until You Hear A "Click".


2. FLOOR BRUSH INSTALLATION

Insert The Motorized Floor Brush Into The Metal Tube As Shown Until You Hear A "Click".

How To Use

Handvac Tools

The Crevice Tool Or Brush Tool Is Designed To Fit Directly Into The Main Vacuum Or At The End Of The Tube For Reaching Up High.

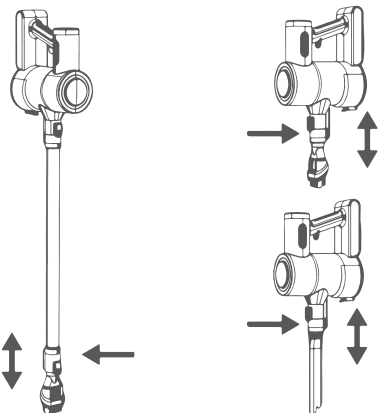


Insert The Accessory Into The Tube Or Main Vacuum As Shown Until You Hear A "Click".

Battery Charging

Charging Mode: Insert The Adapter Directly Into The Battery Charging Port And Plug It Into The Power Outlet To Begin Charging.


Note: Please Fully Charge The Battery (Up To 4-5 Hours) Before First Use For Optimal Performance.

How To Use

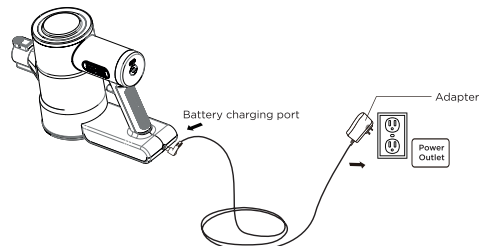


Cleaning Dustbin And Filters

Note: Empty Your Dustbin And Clean Filters Regularly To Ensure Optimal Performance.

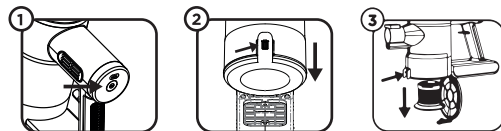

1. Turn Vacuum OFF
2. To Remove Dirt From The Dustbin And Filter, Hold The Vacuum Cleaner Upright. Pull The Dustbin Release Latch And Lift The Lid.
3. To Remove Dirt From The Dust Cup And Filter, Twist The Filter Housing Counterclockwise And Pull It Down To Remove It From The Dustbin. Then, Remove The Hepa Filter And The Screen Filter Housing.

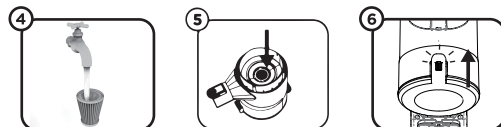

How To Use


4. Empty The Dustbin Contents Into The Trash. The Hepa Filter Can Be Tapped Gently To Dislodge Fine Dust And Then Rinsed Under Cold Water. Allow It To Fully Dry Before Reassembling.
5. When All Parts Are Dry, Assemble Them In Reverse Order. Replace The Filter Housing By Turning It Clockwise To Secure It In Place.
6. Attach The Dustbin To The Vacuum Cleaner By Pressing It Until You Hear A "Click".

Note: To Maintain Suction And Cleaning Performance, Regularly Check The HEPA And Pre-motor Filters To Ensure They Are Not Clogged.


Caution: Never Operate Your Vacuum Cleaner Without The Filter In Place, As Doing So May Damage The Motor And Void The Warranty.

Cleaning The Floor Brush


Warning: Turn Off The Vacuum And Unplug It From The Outlet Before Performing Maintenance.

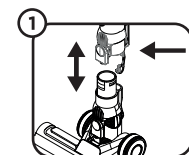

1. Remove The Floor Brush From The Tube By Pressing The Release Button And Pull Apart.

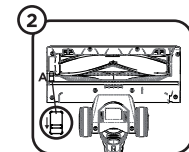


2. Turn The Floor Brush Over And Locate The Brush Roll Release Switch (A). Slide The Release Switch, Hold It, And Pull The Floor Brush Up.

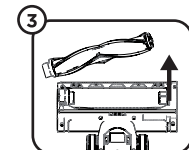

3. Lift Out The Roller Brush By Pulling Up On The Tab. Remove Debris/hair Wrapped Around The Roller.

How To Use

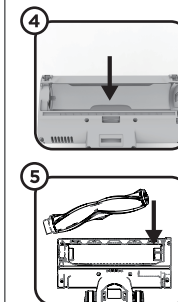

4. Wipe Down The Inside Of The Housing And Ensure There Is No Debris Lodged In The Neck Of The Brush Or Metal Tube.

5. To Reinstall The Roller, Slide The Release Switch Again And Hold It, Then Snap The Cleaning Roller Back In, As Shown.

Warning: Polarization Instruction

To Reduce The Risk Of Electric Shock, This Appliance Has A Polarized Plug (One Blade Is Wider Than The Other). This Plug Will Fit Into A Polarized Outlet Only One Way. If The Plug Does Not Fit Fully Into The Outlet, Reverse The Plug. If It Still Does Not Fit, Contact A Qualified Electrician To Install The Proper Outlet. Do Not Alter The Plug In Any Way.

Warning:

To Reduce Risk Of Injury, Read The Instruction Manual.
Do Not Vacuum Water, Wet Objects, Liquids, Ashes, Hot Coals, Cigarette Butts, Matches Or Any Hot, Smoking Or Burning Objects, Etc.
Do Not Pick Up Flammable Or Combustible Materials (I.E. Lighter Fluid, Petrol, Kerosene, Etc.) Or Use In The Presence Of Explosive Liquids Or Vapor.
Do Not Pick Up Toxic Material (I.E. Chlorine Bleach, Ammonia, Drain Cleaner, Etc.
Do Not Vacuum Toner (For Laser Printer, Copy Machines Etc.) As There Is A Risk Of Fire And Explosion.
Do Not Vacuum Plaster, Cement Etc., As The Filter Can Become Blocked.
Do Not Use Vacuum Without All The Filters Fitted.
Do Not Store Or Use The Appliance Near High Temperature Areas.
Do Not Run Over The Power Cord With The Vacuum Cleaner.
Do Not Use Vacuum Cleaner If It Is Blocked. Turn Off And Clear All Blockages Before Continuing.
Do Not Use Vacuum Cleaner With Blocked Filters. Clean Or Replace Filters Before Continuing. (Refer To User Maintenance Section).
Do Not Use Vacuum Cleaner If The Appliance Malfunctions, Sounds Abnormal, Smells, Smokes, Is Dropped Or Damaged In Any Manner Or Any Breakage Is Found During Operation.
Do Not Misuse The Cord. Never Pull The Appliance By The Cord Or Pull To Disconnect It From The Outlet. Instead, Grasp The Plug And Pull To Disconnect.
Do Not Use Vacuum Cleaner To Pick Up Large, Hard, Or Sharp Objects Such As Glass, Nails, Screws, Coins, Etc., That Are Likely To Cause Damage.
Do Not Use Vacuum Cleaner If It Has Been Dropped, Damaged, Left Outdoors, Or Dropped Into Liquid (Water Etc.)
Do Not Close Door On Cord, Or Pull Cord Around Sharp Edges Or Corners.
Do Not Leave Unattended When Plugged In And/or Switched On
Do Not Handle The Plug Or Vacuum Cleaner With Wet Hands.
Do Not Use With Any Openings Blocked And Do Not Restrict Airflow.
Do Not Operate The Appliance With A Damaged Cord Or Plug. If The Supply Cord Is Damaged, It Must Be Replaced By The Manufacturer, Its Service Agent Or Similarly Qualified Persons In Order To Avoid A Hazard.
Do Not Attempt To Modify This Product In Any Way.