



FRIDGE DEODORIZER

User Manual Model: EC33



www.iyesido.com


Guangzhou Guan Su Ge Technology Co., Ltd.
Room A06/Floor 2,T28 Class,No.16,East Of Hao Ka Zhou
Street, Shixi Village, HaiZhu District,Guangzhou,China.

Thank You For Purchasing EC33 Product!
The Brief Description Of The Product Assures You
To Operate Freely, Fully Embodies The Value Of
This Product, Please Read Carefully Before Use.



*Display Of Appearance

Function Diagram

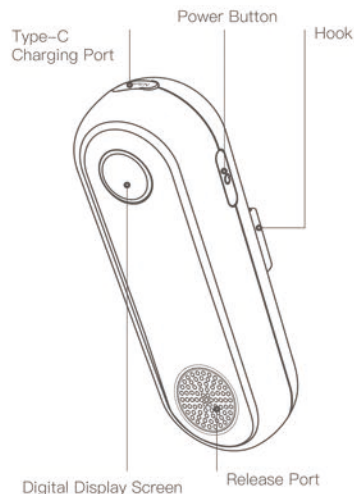

How To Use 1

Product Mode Introduction

- Mode ①: Light Odor Removal Mode: The Product Runs For 15 Minutes, Then Pauses For 45 Minutes, Runs Again For 5 Minutes, Pauses For 55 Minutes, And Repeats This Cycle Until The Battery Is Exhausted.
- Mode ②: Deep Odor Removal Mode: The Product Runs For 15 Minutes, Then Pauses For 45 Minutes, Runs Again For 5 Minutes, Pauses For 25 Minutes, Runs Again For 5 Minutes, Pauses For 25 Minutes... And Repeats This Cycle Until The Battery Is Exhausted.
- Mode ③: Sterilization Mode: The Product Runs For 30 Minutes, Then Pauses For 30 Minutes, Runs Again For 30 Minutes, Pauses For 30 Minutes... And Repeats This Cycle Until The Battery Is Exhausted.

Operation Instructions

- Long Press The Power Button For 2 Seconds To Turn On The Product. The Product Starts In Mode 1 By Default. The Digital Display Shows The Number "1" Flashing At 1-second Intervals. After 5 Seconds Of Inactivity, The Display Switches To Real-time Battery Level (E.G., 88%). After 10 Seconds, The Screen Enters Sleep Mode, The Light Turns Off, And The "=" Symbol On The Indicator Remains Lit.
- After Powering On, Short Press The Power Button Once To Switch To Mode 2. The Digital Display Shows The Number "2" Flashing At 1-second Intervals. After 5 Seconds Of Inactivity, The Display Switches To Real-time Battery Level. After 10 Seconds, The Display Enters Sleep Mode, The Light Turns Off, And The "=" Symbol On The Indicator Remains Lit.
- After Powering On, Short Press The Power Button Twice To Switch To Mode 3. The Digital Display Shows The Number "3" Flashing At 1-second Intervals. After 5 Seconds Of Inactivity, The Display Switches To Real-time Battery Level. After 10 Seconds, The Display Enters Sleep Mode, The Light Turns Off, And The "=" Symbol On The Indicator Remains Lit.
- The Modes Switch In A Continuous Cycle: Mode 1 → Mode 2 → Mode 3 → Mode 1 → Mode 2 → Mode 3...

How To Use 2

- Long Press The Power Button For 2 Seconds To Turn Off The Product. The Display Turns Off And The Indicator Light Goes Out.
- When The Product Is Powered On And Displaying Real-time Battery Level, Short Press The Power Button. The Display Will Switch To The Current Mode's Number Flashing. Short Press Again To Change The Mode. After 5 Seconds Of Inactivity, The Display Returns To Real-time Battery Level. After 10 Seconds, The Display Enters Sleep Mode, The Light Turns Off, And The "=" Symbol On The Indicator Remains Lit.

Charging Display

- When Charging, The Last Digit Of The Digital Display Flashes Continuously At 1-second Intervals. Once Fully Charged, It Will Display 100% And Remain Lit.
- When The Battery Is Low, The Last Digit Of The Display Flashes 5 Times At 0.5-second Intervals When Turning On, Prompting To Charge, Then Turns Off, And The Product Will Not Turn On.

Sleep Mode


When The Product Is Powered On And The Display Is In Sleep Mode, Short Press The Power Button Once, The Display Will Light Up And Show The Real-time Battery Level. Short Press Again To Show The Current Mode Flashing.

Applicable Range

Applicable To Refrigerators, Shoe Cabinets, Wardrobes, Cabinets, Bookshelves, Cars, Pet Boxes, Etc.

Hook Installation

To Hang The Product, Insert The "Hook" Into The "Main Unit" Hole To Suspend It.

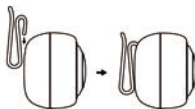

Product Parameters

Model: EC33
Material: ABS
Input: 5V = 1A (Max)
Charging Time: About 2-3 Hours
Charging Interface: Type-C
Battery Capacity: 2000 mAh (Li-ion Battery)
Rated Power: 0.1W
Long Duration: About 25 Days

Safety Instructions

- Do Not Use This Product In Environments That Are Flammable, Explosive, Corrosive, Or Contain Metal Dust Particles.
- Prevent The Main Unit From Falling Or Experiencing Strong Shaking.
- If The Product Makes Unusual Sounds, Emits Strange Odors, Or Overheats, Stop Using It Immediately.
- Do Not Place The Product In The Freezer Compartment Of A Refrigerator.
- Do Not Use The Product In High-temperature Or High-humidity Environments.
- The Battery Should Be Disposed Of Safely. The Battery Of This Product Should Not Be Replaced By The User.

List Of Package

- Fridge Deodorizer x1
- User Manual x1
- Charging Cable x1