



HAIR STRAIGHTENER

User Manual
Model: MG31



www.iyesido.com

Guangzhou Guan Su Ge Technology Co., Ltd.
Room A06, Floor 2, T28 Class, No. 16, East Of Hao Ke Zhou
Street, Shixi Village, HaiZhu District, Guangzhou, China.

Thank You For Purchasing MG31 Product!
The Brief Description Of The Product Assures You
To Operate Freely, Fully Embodies The Value Of
This Product, Please Read Carefully Before Use.




*Display Of Appearance

Safety Instructions

To Minimize The Risk Of Injury, Loss Of Life, Electric Shock, Fire, And Property Damage, Please Adhere To The Following Safety Measures:

- Always Unplug The Device After Use.
- Regularly Inspect The Power Cord. If Damaged, Contact An Authorized Mixcolor Service Center Or Qualified Personnel For Replacement To Avoid Potential Danger.
- Do Not Use This Device For Any Purposes Other Than Those Described In This Manual.
- Never Leave The Device Unattended When Connected To A Power Source.
- Do Not Use Any Accessories Or Parts From Other Manufacturers, Or Those Not Specifically Recommended. Using Such Items Will Void The Warranty.
- Do Not Coil The Power Cord Around The Device.
- Do Not Use This Product For Wigs.
- Allow The Device To Cool Down Before Storing It.
- Stay Alert While Using The Device, As It Can Reach Very High Temperatures. Only Hold The Handle And Avoid Touching Other Parts, As They Can Get Extremely Hot And May Cause Burns.
- Always Place The Device With A Stand On A Heat-resistant, Stable Surface. The Heating Plate Must Not Come Into Contact With The Surface Or Any Flammable Materials.
- Avoid Contact Between The Power Cord And The Device's Heated Parts.
- Keep The Device Away From Flammable Objects And Materials When In Use.
- Do Not Cover The Heating Elements With Any Materials (E.G., Towels Or Clothing) When The Device Is Heating.
- Do Not Use This Device On Wet Hair.
- Keep The Heating Plate Clean, Free Of Dust, And Styling Products Such As Mousse, Sprays, Or Hair Gels. Never Use This Device With Styling Products Simultaneously.
- If The Device Is Used On Dyed Hair, The Heating Plate May Become Stained.
- After Use, Immediately Unplug The Device From The Power Outlet. Do Not Use It While Bathing Or Showering. Never Place Or Store The Device In A Position Where It Might Fall Into Or Be Immersed In Water Or Any Other Liquids.

How To Use 1

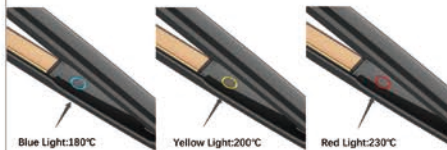

There Is Only One Key For Both Power On/Off And Temperature Control. Press And Hold To Power Off.

Before Use

1. Wash Your Hair With Shampoo And Conditioner, Dry Your Hair And Comb Your Hair Thoroughly.
Note: Make Sure Your Hair Is Completely Dry Before Using The Appliance.
2. Plug Your Appliance Into An Alternating Current Outlet Only And Make Sure That Your Household Voltage Corresponds To The Voltage Printed On The Appliance.
3. Insert The Plug Into The Power Outlet.
4. Press The Circular Key To Power On And Temperature Control: 180°C (360 °F), 200°C (400 °F), 230°C (450 °F)
Note: Pay Full Attention When Using The Appliance Since It Could Be Extremely Hot. Only Hold The Handle As Other Parts Are Hot And Avoid Contact With The Skin.
Note: High Temperature May Damage Your Hair, Select A Suitable Temperature Setting For Your Hair.

Tips For Styling

- Hair Type And Corresponding Temperature Setting
- For Fine Hair, Use The Temperature Setting Of 180°C (360 °F).
 - For Thick Hair, Use The Temperature Setting Of 200°C (400 °F).
 - For Very Thick Hair, Use The Temperature Setting Of 230°C (450 °F).

NOTE: Please Choose The Suitable Temperature According To Your Hair Type Before Use.

How To Use 2


How To Put Up Hair



1. Evenly Part The Hair To The Left And Right.



2. Then, Divide The Hair Into Four Sections Evenly.

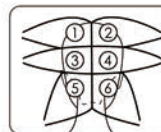

3. Next, Section The Hair At The Back Of The Head From The Top To The Bottom Into Six Parts.



4. Twist Each Section Of Hair Into A Roll And Secure It With Hairpins.



5. Start Styling From The Bottom Of The Back Of Your Head.

How To Use 3

1. Please Turn Off The Power And Practice In Front Of A Mirror Until You Are Familiar With The Use Of This Device.
2. Before Using This Device, Spray A Heat Protection Spray To Prevent Hair Damage And Enhance Shine.
3. After Using This Device, Apply A Styling Product To Help The Hairstyle Last Longer.

Straightening Instructions



1. Take A Section Of Hair Approximately 5 Centimeters Wide.



2. Glide The Straightener From The Top Of The Hair Straight Down To The Ends.



3. To Straighten The Remaining Hair, Repeat Steps 1 And 2.

How To Use 4

Inward Curling Instructions



1. Take A Section Of Hair Approximately 3 Centimeters Wide.



2. Rotate The Curling Wand Inward By Half A Turn (180°).



3. After The Half-turn, Ensure That The Ends Of The Hair Are Pointing Towards The Nape Of Your Neck.



4. While Holding This Section Of Hair, Slowly Move The Curling Wand At A Steady Pace.



5. Release The Section Of Hair To Complete The Curl.




6. To Create Inward Curls In The Remaining Hair, Repeat Steps 1 To 5.

How To Use 5

Outward Curling Instructions



1. Take A Section Of Hair Approximately 3 Centimeters Wide.

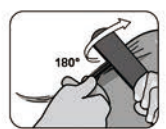

2. Rotate The Curling Iron Outward By Half A Turn (180°).



3. After The Half-turn, Ensure That The Ends Of The Hair Are Pointing Away From Your Head.



4. While Holding This Section Of Hair, Slowly Move The Curling Iron At A Steady Pace.



5. Release The Section Of Hair To Complete The Curl.



6. To Create Outward Curls In The Remaining Hair, Repeat Steps 1 To 5.

Product Parameters

Model: MG31
Material: PET + Aluminum
Input: AC100V~240V 50/60HZ
Power: 45W Max
Temperature Range: 180°C – 200°C – 230°C
Power Cord Length: 2m

List Of Package

1. Hair Straightener x1
2. User Manual x1
3. Power Cord x1
4. Silicone Sleeve x1

After Use

1. After Use, Set The Device To The Lowest Temperature Setting. Turn Off The Device And Ensure The Indicator Light Is Off.
2. Unplug The Device From The Power Source.

Precautions

1. Allow The Device To Cool Completely Before Storing To Prevent Fire Hazards, As The Heating Plate Can Remain Hot For About 30 Minutes.
2. Do Not Place The Device Near Flammable Materials.
3. After Cooling, Clean The Device With A Damp Cloth And A Soft Brush, Then Dry It With A Dry Cloth.

Note: Do Not Use Alcohol, Solvents, Benzene, Or Adhesive Removers To Clean The Heating Plate.

Environmental Notice

The Crossed-out Trash Bin Symbol Indicates That This Device Should Not Be Treated As Household Waste But Should Be Handed Over To The Appropriate Collection Points For The Recycling Of Electrical And Electronic Equipment.

Safety Instructions

- Always Unplug The Device After Use.
- Check The Power Cord Regularly. If Damaged, Get It Replaced By A Qualified Technician.
- Do Not Use The Device For Anything Not Mentioned In The Manual.
- Never Leave The Device Unattended When Plugged In.
- Only Use Recommended Attachments To Avoid Warranty Issues.
- Don't Wrap The Power Cord Around The Device.
- Not For Use On Wigs.
- Let The Device Cool Before Storing It.
- Handle With Care; Only Touch The Handle As Other Parts Can Get Very Hot.
- Place The Device On A Heat-resistant, Stable Surface.
- Keep The Power Cord Away From Hot Parts.
- Keep Away From Flammable Materials When In Use.
- Don't Cover The Device While It's Heating.
- Do Not Use On Wet Hair.
- Keep The Heating Plate Clean And Free From Styling Products.
- Dye May Stain The Heating Plate.
- Unplug After Use And Do Not Use Near Water Or While Bathing.

Troubleshooting

The Device Does Not Heat Up:

1. Check If The Device Is Properly Plugged In; If Not, Plug It In And Turn It On.
2. Check If The Device Is In Energy-saving Mode; If So, Restart The Device.
3. Check If The Power Cord Is Damaged; If It Is, Contact For A Replacement.

Unsatisfactory Styling Results:

1. Ensure You Are Using The Device Correctly.
2. Make Sure To Select The Appropriate Temperature Setting For Your Hair Type.