



TOUCH AIR FRYER

User Manual Model: EC35



www.iesido.com


Guangzhou Guan Su Ge Technology Co., Ltd.
Room A06,Floor 2,T28 Class,No.16,East Of Hao Ke Zhou
Street, Shixi Village, HaiZhu District,Guangzhou,China.

Thank You For Purchasing EC35 Product!
The Brief Description Of The Product Assures You
To Operate Freely, Fully Embodies The Value Of
This Product, Please Read Carefully Before Use.



*Display Of Appearance

Function Diagram

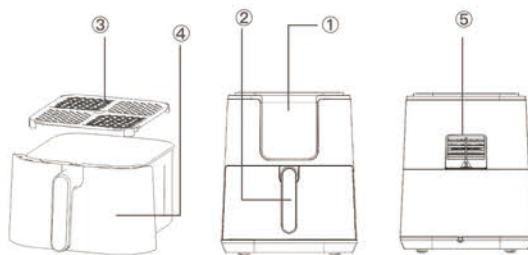

- 1. Control Panel:** Used To Adjust Settings Like Temperature, Time, And Mode. Users Operate It By Touch Or Buttons To Check The Device's Status.
- 2. Handle:** Lets Users Open, Close, Or Move The Device. Designed For Comfort And Safety.
- 3. Rack:** Holds Food Or Items For Even Heating Or Cooking. Removable For Easy Cleaning.
- 4. Drawer:** Stores Food Or Accessories And Pulls Out Easily For Access. Prevents Spills.
- 5. Air Outlet:** Releases Hot Air To Keep The Temperature Even For Better Heating



- Start/Pause Button
- Power Button
- Temperature/Time Adjustment Button
- Icon - / Icon +
- Menu Icon
- Temperature/Time Indicator Light
- Digital Display Screen (Displays Time And Temperature)

How To Use 1

Menu Program



Before First Use

- Wipe The Exterior Of The Device With A Clean Damp Cloth. Use A Detergent And Warm Water To Clean The Drawers And Grill, Or Place Them In The Dishwasher For Cleaning.
- When Using The Device For The First Time, It Should Be Run Empty (Without Any Food Inside) As Any Coating Residue May Produce Some Smoke Or Odors. To Do This, Follow The Instructions In The "Setup & Connection" And "Usage" Sections. Set The Device To The Highest Temperature And Heat It Empty For About 5 Minutes.
- Afterward, Clean It Again.

Functions

For Reference, The Table Below Provides An Overview Of The Various Programs.

- Default 200°C, Adjustable 60–200°C; Default 15 Mins, Adjustable 1–60 Mins; Shake Required (Yes).
- Default 200°C, Adjustable 60–200°C; Default 10 Mins, Adjustable 1–60 Mins; Shake Required (Yes).
- Default 200°C, Adjustable 60–200°C; Default 25 Mins, Adjustable 1–60 Mins; Shake Required (Yes).
- Default 200°C, Adjustable 60–200°C; Default 20 Mins, Adjustable 1–60 Mins; Shake Required (Yes).
- Default 200°C, Adjustable 60–200°C; Default 15 Mins, Adjustable 1–60 Mins; Shake Required (Yes).

How To Use 2

- Default 160°C, Adjustable 60–200°C; Default 20 Mins, Adjustable 1–60 Mins; No Shake Required (No).
- Default 180°C, Adjustable 60–200°C; Default 12 Mins, Adjustable 1–60 Mins; Shake Required (Yes).
- Default 180°C, Adjustable 60–200°C; Default 15 Mins, Adjustable 1–60 Mins; No Shake Required (No).
- Default 60°C, Adjustable 60–200°C; Default 20 Mins, Adjustable 1–30 Mins; Shake Required (Yes).
- Default 200°C, Adjustable 60–200°C; Default 18 Mins, Adjustable 1–60 Mins; Shake Required (Yes).
- Default 60°C, Adjustable 40–80°C; Default 6 Hours, Adjustable 1 Min–12 Hours; Shake Required (Yes).
- DIY** Default 200°C, Adjustable 60–200°C; Default 30 Mins, Adjustable 1–30 Mins; Shake Required (Yes)

Note: When Using The Air Fryer, You Can Adjust The Temperature Or Time Based On The Actual Cooking Results.

Adjusting Temperature And Cooking Time

After Selecting The Program, Press The "TEMP/TIME" Button. Then, Press The "+/-" Button To Change The Default Settings. (Note: You Must Press The "TEMP/TIME" Button First To Enter The "Time/ Temperature" Settings.)

Time Settings

Press The "TEMP/TIME" Button Until The "Time" Indicator Lights Up. The Dehydrating Function Can Be Adjusted In 1-minute Increments Within 60 Minutes. If The Time Exceeds 60 Minutes, It Can Be Adjusted In 30-minute Increments. For Other Menu Functions, Each Press Of The "+/-" Button Will Adjust The Time By 1-minute Increments.

Temperature Settings

Press The "TEMP/TIME" Button Until The "Temperature" Indicator Lights Up. Each Press Of The "+/-" Button Will Adjust The Temperature By 5°C Increments. (Note: You Can Adjust Both Time And Temperature During Cooking.)

How To Use 3

Shake Function

When The Program Reaches Halfway Through The Set Time, The Selected Menu Button Will Flash, The Display Will Show "SHA" And Flash, And Five Beeps Will Sound To Remind The User To Shake The Food. If The Drawer Is Not Pulled Out, The Program Will Continue Running Until The Countdown Ends.

- Note:** The Bread And Pizza Programs Do Not Have A Shake Function.
- Standby Mode: The System Enters Standby Mode When No Buttons Are Pressed.
 - Power On Mode: Press The Power Button To Turn The Device On.
 - Running Mode: Select The Menu And Press The Power Button To Start Cooking.

Tips

- When Cooking Food, Generally No Oil Or Only A Small Amount (2–3 Teaspoons) Is Needed.
- Very Light Foods May Be Blown Around By The Circulating Air. If Necessary, It Is Recommended To Secure Them With Toothpicks Or Similar Items.
- Cooking Time Depends On The Size, Quantity, And Temperature Of The Food. However, Generally Speaking, Cooking Time Is Shorter Than In A Conventional Oven. It's Recommended To Set A Shorter Cooking Time First And Gradually Increase It If Needed.
- Stir The Food Occasionally Or Flip It With Plastic Or Wooden Tongs To Ensure Even Cooking.
- Check The Food's Status Midway Through The Cooking Process. If It's Already Cooked, Please Turn Off The Device, Even If The Program Hasn't Finished Yet.

Setup And Connection

Please Note!

- Before Each Use, Check The Device And Connecting Cables For Any Damage. Only Use The Device If It Is Undamaged And Functioning Properly.

How To Use 4

- Do Not Place The Device On A Soft Surface. The Ventilation Holes On The Bottom Of The Device Must Not Be Blocked.
- Ensure There Is Enough Clearance Around The Device. Do Not Place The Device Under Kitchen Cabinets Or Similar Cupboards. Rising Steam Could Damage Them!
- Only Connect The Device To A Power Outlet That Meets The Installation Specifications And Technical Parameters Of The Device. After Connecting, The Power Outlet Should Still Be Easily Accessible For Quick Disconnection Of The Power Supply.
- Do Not Use Any Extension Cords.
- Do Not Connect This Device To A Multi-outlet Power Strip Along With Other High-power Devices To Prevent Overload And Potential Short Circuits (Fire Hazards).
- Ensure The Connecting Cables Do Not Pose A Tripping Hazard. The Cables Should Not Hang Down From The Surface Where The Device Is Placed To Avoid The Device Being Pulled Down.
- Ensure The Connecting Cables Are Not Pinched, Bent, Placed On Sharp Edges, Or In Contact With High-temperature Surfaces (Such As The Hot Surface Of The Device).
- Place The Device On A Dry, Clean, Flat, And Heat-resistant Surface, Such As The Kitchen Countertop. Ensure There Is Enough Space Around The Device (At Least 20 cm On The Sides And At Least 50 cm Above).
- Unroll The Connecting Cable Completely, And Then Plug The Power Plug Into The Power Outlet.

Usage

In General, You Can Use This Device To Make All Dishes That Can Be Made In A Traditional Convection Oven. For Best Results, Please Read The "Tips" Section.

Please Note!

- Before Using The Device, Ensure That The Device And The Exterior Of The Drawer Are Clean And Dry.
- Do Not Use The Device Continuously For More Than 4 Hours.

How To Use 5

- Except For The Initial "Empty Burn" Operation Before First Use, Do Not Operate The Device When Empty.
 - Do Not Place Food Wrapped In Plastic Wrap Or Plastic Bags Into The Device.
 - Ensure That Food Does Not Touch The Heating Elements.
 - Do Not Overfill The Drawer To Allow Hot Air To Circulate Efficiently Inside The Cooking Chamber. The Drawer Should Be Filled To No More Than 1/3 Of Its Capacity.
 - Ensure That Fatty Foods Do Not Overheat, As This May Cause A Fire.
 - After Use, Always Place The Hot Drawer On A Heat-resistant Surface.
- Note:** The Device Does Not Require Preheating.

Operating Steps

- Prepare The Food You Wish To Cook.
- Place The Food In The Drawer And Insert The Drawer Into The Cooking Chamber.
- Plug The Power Cord Into The Outlet. A Beep Will Sound, Indicating That The Air Fryer Is Powered On. The Display Will Light Up For 1 Second Before Entering Standby Mode. In Standby Mode, The "Power" Button's Indicator Light Will Blink.
Note: At This Time, Only The "Power" Button Is Operational.
- Press The "Power" Button To Enter The Startup Setting Mode. By Default, The First Menu Button Will Blink, While The Other Menu Buttons Will Stay Lit. Press The "Menu Select" Button To Switch To The Second Menu Button, And Continue Cycling Through The Menus. Once You Select The Appropriate Menu Function, If Needed, Press The "Time/temperature" Button To Adjust The Time And Temperature. After Settings Are Complete, Press The "Start/pause" Button To Begin The Cooking Process.

Note 1: During Operation, If You Pull Out The Drawer, The Device Will Stop Working, The LED Screen And Menu Icons Will Disappear, And The Countdown Will Stop. After Closing The Drawer, The Remaining Time Will Continue.

How To Use 6

- Note 2: During Operation, You Can Press The "Start/Pause" Button To Pause The Operation. After Pausing, You Can Switch To Another Menu. If No Operation Is Selected Within 5 Minutes, The Device Will Return To Standby Mode.
- After The Cooking Time Is Complete, The Heater Will Stop Heating, And The Device Will Emit 10 Beeps To Indicate The Process Is Finished.
 - Press The "Power" Button To Turn Off The Device, Then Unplug The Power Cord From The Outlet.
 - Pull Out The Drawer And Place It On A Heat-resistant Surface. Remove The Food From The Drawer.
 - Allow The Drawer And The Grill To Cool Down, Then Clean Them (See The "Cleaning And Storage" Section).

Cleaning And Storage

- Do Not Use Any Sharp Or Abrasive Cleaners Or Cleaning Pads, As They May Damage The Surface.
- Clean The Drawer And Grill With Detergent And Warm Water, Or Place Them In The Dishwasher. To Maintain The Parts' Quality For As Long As Possible, It Is Best To Wash Them By Hand. For Stubborn Stains, Soak Them In Warm Water And Detergent Before Cleaning.
- If Necessary, Wipe The Exterior Of The Device, The Cooking Chamber, And The Heating Elements With A Clean, Dry Cloth.
- Allow All Parts To Dry Completely Or Wipe Them Dry.
- When Not In Use For An Extended Period, Store The Device In A Clean, Dry Place, Out Of The Reach Of Children And Pets.

List Of Package

- Air Fryer x1
- User Manual x1
- Inner Pot x1
- Grill Rack x1

Product Parameters

Model: EC35
Material: Food-Grade Non-toxic PP Material
Inner Pot: Alloy + Non-toxic Non-stick Coating
Input: AC 220–240V~ 50–60Hz
Max Power: 1500W
Capacity: 6L
Heating Method: Hot Air
Opening Method: Pull-out Style
Control Method: Touch Control + Custom Settings
Power Cord Length: 80CM
Heating Tube: 200°C Stainless Steel

Safety Instructions

- Warning:** The Safety Instructions, Illustrations, And Technical Data Provided With This Device Are Not All-inclusive. Failure To Follow Them Could Lead To Electric Shock, Fire, Or Injury.
- This Device Can Be Used By Children Over 8 Years Old, Or Those With Physical, Sensory, Or Mental Limitations, Only Under Adult Supervision Or After Proper Safety Training.
 - Children Should Not Use This Device As A Toy.
 - Cleaning And Maintenance Must Be Done By Children Only If They Are Over 8 Years Old And Under Supervision.
 - Keep Children Under 8 And Animals Away From The Device And Cables.
 - Caution:** Hot Surfaces! The Device And Accessories Get Very Hot During Use. Do Not Touch Heating Parts While In Use Or Right After. Wait For The Device To Cool Down Before Touching Or Cleaning. Always Use Oven Mitts For Hot Accessories.
 - Never Immerse The Device Or Cables In Water Or Any Liquid, As This Could Cause Electric Shock.
 - Do Not Pour Liquids (Such As Oil Or Water) Directly Into The Device Or Drawer, And Do Not Place Containers With Liquids Inside.
 - Always Unplug The Device Before Leaving It Unattended, Moving, Or Cleaning.
 - Do Not Modify The Device Or Cables. If Damaged, Have It Repaired Or Replaced By The Manufacturer Or A Professional To Avoid Danger.