MECOOL
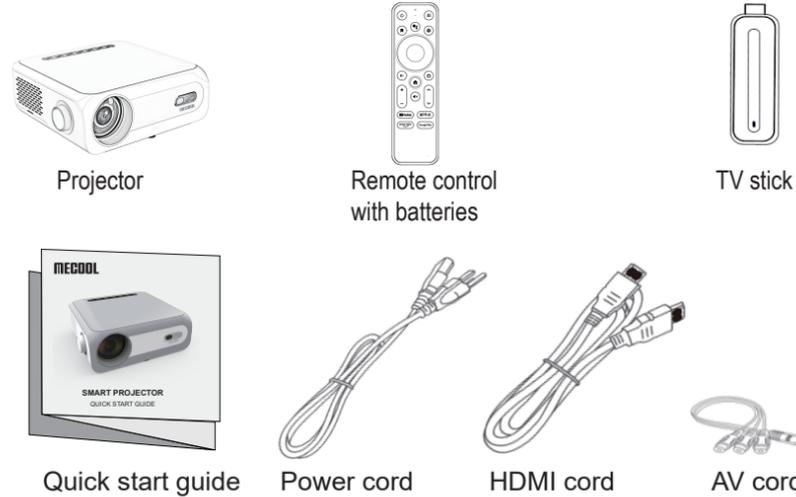
MECOOL KP1 SMART PROJECTOR

QUICK START GUIDE

Standard Accessories

Make sure that you have all of the items shown below

Projector

Remote control with batteries
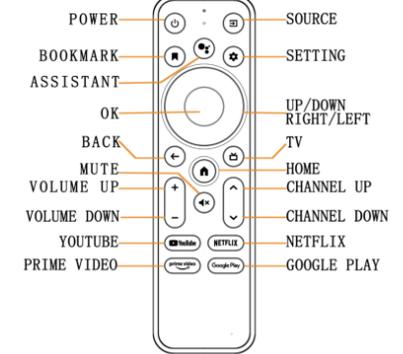
TV stick

Quick start guide

Power cord

HDMI cord

AV cord

The supplied accessories to different area may differ from those illustrated

---

Quick Install

① USB
② HDMI1
③ HDMI2
④ AV IN
⑤ AUDIO OUT
⑥ TF

POWER — SOURCE
BOOKMARK — SETTING
ASSISTANT
OK — UP/DOWN RIGHT/LEFT
BACK — TV
MUTE — HOME
VOLUME UP — CHANNEL UP
VOLUME DOWN — CHANNEL DOWN
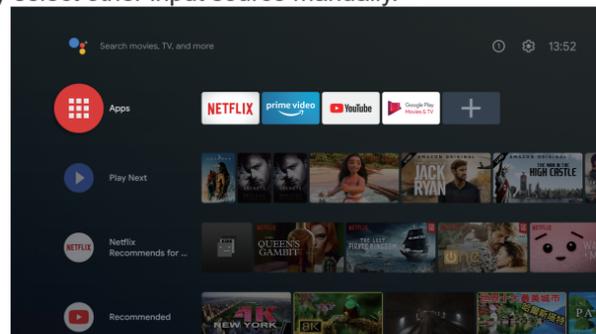YOUTUBE — NETFLIX
PRIME VIDEO — GOOGLE PLAY

Please insert the TV stick into the card slot before power on.

Quick Start

At the first time to boot up the projector, please put the batteries into RCU and make sure the TV Stick inserted into the Projector, and then get the RCU close to the projector, the TV Stick will be paired with the RCU automatically.

If pair failed please press " BACK" ← and "HOME " ⌂ to start pairing manually and the **blue LED** on when accomplished .

The projector will present TV Stick input as default after booting up, you may select other input source manually.

Quick Setting

When you want to make settings of the projector , please press "SOURCE" to enter projector setting mode and the **red LED** always on.

SOURCE
AV
HDMI1
HDMI2
USB
TF

And then press "SETTING" to make settings of projector, and press "TV " to come back to TV stick mode.

MECOOL

Customer Service Email
service@mecool.com

FC
RoHS CE

MADE IN CHINA

尺寸：20X100mm