


C12说明书: 70*80 MM对折



FAST WIRELESS CHARGING PAD SCHNELLES DRAHTLOSES LADEPAD

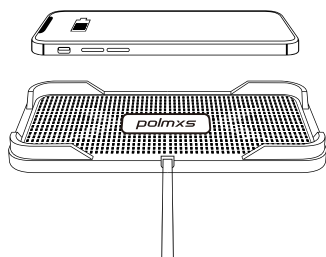


USE MANUAL

Please read this manual carefully and keep it properly before using the product. For reference.

Thank you for purchasing our products! Below is the product's information and use method, if you need more help, please contact us by the information at the end of the manual.

product's information


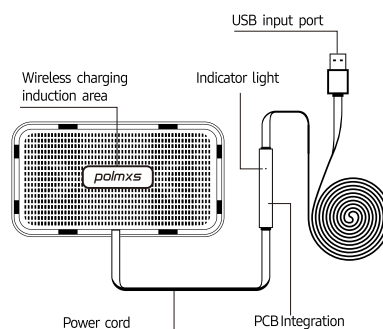


Item No. : C12Y
Input power : 5V/3A;9V/2A(QC2.0/3.0)
Size : 183×99×15.5mm
Suitable for: Phones which support qi wireless charging

Working power : 5W/7.5W/10W/15W
Charging Efficiency : ≥75%
Color : Black


How to use it ?

1. First you have to put it into your car storage box or any where you like. Please make sure that the pad is flat and the position is safe for your phone and your driving.

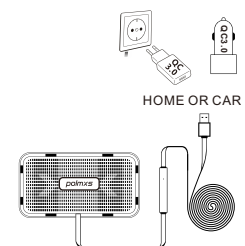

2. Plus the usb connector to the fast car charger's usb port. Please do not connect it into the car's own usb port, it will not work well.


3. After the charging pad is connected to power, just put your qi charging phone on the pad. Please point to the charging area, it's very easy!

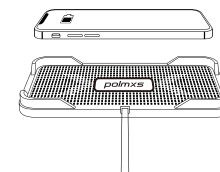

POLMXS CABLE

Wireless charging separation technology

Safe and Durable

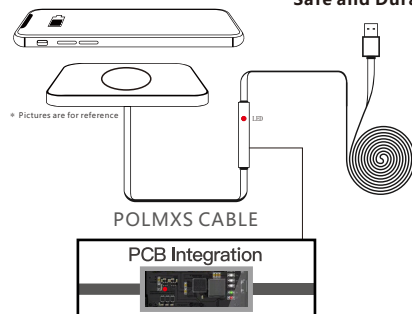

Mobile charge Safety technology

- PCB built-in cable, separately design
- Greater heat spread
- Wireless charging faster and safer
- Metal case protect PCB
- Waterproof Function

Led indicator to show the charging

- Red: Standby
 - Blue: Charging
 - Blue flashing: abnormal
- (1,The phone must support wireless charging;
2,metal or magnet is not allowed on the back of the mobile phone)

CAUTION

1. Do not squeeze, collide or pull the power cord hard to avoid damage to electronic parts.
2. Do not disassemble or throw into water or fire by yourself to avoid short-circuit leakage.
3. Please use it in the temperature range of -10°C~+45°C and store it in the temperature range of -40°C~+70°C to avoid equipment failure.
4. Do not use in severe damp or corrosive environment to avoid circuit damage.
5. Do not place magnetic or magnetic cards (ID card, bank card, etc.) too close to avoid magnetic card failure.
6. Please contact implantable medical equipment (Pacemakers, cochlear implants, etc.) Keep at least 30cm away.
7. Do not allow children or pets to play with equipment, in order to avoid injuries and unnecessary accidents.
8. Do not place metal foreign bodies on the surface of wireless charger for a long time to avoid equipment failure or fever.
9. Do not use unauthorized or incompatible power adapters to avoid damage to equipment or other hazards.
10. Please treat the equipment according to the local regulations. The equipment should not be treated as domestic waste.

WARRANTY

Warranty Scope

In normal use, it can't work properly or break down. And after the confirmation of our company, enjoy after-sales service commitment.


The following circumstances are not covered by the warranty:

- (1) Parts are not guaranteed
- (2) Faults caused by improper operation of users.
- (3) Maintenance Center maintenance due to accident, man-made damage, self-disassembly, labeling removal and non-authorized maintenance by our department Causes the breakdown..

* Note: Due to improper operation of users, mobile devices are damaged or even dangerous. The Division assumes no responsibility whatsoever.

Note for use

Please do use a fast car charger or fast adapter to work with it, If the input power is under 9V/1.67A the pad will not work in fast charging mode. And do not get power from the car's own usb port.

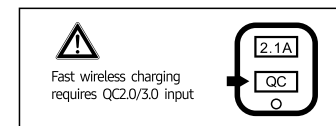

Please feel free to contact with us by below information if you need more help !

SHENZHEN POLMXS TECHNOLOGY CO.,LTD

Website:www.polmxs.com
Address : Rm 304, Bldg 2, No. 32,
Yuzhan 2nd Road,Dashuitian, Guanlan Str,
Longhua Dist, Shenzhen, Guangdong, China 518000
Contact number : (+86) 0755-33563761
US Canada Mexico contact email: service@polmxs.com
EU UK contact email: service@hkikus.com



The pictures in the instructions are sketches.Ultimately, the product in kind shall prevail.