

GT22说明书(可编辑) 105g哑粉纸, 黑白正反面印刷, 风琴折页, 28P。成品尺寸: 80*60mm


60.00 mm

80.00 mm

Quick start

Smart wearable device

1 Appearance&function introduction

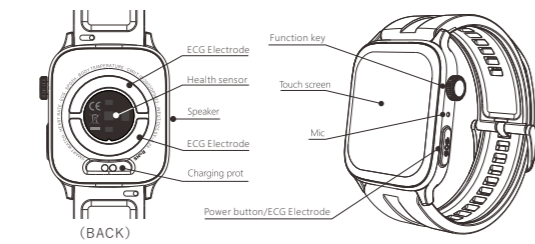

Touch instruction	Long-press	Long press the dial on the dial interface to switch the dial	Click	Choose&Confirm
Slide down	Slide down the dial on the dial interface to browse the shortcut menu		Slide up	Slide up to enter the function list on the dial interface
Slide right	Slide right the dial on the dial interface to enter 'Subbar'		Slide left	Slide left the dial on the dial interface to enter the function interface

2 Power on/off

Power on

- Long press the power button to start the watch in shutdown state.
- When starting with ultra-low power, connect the charger to charge the watch for 1 minute before starting.

Power off


- Long press the power button to shut off the watch in power-on state.
- After ultra-low battery vibration reminder, the watch will automatically shut down.

Reset

- In the power-on state, enter the function menu and select Settings> Reset.
- After restoring the factory settings, the watch will restart automatically, and all user data of the watch will be cleared after the restart.

3 Charging instructions

The accessory that comes with the watch is a magnetic charging cable. Connect the USB head of the charging cable to the power charger produced by a regular manufacturer or the USB port of the computer. Align the charging feed point of the magnetic suction line with the charging feed point of the watch in the correct direction for adsorption until the Charging instruction interface appears on the watch screen. When the watch is ultralow battery, it needs to continue charging for about 1 minute to display the charging status on the screen.

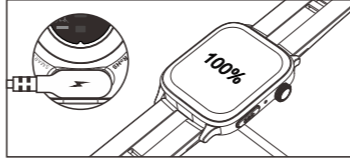

- Please use the special charging cable included in the package to charge. Please make sure the charging contacts of the watch are clean and complete before charging.
- Please use a regular manufacturer's charger with a rated output voltage of 5V/0.2A or above or a computer USB port.

- The watch will be fully charged about two hours. The screen shows 100% that means the battery is fully charged.
- If the watch Prompt "charging error" or "please replace" that means the charging contact is incorrect , please replace the watch.

4 APP download

Android users:

1. Searching for FunDo Health in the mobile application market, download and install the FunDo Health APP

2. Scan the QR code below or the QR code of the watch to download and install the FunDo Health APP

IOS users:

1. Log into the App Store on the mobile phone and search for FunDo Health to download and install the FunDo Health APP.

2. Scan the QR code below or the QR code of the watch to download and install the FunDo Health APP



5 Connect phone

- Turn on the Bluetooth switch of the phone and watch.
- Connect Bluetooth data function: Open the FunDo Health app, and open the app related permissions according to the prompts in the pop-up box. Click device> Add device, available select and click GT22 in the device list, and then the watch and mobile phone will automatically start binding and pairing and synchronize data.
- Connect to the watch Bluetooth call or connect to the mobile function: Turn on the watch's Bluetooth call or connect to the phone function, then open the phone settings > Bluetooth, select and click call-watch in the searched list, the connection is successful.




- The watch supports BT3.0 and BT4.0, so bluetooth needs to be connected twice.
- When connecting, you need to turn on the sharing system notification in the Bluetooth details settings of the mobile phone.
- In order to extend the battery life, the Bluetooth 3.0 call function will automatically sleep and will automatically wake up when an incoming call or a call is made.

6 ECG detection

Measurement methods:


- Wear the device with tight wrists, and maintain a calm state.
- Select the ECG application in the application list to enter the ECG test interface. Click the setting icon on the interface to choose the wearing method (left handed or right handed). Keep your finger in contact with the electrode pad of the down button (as shown in the figure), and the measurement will start automatically.
- After the measurement is completed, click Finish, and you can view the detailed ECG collection record report on the ECG detection application on the mobile phone.

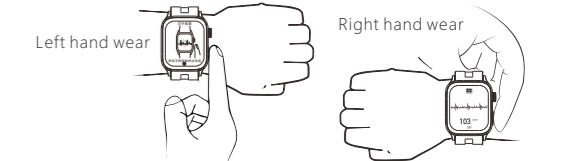

快速入门

智能穿戴设备

1 外观及功能介绍

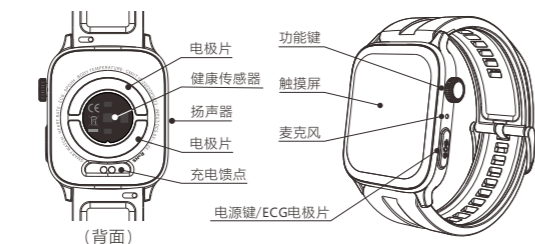

触摸屏操作指引	长按	表盘界面时长按快捷更换表盘	点击	选择/确认
下滑	下滑	表盘界面时下滑查看快捷菜单	上滑	表盘界面上滑进入功能列表
右滑	右滑	表盘界面时右滑进入侧边栏	左滑	表盘界面时左滑进入功能界面

2 开关机说明

开机

- 关机状态下, 长按电源键开机。
- 超低电量开机时, 需先连接充电器为手表充电1分钟方可正常开机。

关机


- 开机状态下, 长按电源键关机。
- 超低电量震动提醒后手表自动关机。

恢复出厂

- 开机状态下, 进入功能菜单, 选择设置 > 恢复出厂。
- 恢复出厂设置后, 手表会自动重启, 重启后手表所有用户数据清零。

3 手表充电

手表随附的配件有磁吸充电线, 将充电线的USB头连接至正规厂商生产的电源插头或者电脑USB接口, 把磁吸线的充电触点按正确的方向对准手表充电触点吸附, 直到手表屏幕出现充电电量指示。完全无电状态充电时需要持续充电1分钟左右会在屏幕显示充电状态。

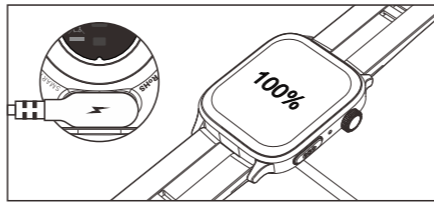


- 请使用包装内自带专用充电线充电, 充电前确认手表充电触点干净、完整。
- 请使用额定输出电压5V=0.2A及以上的正规厂商充电器或电脑USB接口为手表充电。
- 在两小时左右即可将手表充满电, 当充电指示显示100%表示电已充满。
- 若手表提示“充电错误”或者“请重新放置”等提示语时表示充电接触不良,重新放置充电即可。

4 安装APP

Android 用户:

1. 在手机应用市场搜索“FunDo Health”, 下载并安装FunDo Health APP。

2. 手机扫描下方二维码或手表二维码即可下载并安装FunDo Health APP。



IOS 用户:

1. 在手机端登录App Store 搜索“FunDo Health”, 下载并安装 FunDo Health APP。

2. 手机扫描下方二维码或手表二维码即可下载并安装 FunDo Health APP。



背面

Precautions:

- When measuring, please wear the device normally, avoid joints, and not be too loose, so as not to affect the measurement results due to the shaking of the collector.
- During the measurement process, please keep your body still, put your arms on the table or your knees, and relax your arms and fingers. At the same time, do not let go of the electrodes with your fingers, and make moderate contact with the electrodes to avoid excessive pressing or insufficient contact.
- If the skin is too dry, please wet your finger with a small amount of water before measuring; please keep the surface of the device dry, and if there is water stain, wipe it dry before measuring.
- A single measurement lasts 30 seconds.

Environmental protection

- Please do not dispose of this device and its accessories as ordinary household waste.
- Please comply with local laws and regulations regarding the handling of this device and its accessories, and support recycling operations.

Part name	Hazardous substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Watch cases	X	O	O	O	O	O
Battery	X	O	O	O	O	O
Watch strap	O	O	O	O	O	O
Desktop charger	X	O	O	O	O	O

This form is prepared in accordance with the provisions of SJ/T11364

It means that the content of this hazardous substance in all homogeneous materials of this part is under the limit requirements stipulated in GB/T26572.

X It means that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirements stipulated in GB/T26572, and there is currently no mature alternative in the industry, which meets the environmental protection requirements of the EU RoHS directive.

Disclaimer

- The contents of this manual are provided according to the status quo. Unless required by applicable law, the company does not provide any express or implied guarantees for all contents in this manual, including but not limited to the guarantee of marketability or for a specific purpose.
- To the extent permitted by applicable laws, the company will not use the relevant contents of this manual and the products described in this manual under any circumstances. Compensation shall be made for any special, incidental, indirect or secondary damages arising from the product, and no profits, data, compensation shall be made for loss of goodwill or anticipated savings.
- To the extent permitted by the relevant laws, in any case, the company's maximum liability for the losses you suffer from using the products described in this manual is limited to the price you pay for the purchase of this product.(Except for damages in accordance with applicable laws in cases involving personal injury).

- The health sign data related to the heart rate, ECG, body temperature, blood pressure, blood oxygen, etc. involved in this product are only for reference, not for medical diagnosis.

Warning

Protection level

- The watch meets the Ip67 protection level requirements and is suitable for daily waterproofing such as hand washing and rain.
- It is prohibited to use in water activities such as diving, swimming pools and coastal swimming.
- It is prohibited to use in hot water showers, hot springs, saunas(steam rooms), diving, water skiing, other wading activities and deep water activities facing high-speed water flow.
- It can prevent dust conditions such as living room, office, laboratory, light industrial studio, storage room, etc. It is prohibited to use in special dust environment.

Maintenance

- Please keep the equipment and its accessories dry. Don't dry it with external heating equipment such as microwave oven or hair dryer.
- Please use normal temperature clean water cleaning equipment regularly to avoid dirt and bacteria.
- Do not place the device and its accessories in areas where the temperature is too high or too low. Otherwise, the device may malfunction, catch fire, or explode.

- Do not subject the device and its accessories to strong shocks or vibrations, so as not to damage the device and its accessories and cause the device to malfunction.
- Please avoid using the device in the environment of hot sun, high temperature, humidity and open flame accessories.
- Do not use strong chemicals, detergents or strong detergents to clean the device or its accessories.
- Do not allow children or animals to chew or swallow the device.

After-sales service

Please contact the after-sales service of the sales office or point of purchase. Non-man-made quality problems are guaranteed for half a year. The product warranty start date is based on the date of invoice or receipt. Artificial quality problems include but are not limited to the following situations:

- Failure caused by unauthorized disassembly and reassembly of watches.
- Damage due to negligence or misuse. For example: the host enters the water, the external force bursts, accidentally falls, the casing is scratched or damaged.
- Please provide a warranty card with the date of purchase and stamped with the seal of the place of purchase, or an invoice or receipt stamped with the seal of the place of purchase. Those who cannot provide the above proof will not be entitled to free warranty.

Part name	Warranty period	Service
Watch(Not including watch strap)	Half a year limited Warranty	Delivery
Magnetic Charging Cable	Half a year limited Warranty	Delivery
Others(Including watch strap/gifts)	Not Under Warranty	/

Please check whether the following is ready before returning or replacing the goods or sending them to be repaired.

	Watch and accessories complete	Giftbox unopened	Invoice	Gifts
Returned purchase	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Returned purchase	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Service	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Warranty message

Warranty Card	
Model:	Client name:
Client contact no.:	Purchase date:
Sales contact no.:	
Client address:	Vendor(stamp):
Sales address:	

Attention:

- This warranty card is only applicable to the three-guarantee service of the host with the serial number listed above.
- Please keep this warranty certificate properly, and please show this certificate and invoice or receipt when enjoying the three guarantee service.
- This certificate needs to be stamped by the sales unit before it becomes effective.
- Man-made damage is not covered by the warranty.

The information is for reference only and is subject to change without notice!

客户姓名:	用户电话:
通讯地址:	
产品型号:	序列号(SN):
购机日期:	发票号码:
售机单位电话:	售机单位名称(加盖公章):
售机单位地址:	

合格证

型号: _____

销售员: _____

出厂日期: _____

注意:

- 本保修卡只适用于上述所列序列号的机器的三包服务。
- 请妥善保管此保修凭证, 享受三包服务时请出示此凭证及发票或收据。
- 此凭证需由销售单位盖章后才能生效。
- 人为损坏不属于三包范围。

资料仅供参考, 如有变更, 恕不另行通知!

注意事项:

- 测量时, 请您正常佩戴设备, 避开骨节, 不要太松, 避免采集器晃动影响测量结果。
- 测量过程中, 请保持身体静止, 将手臂放在桌面上或者膝盖上, 手臂、手指放松, 同时手指不要松开电极, 和电极接触力度适中, 避免过重按压或者过轻接触不充分。
- 如皮肤过于干燥, 请用少量水湿润手指再进行测量; 请保持设备表面干燥, 如有水渍擦干后再进行测量。
- 单次测量持续时长 30 秒。

环境保护

- 请勿将本设备及其附件作为普通的生活垃圾处理。
- 请遵守本设备及其附件处理的本地法令, 并支持回收行动。

部件名称	产品有害物质的名称和含量					
	有害物质					
手表主体	X	O	O	O	O	O
电池	X	O	O	O	O	O
表带	O	O	O	O	O	O
座充	X	O	O	O	O	O

本表格依据SJ/T 11364的规定编制

O 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求下。

X 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。且目前业界没有成熟的替代方案, 符合欧盟RoHS指令环保要求。

免责声明

- 本手册中的内容均“按照现状”提供, 除非适用法律要求, 本公司对本手册中的所有内容不提供任何明示或暗示的保证, 包括但不限于适销性或适用于某一特定目的的保证。
- 在适用法律允许的范围内, 本公司在任何情况下都不对使用本手册相关内容及本手册描述的产品而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿, 也不对任何利润、数据、商誉或预期节约的损失进行赔偿。
- 在相关法律允许的范围内, 在任何情况下本公司对您因使用本手册描述的产品而遭受的损失的最大责任 (除在涉及人身伤害的情况下根据适用的法律规定的损害赔偿倍外) 以您购买本产品所支付的价款为限。
- 本产品不涉及心率、心电、体温、血压、血氧等健康体征数据仅供参考, 不作为医疗诊断依据。

警告

防护等级

- 手表满足Ip67防护等级要求, 适用于洗手、淋雨等日常防水情况。
- 严禁用于潜水或游泳池或滨海浴场等水域的水上活动。
- 严禁用于热水淋浴、温泉、桑拿(蒸汽室)、跳水、潜水、面对高速水流的其他涉水活动及深水活动。
- 可防起居室、办公室、实验室、轻工工作室、仓储室等灰尘条件, 严禁在特殊的扬尘环境使用。

维护保养

- 请保持设备及其配件干燥, 请勿使用微波炉或吹风机等外部加热设备对其进行干燥处理。
- 请定期使用常温水清洗设备, 以免油污堆积、滋生细菌。
- 请勿在高温或受过低区域放置设备及其配件, 否则可能导致设备故障、着火或爆炸。
- 请勿使设备及其配件受到强烈冲击或震动, 以免损坏设备及其配件, 导致设备故障。
- 请避免在烈日暴晒、高温、潮湿以及明火附件的环境下使用设备。
- 请勿使用腐蚀性化学制品、清洁剂或强洗涤剂清洁设备或其配件。
- 请勿让儿童或动物咀嚼或吞吸设备。

售后保修

请与经销商或购买点联系售后服务, 非人为的质量问题半年保修。产品保修起始日期以发票或收据开具日期为准, 人为的质量问题包括但不限于以下情况:

- 擅自拆装、改装手表等造成的故障。
- 因丢失或误用导致的损坏, 例如主机进水, 外力震裂, 不慎跌落, 外壳刮痕、损坏等。
- 请务必提供具有购买日期并加盖公章的保修卡, 或者加盖公章的发票或收据, 不能提供上述证明者, 不予免费保修。

部件名称	保修期限	服务方式
手表主体 (不含表带)	半年(含)免费保修	用户送修/寄修
磁吸充电线	半年(含)免费保修	用户送修/寄修
其他(表带、配件、赠品等)	不予保修	无

退换货或送修前, 请核对如下“√”内容是否准备齐全。

	主机、配件齐全	包装完整	发票或者收据	赠品(若有)
退货	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
换货	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
维修	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

用户存根联

用户姓名:	用户电话:
通讯地址:	
产品型号:	序列号(SN):
购机日期:	发票号码:
售机单位电话:	售机单位名称(加盖公章):
售机单位地址:	

经销商存根联

用户姓名:	用户电话:
通讯地址:	
产品型号:	序列号(SN):
购机日期:	发票号码:
售机单位电话:	售机单位名称(加盖公章):
售机单位地址:	

合格证

型号: _____

销售员: _____

出厂日期: _____

注意:

- 本保修卡只适用于上述所列序列号的机器的三包服务。
- 请妥善保管此保修凭证, 享受三包服务时请出示此凭证及发票或收据。
- 此凭证需由销售单位盖章后才能生效。
- 人为损坏不属于三包范围。

资料仅供参考, 如有变更, 恕不另行通知!