


Wireless bone conduction headphones anti pollution mask

Product description

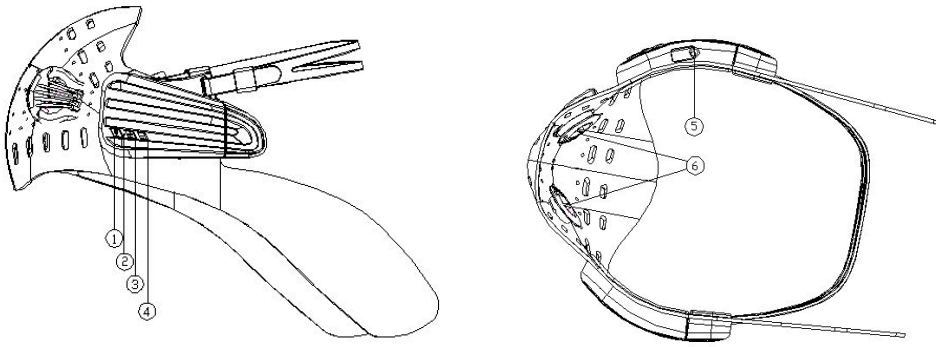

① Power key; ②Indicator light; ③Volume “+”; ④Volume“-”

⑤USB Charging port; ⑥One way exhalation valve

1. Accessories


Filter core; USB Charging cable; Instruction manual.

2. What's special?

Headset uses the bone conduction speaker so the sound can pass through the skull directly to the auditory center, which eliminates many steps of acoustic transmission. It can achieve clear sound reduction in a noisy environment, so as to release the ears and revert to the delicate tone function.

Sports masks use one-way breathing valve. When one exhales, the silica films will bounce and discharge exhaled gas. It neither becomes stuffy, nor foggy when wearing glasses. When inhales, the silica films will fall, enabling the air to be breathed in through a cotton filter which can effectively filter out exhaust from automobiles and particulates that has the minimum diameter of 3 microns (less than PH2.5). The filter is of KN95 filter level which is especially suitable for sports like cycling and jogging.

3. How to wear

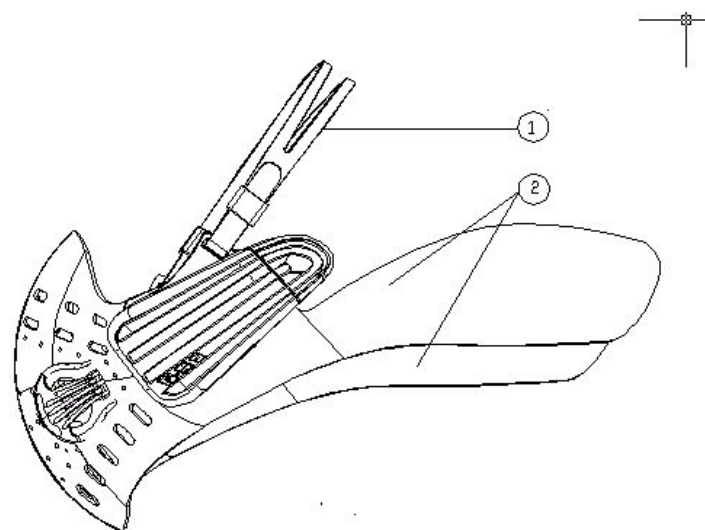

Hang 2 at the back of the neck and tighten up using Velcro so that both sides of the speakers stay close to the cheek bone near the ears. Wear 1 on the head and tighten the buckle above the ear.

4. How to operate

Press and hold the power button for two seconds until the blue light which indicates power is on. For first time matching, hold the power button until the indicator light flashes, indicating pairing mode. Turn on Bluetooth on mobile phones and search for the product. Click the pair option. After matching for the first time, the headset will automatically connect after pressing power button within 10 seconds. Click “+”

“-” to increase or decrease volume. Hold “+” to fast forward to the next song. Press the volume key “-” to go back to the previous song. Press the power key to pick up or hang up incoming calls. Click play or pause when playing music.

5. Storage and maintenance

Products should be stored under a cool and dry environment with 0~45°C temperature. This product is not entirely waterproof so do not use underwater. Check before charging if there is any liquid to prevent headset damage.


Please adjust the volume when using the headset to avoid hearing damage.

6. Specifications

**Wireless bone conduction
headphones anti pollution mask
Specification**

Project Name	Leat-out	
Basic Spec	Blue tooth IC	CSR8635
	Speaker Type	Bone conduction technology speaker, 1w dual speaker
	Battery	320mAh Polymer battery
	Mic	Anti - interference microphones, - 50DB
	Play time	7h
	Standby time	15days
	Effective range	15m
	Mono/Stereo	Stereo
	Blue tooth Version	4.0
	Weight	133g
	Bluetooth Class(I/II):	II
	BQB included(Y/N):	No
	Bluetooth Profile	a2dp/HFP,HSP,AVRCP,GAVDP,AVDTP
	Receiving	88dBm
	Impedance	32Ω
	Frequency range	20 - 20KHz
	FM	No
	Charging	MICUSB port and need 2h
TF card	No	
system language	No	

	Indicator light Status	Red light flashing rapidly: Lack of Power Red Light on: charging Blue Light on: full charged Blue and red lights flashing: Matching Blue light double flash slowly: fail to match, maybe the device is power off, or the distance of both is over 15m Blue light flash slowly: Matched/dialing/playing audio.	
Basic Operation	Operation	Headphone control	Prompt tone
	Answer call	Click the Power button	buzzing once
	Ending call	Click the Power button	buzzing once
	Reject call	Long press Power button for 1s	buzzing once
	Switch songs	long press “+” “-” button	NO
	Volume control	click the vol button “+”“-”	buzzing once

Basic Operation	Play/Pause phone	click Power	no
	Power on	long press Power	prompt tone/buzzing
	Power off	Long press	prompt tone/buzzing
	BT disconnecting		prompt tone/buzzing
	BT connected		prompt tone/buzzing
	Match again/manual matching	Shutdown state long press power	buzzing twice and prompt tone
	Low Power		prompt tone/buzzing
	Up/down	Click “+” “-“	No
Matching Method:	<p>1. Shutdown state long press power button 6seconds</p> <p>2. Search bluetooth device on your phone or other digital products, then choose Lead-out. If it is 1st time to match, it will automatically enter the match mode once the bt headphone turning on. And the LED lights will alternate flash between blue and red.</p> <p>Notes:</p> <p>If the connecting distance is beyond the bt headphone effective range(10m or 33feets), the headphone will disconnect with the device. Once in effective range again, they will connect again automatically. But if the disconnecting continues for long time(over 3mins), you maybe need manual matching</p>		
Picture			

C

3C

UL

CE

FCC

Rohs