


USER MANUAL

MW-01B (Version: 1.1)

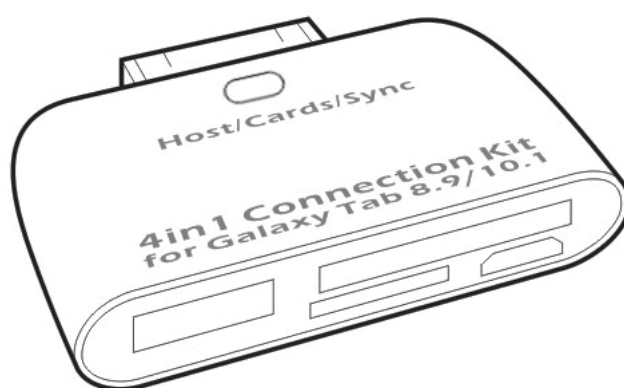

Statement

Thanks for Purchasing our product, Please read the manual carefully before use the product, all the information may be changed with out any notice. Our company reserves the right to change the information at any time.

Content

<u>1. Product introduction and accessories</u>	3
<u>1.1 Product introduction</u>	3
<u>1.2 Accessories list</u>	3
<u>2. Product specifications</u>	3
<u>2.1 Working Voltage</u>	3
<u>2.2 Quiescent current</u>	3
<u>2.3 Working current</u>	3

2.4	Product size.....	3
2.5	Product weight	3
3.	Appearance and interface	3
3.1	Appearance and interface description	3
3.2	LED indicator	4
4.	Function instuction.....	4
4.1	U disk and memory for use.....	4
4.2	Use of Digital camera	4
4.3	Hard disk and keyboard instructions.....	5
4.4	Synchronise with PC instruction:	5
4.5	Use of original adapter	5
5.	Product Notes.....	6

1.Product overview

1.1.Product introduction

MW-01B is a special multi-funcuntional cardreader for Samsung Galaxy Tab ,it can make Samsung Galaxy Tab read the pictures and videos and some other files like PDF,WORD and so on(need to be supported by suitable software) in U disk, SD card, Micro SD card, Mini SD card. And also can copy move and delete the files. sync with computer, it has intelligent MCU control, which can switch from USB and memory card, You can press the button switch to the synchronise mode and also can

charge. With the feature Slim, fashion, multi-functional design, it can be the best Samsung Galaxy Tab partner.

1.2 .Product Accessories.

- MW-01B 1PC
- Micro USB cable 1PC
- User Manual 1PC

1.3. Compatibility: SAMSUNG Galaxy Tab 8.9/10.1

2 .Product Specifications

2.1 Working voltage: 5V

2.2 Quiescent current: 10-30mA

2.3 Working current:40-100mA


2.4 Size: 54.3*39.3*11.8MM

2.5 Weight: 12g

3. Appearance and interface.

3.1. Appearance and interface description.

- AS pictures shows

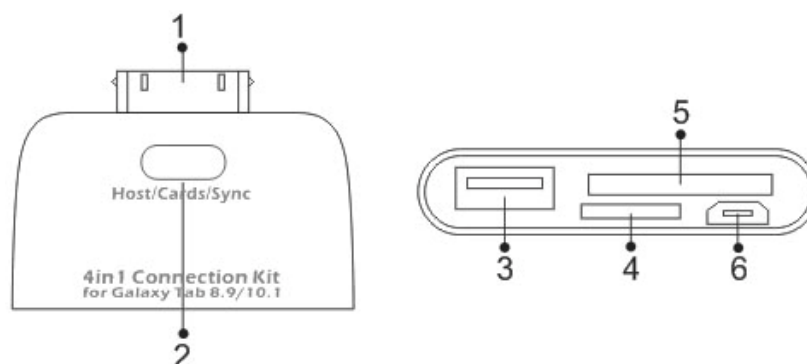

Number	Name	Function description
1	Micro USB Connector	Connect SAMSUNG Galaxy Tab 8.9/10.1
2	LED indicator	USB or memory card instruction
3	USB Host	Read U disk,Digital camera and Hard disk and keyboard.

4	Micro SD card slot	For GT 8.9/10.1 Read Micro SD Card
5	SD card slot	GT 8.9/10.1 read SD Card
6	Micro USB	Sync with PC And charged by original adapter.

3.2.LED indicator:


When green, USB HOST application. When red, SD/Micro SD application. When blue, Micro USB application.

4. Function instruction

4.1. U disk and memory for use

4.1.1. Use of U disk

When connect the product to Samsung Galaxy Tab. The power indicate LED green light will be on, and through Standard USB type A to U disk, Samsung Galaxy Tab will read the pictures and videos inside the memory automatically., you can choose the files you need import to Samsung Galaxy Tab, after the import, you can browse the files. (File search path: Myfiles/Storages/usb/sda)

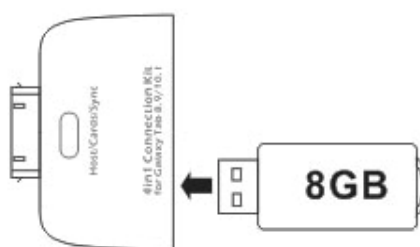


4.1.2. Use of memory card

As picture shows:When insert SD card or mini SD card into MW-01B. The green light off and red light shining(after read Memory card's content, red light bright). after A few seconds Samsung Galaxy Tab will read the picture s and videos in the memory card. Choose the files you want import to Samsung Galaxy Tab. When finished. You can browse the files. (File search path: Myfiles/Storages/USB/sda)



4.2 Use of Digital camera


When connect the product to Samsung Galaxy Tab. The power indicate LED green light will be on, insert the cable of cameras into MW-01B, then turn on the cameras. After seconds ,Samsung Galaxy Tab will read the pictures and videos automatically, you can choose the files you need import to Samsung Galaxy Tab, after the import, you can browse the files. (File search path: Myfiles/Storages/usb/sda).

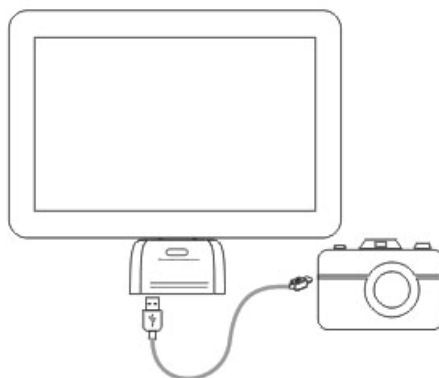

4.3 Hard disk and keyboard instructions


Connect the hard disk cable or keyboard to MW-01B USB interface. GT 8.9/10. Will Display the mouse or keyboard arrow indicator, You can have the mouse or keyboard input operations by click GT 8.9/10.(supports the keyboard and mouse will change according to the ANDROID system version different. therefore, some

mouse or keyboard can't use!) .

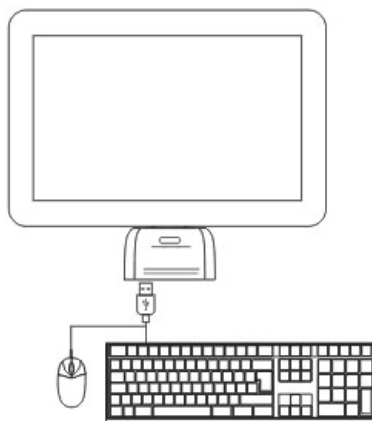

4.4 Sync with PC instructions


Connect our product to Samsung Galaxy Tab, and connect the PC with our standard micro USB cable, green light off blue light on. After seconds, the PC will show find the "GT-P7510", (and show on the right corner status of the PC). Open icon you can copy move or delete the files in SAMSUNG Galaxy Tab. **Sync files should install the GT 8.9/10.1 driver .And have corresponding Settings in GT 8.9/10.** Setting ways: Click ✓ in (Settings/Applications/Development/USB debugging)

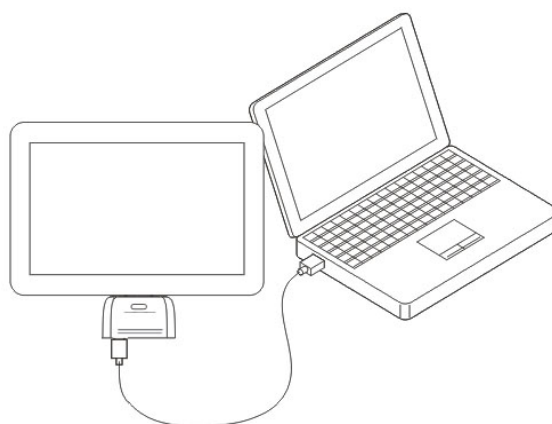

4.5 Use of original charge instructions

connect our product to Samsung Galaxy Tab, Then connect the adapter with our standard

micro USB cable, the LED indicator shows blue light on. And shows 'charging' icon at the bottom of right corner Of SAMSUNG Galaxy Tab. Charging current:1000-1300MA.
(This product can't support any other USB Power adapter)

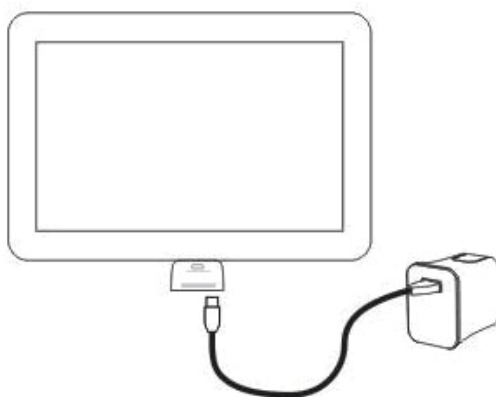

***Notes:**This product interface priority: Micro USB->SD, Micro SD>USB Host, AS: Memory card priority in use of MW-01B use. That means insert U disk and memory card. MW-01B can read memory card only and just read the first insert card. U disk function and memory card auto-switch. If you want to read U disk or portable hard disk, please no memory card insert! When Sync with PC or Use of original charge, Both Micro USB and memory card can't read and work.

This product is high power consumption equipment, if not use this product, please remove the equipment.

5. Safety

5.1 Do not place the product in (fuel, needle) or any liquid (water, beverage) and infiltrate into product, leading the product can't normally use.

5.2 Do not place or use the product in 1) damp environment. such as bathroom. 2) Dusty place. 3) corrosion object.

5.3. Please keep the product in plastic bag when it's a long time not use it. To prevent the dirt piles up, and sockets oxidation lead to poor contact socket.

●Don't repair the product and replace parts yourself. Please return the Maintenance back to your supplier(Unless it have special instruction in this user manual)